



---

# ***Operation & Safety Manual***

*Original Instructions -  
Keep this manual with the machine at all times.*

## ***Model 600S HC3, 660SJ HC3***

**PVC 2207**

**31220613**

***July 5, 2022 - Rev A***

**ANSI CE UK CA  EAC  
AS/NZS MOL70 GB**

***JLG***  
An Oshkosh Corporation Company

---

## **WARNING**

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

# FOREWORD

The Mobile Elevating Work Platform (MEWP) models covered in this manual are designed and tested to meet or exceed various compliance standards. Please refer to the manufacturer's nameplate affixed to the subject MEWP for specific standard compliance information.

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

Refer to [www.JLG.com](http://www.JLG.com) for Warranty, Product Registration, and other machine-related documentation.

**SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS**



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

**⚠ DANGER**

Indicates an imminently hazardous situation. If not avoided, will result in serious injury or death. This decal will have a red background.

**⚠ WARNING**

Indicates a potentially hazardous situation. If not avoided, could result in serious injury or death. This decal will have an orange background.

**⚠ CAUTION**

Indicates a potentially hazardous situation. If not avoided, may result in minor or moderate injury. It may also alert against unsafe practices. This decal will have a yellow background.

**NOTICE**

Indicates information or a company policy that relates directly or indirectly to the safety of personnel or protection of property.

---

## **WARNING**

This product must comply with all safety related bulletins. Contact JLG Industries, Inc. or the local authorized JLG representative for information regarding safety related bulletins which may have been issued for this product.

## **NOTICE**

JLG Industries, Inc. sends safety related bulletins to the owner of record of this machine. Contact JLG Industries, Inc. to ensure that the current owner records are updated and accurate.

## **NOTICE**

JLG Industries, Inc. must be notified immediately in all instances where JLG products have been involved in an accident involving bodily injury or death or when substantial damage has occurred to personal property or the JLG product.

## Foreword

---

### **For:**

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- Questions Regarding Product Modifications

### **Contact:**

Product Safety and Reliability Department

JLG Industries, Inc.

13224 Fountainhead Plaza

Hagerstown, MD 21742

USA

or Visit [www.jlg.com](http://www.jlg.com) to find your local JLG office.

### **In USA:**

Toll Free: 877-JLG-SAFE (877-554-7233)

### **Outside USA:**

Phone: 240-420-2661

Fax: 301-745-3713

E-mail: [ProductSafety@JLG.com](mailto:ProductSafety@JLG.com)

## REVISION LOG

DATE	REVISION	DESCRIPTION
July 5, 2022	A	Original Issue

### Other Publications Available

Publication	Publication Number
Service & Maintenance Manual	31220614
Illustrated Parts Manual	31220615

**This Page is intentionally left blank**

# SECTION CONTENTS

Section	Subject	Page
<b>FOREWORD</b>		<b>3</b>
<b>REVISION LOG</b>		<b>7</b>
<b>SECTION 1</b>		
<b>SAFETY PRECAUTIONS</b>		<b>13</b>
1.1	General	13
1.2	Pre-Operation	13
1.3	Operation	15
1.4	Towing, Lifting, and Hauling	21
1.5	Maintenance	21
<b>SECTION 2</b>		
<b>USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION</b>		<b>26</b>
2.1	Personnel Training	26
2.2	Preparation, Inspection, and Maintenance	27
2.3	Machine Components	29
2.4	Pre-Start Inspection	30
2.5	Walk-Around Inspection	32
2.6	Function Check	34
2.7	SkyGuard® Function Test	35
<b>SECTION 3</b>		
<b>MACHINE CONTROLS AND INDICATORS</b>		<b>38</b>
3.1	General	38
3.2	Controls and Indicators	38
3.3	600S/660SJ Ground Control Station	39
3.4	Ground Control Indicator Panel	48
3.5	Ground Control Console Display Gauge	50
3.6	Platform Control Station	52
3.7	Platform Control Indicator Panel	56

**SECTION 4  
MACHINE OPERATION..... 59**

4.1	General.....	59
4.2	Operating Characteristics and Limitations.....	59
4.3	Stability .....	60
4.4	Engine Operation.....	61
4.5	Air Shutoff Valve (ASOV) (If Equipped).....	64
4.6	Fuel Shutoff System (Reserve) .....	65
4.7	Diesel Particulate Filter (If Equipped).....	65
4.8	Traveling (Driving).....	74
4.9	Traveling (Grade/Side Slope).....	75
4.10	Steering.....	76
4.11	Platform .....	77
4.12	Boom .....	77
4.13	Shut Down and Park.....	79
4.14	Battery Quick-Disconnect (If Equipped) .....	79
4.15	Function Speed Control .....	80
4.16	USB Charging Port.....	80
4.17	Machine Safety System Override (MSSO) (If Equipped) .....	80
4.18	SkyGuard Operation .....	81
4.19	Oscillating Axle Lockout Test (If Equipped) .....	84
4.20	Towing (If Equipped) .....	84
4.21	Auxiliary Power.....	87
4.22	Dual Fuel System (Gas Engine Only).....	89
4.23	Lifting and Tie Down .....	89
4.24	600S/660SJ Lifting Chart .....	91
4.25	Safety Decals And Locations .....	91

**SECTION 5  
EMERGENCY PROCEDURES ..... 102**

5.1	General.....	102
5.2	Incident Notification.....	102
5.3	Emergency Operation.....	103
5.4	Emergency Towing Procedures .....	103
5.5	Machine Safety System Override (MSSO) (If Equipped) .....	104

**SECTION 6  
ACCESSORIES..... 105**

6.1	Available Accessories and Relationship Table .....	105
-----	--	-----

6.2	Bolt-On External Fall Arrest.....	108
6.3	Fabric Mesh to Mid or Top Rail.....	110
6.4	Fall Arrest Platform.....	110
6.5	Nite Bright® .....	111
6.6	Pipe Racks.....	111
6.7	Platform Mesh to Mid or Top Rail .....	113
6.8	Platform Top Rail Extension .....	114
6.9	Platform Work Lights .....	115
6.10	SkyGlazier® .....	116
6.11	SkyPower® 7.5 kW and Generator 4 kW .....	118
6.12	SkySense® .....	119
6.13	SkySense® Platform Bumper Padding .....	124
6.14	SkyWelder® .....	125
6.15	Soft Touch .....	128

## SECTION 7

### GENERAL SPECIFICATIONS AND OPERATOR

#### MAINTENANCE ..... 129

7.1	General.....	129
7.2	Serial Number Location.....	129
7.3	Operating Specifications .....	129
7.4	Hydraulic Oil Specifications .....	135
7.5	Engine Oil Operating Temperature Specifications .....	138
7.6	Operator Maintenance and Lubrication Diagrams .....	140
7.7	Operator Maintenance.....	141
7.8	Tires and Wheels.....	149
7.9	Oscillating Axle Lockout Test (If Equipped) .....	151
7.10	Propane Fuel System Pressure Relief.....	152
7.11	Supplemental Information Only Applicable to CE/UKCA Machines .....	153
7.12	EC Declaration of Conformity.....	154
7.13	UKCA Declaration of Conformity .....	155

**This Page is intentionally left blank**

# SECTION 1

## Safety Precautions

---

### 1.1 GENERAL

---

This section outlines the necessary precautions for proper and safe machine usage and maintenance. It is mandatory that a daily routine is established based on the content of this manual to promote proper machine usage. A maintenance program, using the information provided in this manual and the Service & Maintenance Manual, must also be established by a qualified person and must be followed to ensure that the machine is safe to operate.

The owner/user/operator/lessor/lessee of the machine must not accept operating responsibility until this manual has been read, training is accomplished, and operation of the machine has been completed under the supervision of an experienced and qualified operator.

This section contains the responsibilities of the owner, user, operator, lessor, and lessee concerning safety, training, inspection, maintenance, application, and operation. If there are any questions with regard to safety, training, inspection, maintenance, application, and operation, please contact JLG Industries, Inc. ("JLG").

## **⚠ WARNING**


Failure to comply with the safety precautions listed in this manual could result in machine damage, property damage, personal injury or death.

### 1.2 PRE-OPERATION

---

#### 1.2.1 Operator Training and Knowledge

- Read, understand, and study the Operation and Safety Manual in its entirety before operating the machine. For clarification, questions, or additional information regarding any portions of this manual, contact JLG Industries, Inc.

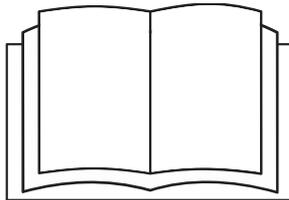

- Only personnel who have received proper training regarding the inspection, application and operation of MEWPs (including recognizing and avoiding hazards associated with their operation) shall be authorized to operate a MEWP.

## Safety Precautions

---

- Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation.
- Read, understand, and obey all DANGERS, WARNINGS, CAUTIONS, and operating instructions on the machine and in this manual.
- Ensure that the machine is to be used in a manner which is within the scope of its intended application as determined by JLG.
- All operating personnel must have a thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground and emergency descent controls.
- Read, understand, and obey all applicable employer, local, and governmental regulations as they pertain to your utilization and application of the machine.

### 1.2.2 Workplace Inspection

- Precautions to avoid all hazards in the work area must be taken by the user before and during operation of the machine.
- Do not operate or raise the platform from a position on trucks, trailers, railway cars, floating vessels, scaffolds or other equipment unless the application is approved in writing by JLG.
- Before operation, check work area for overhead hazards such as electric lines, bridge cranes, and other potential overhead obstructions.
- Check operating surfaces for holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards.
- Check the work area for hazardous locations. Do not operate the machine in hazardous environments unless approved for that purpose by JLG.
- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel. Do not travel on unsupported surfaces.

### 1.2.3 Machine Inspection

- Do not operate this machine until the inspections and functional checks as specified in the User Responsibilities, Machine Preparation, and Inspection Section of this manual have been performed.
- Do not operate this machine until it has been serviced and maintained according to the maintenance and inspection requirements as specified in the machine's Service Manual.
- Ensure all safety devices are operating properly. Modification of these devices is a safety violation.

# WARNING

Modification or alteration of a MEWP shall be made only with prior written permission from the manufacturer.

- Do not operate any machine on which the safety or instruction placards or decals are missing or illegible.
- Check the machine for modifications to original components. Ensure that any modifications have been approved by JLG.
- Avoid accumulation of debris on platform floor. Keep mud, oil, grease, and other slippery substances from footwear and platform floor.

## 1.3 OPERATION

### 1.3.1 General

- Machine operation requires your full attention. Bring the machine to a full stop before using any device, i.e. cell phones, two-way radios, etc. that will distract your attention from safely operating the machine.
- Do not use the machine for any purpose other than positioning personnel, their tools, and equipment.
- Before operation, the user must be familiar with the machine capabilities and operating characteristics of all functions.
- Never operate a malfunctioning machine. If a malfunction occurs, shut down the machine. Remove the unit from service and notify the proper authorities.
- Do not remove, modify, or disable any safety devices.
- Never slam a control switch or lever through neutral to an opposite direction. Always return switch to neutral and stop before moving the switch to the next function. Operate controls with slow and even pressure.
- Do not allow personnel to tamper with or operate the machine from the ground with personnel in the platform, except in an emergency.
- Do not carry materials directly on platform railing unless approved by JLG.
- When two or more persons are in the platform, the operator shall be responsible for all machine operations.
- Always ensure that power tools are properly stowed and never left hanging by their cord from the platform work area.
- When driving, always position boom over rear axle in line with the direction of travel. Remember, if boom is over the front axle, steer and drive functions will be reversed.


## Safety Precautions

---

- Do not assist a stuck or disabled machine by pushing or pulling except by pulling at the chassis tie-down lugs.
- Fully lower platform and shut off all power before leaving machine.
- Remove all rings, watches, and jewelry when operating machine. Do not wear loose fitting clothing or long hair unrestrained which may become caught or entangled in equipment.
- Persons under the influence of drugs or alcohol or who are subject to seizures, dizziness or loss of physical control must not operate this machine.
- Hydraulic cylinders are subject to thermal expansion and contraction. This may result in changes to the platform position while the machine is stationary. Factors affecting thermal movement can include the length of time the machine will remain stationary, hydraulic oil temperature, ambient air temperature, and platform position.

### 1.3.2 Trip and Fall Hazards

- Before operating the machine, ensure all gates are closed and fastened in their proper position.

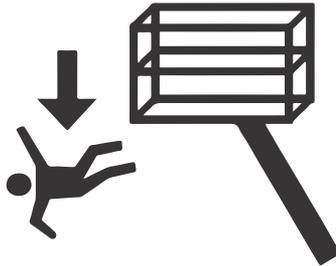

- During operation, occupants in the platform must wear a full body harness with a lanyard attached to an authorized lanyard anchorage point. Attach only one (1) lanyard per lanyard anchorage point.




- Enter and exit only through gate area. Use extreme caution when entering or leaving platform. Ensure that the platform assembly is fully lowered. Face the platform when entering or leaving the platform. Always maintain “three point contact” with the machine, using two hands and one foot or two feet and one hand at all times during entry and exit.

- Keep both feet firmly positioned on the platform floor at all times. Never position ladders, boxes, steps, planks, or similar items on unit to provide additional reach for any purpose.
- Keep oil, mud, and slippery substances cleaned from footwear and the platform floor.

### 1.3.3 Electrocutation Hazards

- This machine is not insulated and does not provide protection from contact with or proximity to electrical current.
- It is not recommended to use the machine during lightning. To prevent injury or machine damage if lightning occurs during operation, lower the boom and shut down the machine in a safe and secure location.

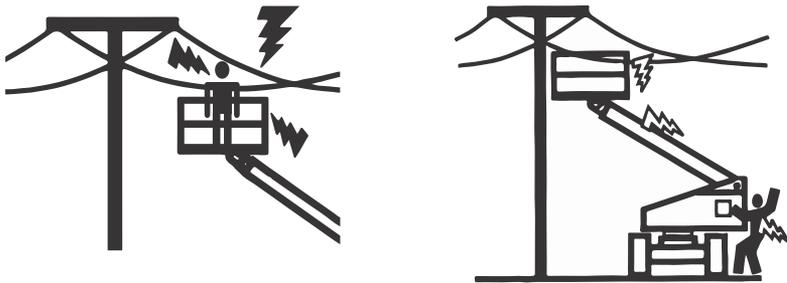

- Maintain distance from electrical lines, apparatus, or any energized (exposed or insulated) parts according to the Minimum Approach Distance (MAD) as shown in [Table — Minimum Approach Distances \(MAD\), page 17](#).
- Allow for machine movement and electrical line swaying.

**Table 1. Minimum Approach Distances (MAD)**

Voltage Range (Phase to Phase)	Minimum Approach Distance in Feet (Meters)
0 to 50 KV	10 (3)
Over 50K V to 200 KV	15 (5)
Over 200 KV to 350 KV	20 (6)
Over 350 KV to 500 KV	25 (8)
Over 500 KV to 750 KV	35 (11)
Over 750 KV to 1000 KV	45 (14)
<p><b>Note:</b> This requirement shall apply except where employer, local or governmental regulations are more stringent.</p>	

## Safety Precautions


- Maintain a clearance of at least 10 ft (3m) between any part of the machine and its occupants, their tools, and their equipment from any electrical line or apparatus carrying up to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less.
- The MAD may be reduced if insulating barriers are installed to prevent contact, and the barriers are rated for the voltage of the line being guarded. These barriers shall not be part of (or attached to) the machine.
- The MAD shall be reduced to a distance within the designed working dimensions of the insulating barrier. This determination shall be made by a qualified person with respect to electrical transmission and distribution in accordance with the employer, local, or governmental requirements for work practices near energized equipment.

# **⚠ DANGER**

Do not maneuver machine or personnel inside prohibited zone (MAD). Assume all electrical parts and wiring are energized unless known otherwise.

### 1.3.4 Tipping Hazards

- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel. Do not travel on unsupported surfaces.
- The user must be familiar with the operating surface before driving. Do not exceed the allowable side slope and grade while driving.

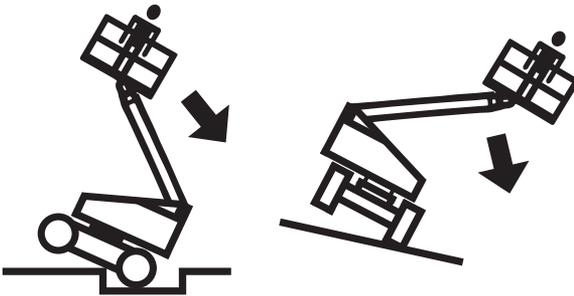

- Do not elevate platform or drive with platform elevated while on or near a sloping, uneven, or soft surface.
- Ensure machine is positioned on a smooth, firm surface within the limits of the maximum operating slope before elevating platform or driving with the platform in the elevated position.
- Before driving on floors, bridges, trucks, and other surfaces, check allowable capacity of the surfaces.
- Never exceed the maximum platform capacity as specified on the platform. Keep all loads within the confines of the platform, unless authorized by JLG.

- Keep the chassis of the machine a minimum of 2 ft (0.6m) from holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards at the ground level.
- Do not push or pull any object with the boom.
- Never attempt to use the machine as a crane. Do not tie-off machine to any adjacent structure. Never attach wire, cable, or any similar items to platform.
- If boom assembly or platform is in a position that one or more wheels are off the ground, all persons must be removed before attempting to stabilize the machine. Use cranes, forklift trucks, or other appropriate equipment to stabilize machine.
- Do not operate the machine when wind conditions, including gusts, exceed 28 mph (12.5 m/s). Refer to [Table — Beaufort Scale \(For Reference Only\)](#), page 20. Factors affecting wind speed are; platform elevation, surrounding structures, local weather events, and approaching storms.
- Wind speed can be significantly greater at height than at ground level.
- Wind speed can change rapidly. Always consider approaching weather events, the time required to lower the platform, and methods to monitor current and potential wind conditions.
- Do not cover or increase surface area of the platform or the load. Do not carry large surface area items in the platform when operating outdoors. The addition of such items increases the exposed wind area of the machine. Increased areas exposed to wind will decrease stability.
- Do not increase the platform size with unauthorized modifications or attachments.

### **WARNING**


Do not operate the machine when wind conditions exceed specifications shown in the General Specifications section of this manual or as shown on the capacity placard on the platform billboard.

**Table 2. Beaufort Scale (For Reference Only)**

Beaufort Number	Wind Speed		Description	Land Conditions
	mph	m/s		
0	0	0-0.2	Calm	Calm. Smoke rises vertically
1	1-3	0.3-1.5	Light air	Wind motion visible in smoke
2	4-7	1.6-3.3	Light breeze	Wind felt on exposed skin. Leaves rustle
3	8-12	3.4-5.4	Gentle breeze	Leaves and smaller twigs in constant motion
4	13-18	5.5-7.9	Moderate breeze	Dust and loose paper raised. Small branches begin to move.
5	19-24	8.0-10.7	Fresh breeze	Smaller trees sway.
6	25-31	10.8-13.8	Strong breeze	Large branches in motion. Flags waving near horizontal. Umbrella use becomes difficult.
7	32-38	13.9-17.1	Near Gale/Moderate Gale	Whole trees in motion. Effort needed to walk against the wind.
8	39-46	17.2-20.7	Fresh Gale	Twigs broken from trees. Cars veer on road.
9	47-54	20.8-24.4	Strong Gale	Light structure damage.

**1.3.5 Crushing and Collision Hazards**

- Approved head gear must be worn by all operating and ground personnel.
- Watch for obstructions around machine and overhead when driving. Check clearances above, on sides, and bottom of platform during all operations.

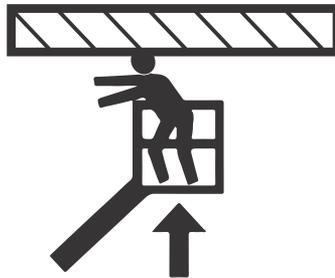

- During operation, keep all body parts inside platform railing.
- Use the boom functions, not the drive function, to position the platform close to obstacles.
- Always post a lookout when driving in areas where vision is obstructed.
- Keep non-operating personnel at least 6 ft (1.8 m) away from machine during all operations.

- Under all travel conditions, the operator must limit travel speed according to conditions of ground surface, congestion, visibility, slope, location of personnel, and other factors.
- Be aware of stopping distances in all drive speeds. When driving in high speed, reduce drive speed before stopping. Travel grades in low speed only.
- Do not use high speed drive in restricted or close quarters or when driving in reverse.
- Exercise extreme caution at all times to prevent obstacles from striking or interfering with operating controls and persons in the platform.
- Ensure that operators of other overhead and floor level machines are aware of the MEWP's presence. Disconnect power to overhead cranes. Barricade floor area if necessary.
- Do not operate over ground personnel. Warn personnel not to work, stand, or walk under a raised boom or platform. Position barricades on floor if necessary.

### **1.4 TOWING, LIFTING, AND HAULING**

---

- Never allow personnel in platform while towing, lifting, or hauling.
- This machine should not be towed, except in the event of emergency, malfunction, power failure, or loading/unloading. Refer to the Emergency Procedures section of this manual for emergency towing procedures.
- Ensure boom is in the stowed position and, if equipped, the turntable locked prior to towing, lifting or hauling. The platform must be completely empty of tools.
- When lifting machine, lift only at designated areas of the machine. Lift the unit with equipment of adequate capacity.
- Refer to the Machine Operation section of this manual for lifting information.

### **1.5 MAINTENANCE**

---

This sub-section contains general safety precautions which must be observed during maintenance of this machine. Additional precautions to be observed during machine maintenance are inserted at the appropriate points in this manual and in the Service and Maintenance Manual. It is of utmost importance that maintenance personnel pay strict attention to these precautions to avoid possible injury to personnel or damage to the machine or property. A maintenance program must be established by a qualified person and must be followed to ensure that the machine is safe.

#### **1.5.1 Maintenance Hazards**

- Shut off power to all controls and ensure that all moving parts are secured from inadvertent motion prior to performing any adjustments or repairs.

## Safety Precautions

---

- Never work under an elevated platform until it has been fully lowered to the full down position, if possible, or otherwise supported and restrained from movement with appropriate safety props, blocking, or overhead supports.
- DO NOT attempt to repair or tighten any hydraulic hoses or fittings while the machine is powered on or when the hydraulic system is under pressure.
- Always relieve hydraulic pressure from all hydraulic circuits before loosening or removing hydraulic components.
- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.



- Use only replacement parts or components that are approved by JLG. To be considered approved, replacement parts or components must be identical or equivalent to original parts or components.
- Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. Ensure adequate support is provided when raising components of the machine.
- Do not use machine as a ground for welding.
- When performing welding or metal cutting operations, precautions must be taken to protect the chassis from direct exposure to weld and metal cutting spatter.
- Do not refuel combustion engine-powered machines with the engine running.
- Use only approved non-flammable cleaning solvents.
- Do not replace items critical to stability, such as batteries or solid tires, with items of different weight or specification. Do not modify the MEWP in any way to affect stability.
- Refer to the Service & Maintenance Manual for the weights of critical stability items.

## **⚠ WARNING**

Modification or alteration of a MEWP shall be made only with prior written permission from the manufacturer.

### **1.5.2 Battery Hazards**

- Always disconnect batteries when servicing electrical components or when performing welding on the machine.
- Do not allow smoking, open flame, or sparks near battery during charging or servicing.
- Do not contact tools or other metal objects across the battery terminals.
- Always wear hand, eye, and face protection when servicing batteries. Ensure that battery acid does not come in contact with skin or clothing.

## **CAUTION**

Battery fluid is highly corrosive. Avoid contact with skin and clothing at all times. Immediately rinse any contacted area with clean water and seek medical attention.

- Charge batteries only in a well ventilated area.
- Avoid overfilling the battery fluid level. Add distilled water to batteries only after the batteries are fully charged.

**This Page is intentionally left blank**

**This Page is intentionally left blank**

## SECTION 2

# User Responsibilities, Machine Preparation, and Inspection

---

### 2.1 PERSONNEL TRAINING

---

The Mobile Elevating Work Platform (MEWP) is a personnel handling device, so it is necessary that it be operated and maintained only by trained personnel.

#### 2.1.1 Operator Training

Operator training must cover:

1. Reading and understanding the Operation and Safety Manual.
2. Thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground, and emergency descent controls.
3. Control labels, instructions, and warnings on the machine.
4. Applicable regulations, standards, and safety rules.
5. Use of approved fall protection equipment.
6. Enough knowledge of the mechanical operation of the machine to recognize a malfunction or potential malfunction.
7. The safest means to operate the machine where overhead obstructions, other moving equipment, and obstacles, depressions, holes, and drop-offs exist.
8. Means to avoid the hazards of unprotected electrical conductors.
9. Selection of the appropriate MEWP and available options for the work to be performed considering specific job requirements, with involvement from the MEWP owner, user, and/ or supervisor.
10. The responsibility of the operator to ensure all platform occupants have a basic level of knowledge to work safely on the MEWP, and to inform them of applicable regulations, standards, and safety rules.
11. The requirement for familiarization in addition to training.

#### 2.1.2 Training Supervision

Training must be delivered by a qualified person in an open area free of hazards until the trainee has demonstrated the ability to safely control and operate the machine.

#### 2.1.3 Operator Responsibility

The operator must be instructed that they have the responsibility and authority to shut down the machine in case of a malfunction or other unsafe condition of either the machine or the job site.

### 2.1.4 Machine Familiarization

**Note:** Responsibilities for familiarization may vary by region.

Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation. The user shall ensure that after familiarization, the operator operates the MEWP for a sufficient period of time to achieve proficiency. When authorized by the user, self-familiarization can be achieved, if authorized, by a properly trained operator reading, understanding and following the manufacturer's operator's manual.

Prior to user's authorization of an operator to use a specific model of MEWP, the user shall ensure the operator is familiarized on the following:

1. Location of the manual storage compartment and the requirement to ensure the required manual(s) are present on the MEWP;
2. Purpose and function of the machine controls and indicators at the platform and ground control stations;
3. Purpose, location, and function of the emergency controls;
4. Operating characteristics and limitations;
5. Features and devices;
6. Accessories and optional equipment.

## 2.2 PREPARATION, INSPECTION, AND MAINTENANCE

---

The following table covers machine inspections and maintenance required by JLG Industries, Inc. Consult local regulations for further requirements for MEWPs. The frequency of inspections and maintenance must be increased as necessary when the machine is used in a harsh or hostile environment, if the machine is used with increased frequency, or if the machine is used in a severe manner.


**Table 3. Inspection and Maintenance Table**

<b>Type</b>	<b>Frequency</b>	<b>Primary Responsibility</b>	<b>Service Qualification</b>	<b>Reference</b>
Pre-Start Inspection	Before using each day; or whenever there is an Operator change	User or Operator	User or Operator	Operation & Safety Manual
Pre-Delivery Inspection (See Note)	Before each sale, lease, or rental delivery	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Maintenance Manual and applicable JLG inspection form
Frequent Inspection (See Note)	In service for 3 months or 150 hours, whichever comes first or Out of service for a period of more than 3 months or Purchased used	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Maintenance Manual and applicable JLG inspection form
Annual Machine Inspection (See Note)	Annually, no later than 13 months from the date of prior inspection	Owner, Dealer, or User	Factory Trained Service Technician (Recommended)	Service & Maintenance Manual and applicable JLG inspection form
Preventive Maintenance	At intervals as specified in the Service & Maintenance Manual	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Maintenance Manual
<b>Note:</b> Inspection forms are available from JLG. Use the Service & Maintenance Manual to perform inspections.				

## ***NOTICE***


JLG Industries, Inc. recognizes a factory trained service technician as a person who has successfully completed the JLG Service Training School for the specified JLG product model.

## 2.3 MACHINE COMPONENTS

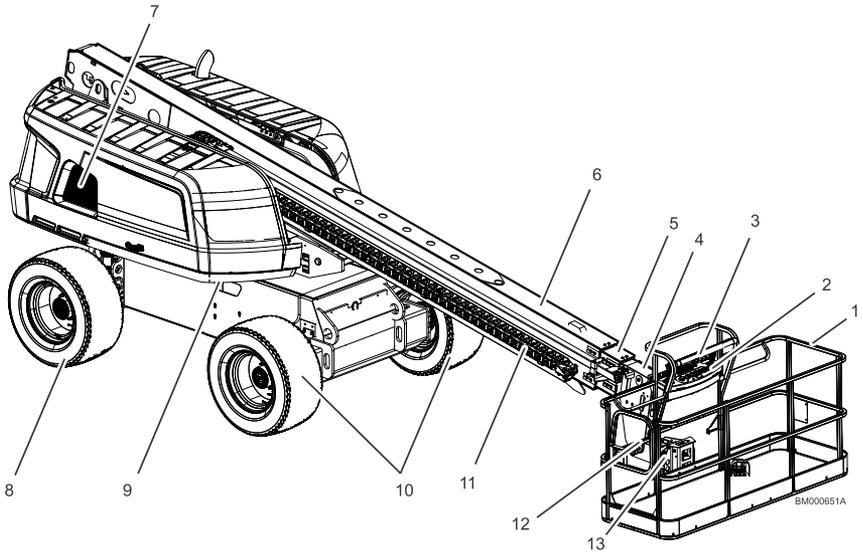

**Figure 1. Basic Nomenclature — 600S**

- |                             |                                |
|-----------------------------|--------------------------------|
| 1. Platform                 | 8. Front Drive/Steer Wheels    |
| 2. Platform Control Station | 9. Turntable                   |
| 3. SkyGuard                 | 10. Rear Drive Wheels          |
| 4. Fly Boom                 | 11. Powertrack                 |
| 5. Mid Boom                 | 12. Platform Leveling Cylinder |
| 6. Base Boom                | 13. Rotator                    |
| 7. Ground Control Station   |                                |

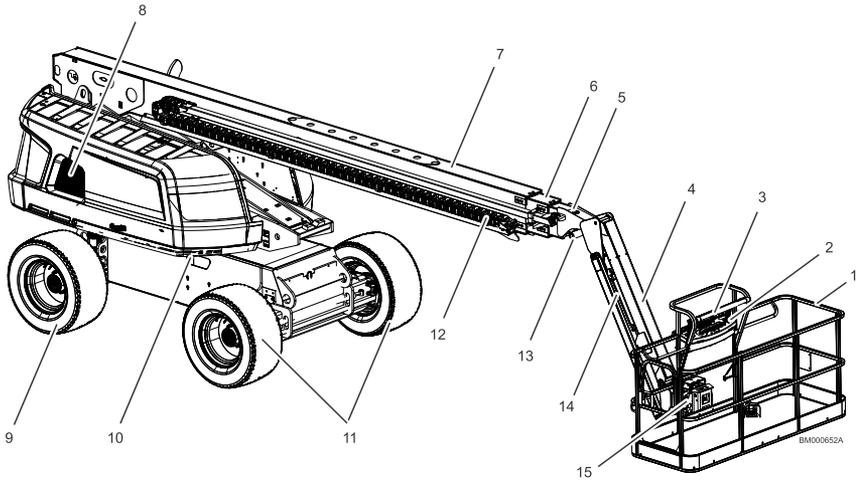

**Figure 2. Basic Nomenclature — 660SJ**

- |                             |                                |
|-----------------------------|--------------------------------|
| 1. Platform                 | 9. Front Drive/Steer Wheels    |
| 2. Platform Control Station | 10. Turntable                  |
| 3. SkyGuard                 | 11. Rear Drive Wheels          |
| 4. Jib                      | 12. Powertrack                 |
| 5. Fly Boom                 | 13. Platform Leveling Cylinder |
| 6. Mid Boom                 | 14. Jib Lift Cylinder          |
| 7. Base Boom                | 15. Rotator                    |
| 8. Ground Control Station   |                                |


## 2.4 PRE-START INSPECTION

---


The Pre-Start Inspection should include each of the following:

1. **Cleanliness** — Check all surfaces for leakage (oil, fuel, or battery fluid) or foreign objects. Report any leakage to the proper maintenance personnel.

2. **Structure** — Inspect the machine structure for dents, damage, weld or parent metal cracks or other discrepancies.

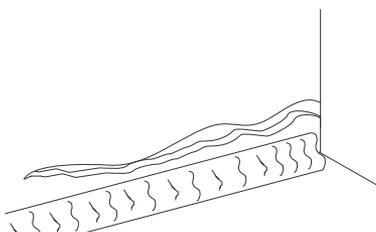

**Figure 3. Parent Metal Crack**

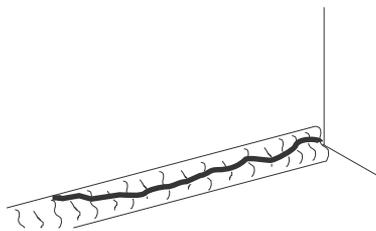

**Figure 4. Weld Crack**

3. **Decals and Placards** — Check all for cleanliness and legibility. Make sure none of the decals and placards are missing. Make sure all illegible decals and placards are cleaned or replaced.
4. **Operation and Safety Manuals** — Make sure a copy of the Operation & Safety Manual, AEM Safety Manual (ANSI markets only), and ANSI Manual of Responsibilities (ANSI markets only) are enclosed in the weather resistant storage container.
5. **Walk-Around Inspection** — Perform as instructed.
6. **Battery** — Charge as required.
7. **Fuel (Combustion Engine Powered Machines)** — Add the proper fuel as necessary.
8. **Engine Oil Supply** — Ensure the engine oil level is at the Full mark on the dipstick and the filler cap is secure.
9. **Hydraulic Oil** — Check the hydraulic oil level. Ensure hydraulic oil is added as required.
10. **Accessories/Attachments** — Refer to the Accessories section in this manual or accessory installed upon the machine for specific inspection, operation, and maintenance instructions.
11. **Function Check** — Once the Walk-Around Inspection is complete, perform a functional check of all systems in an area free of overhead and ground level obstructions. Refer to [Section — Machine Operation](#) for more specific instructions.
12. **Platform Gate** — Keep gate and surrounding area clean and unobstructed. Verify the gate closes properly and is not bent or damaged. Keep gate closed at all times except when entering/exiting the platform and loading/unloading materials.
13. **Lanyard Attach Points** — During operation, occupants in the platform must wear a full body harness with a lanyard attached to an authorized lanyard anchorage point. Attach only one (1) lanyard per lanyard anchorage point.

# ⚠ WARNING

If the machine does not operate properly, turn off the machine immediately! Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

## 2.5 WALK-AROUND INSPECTION

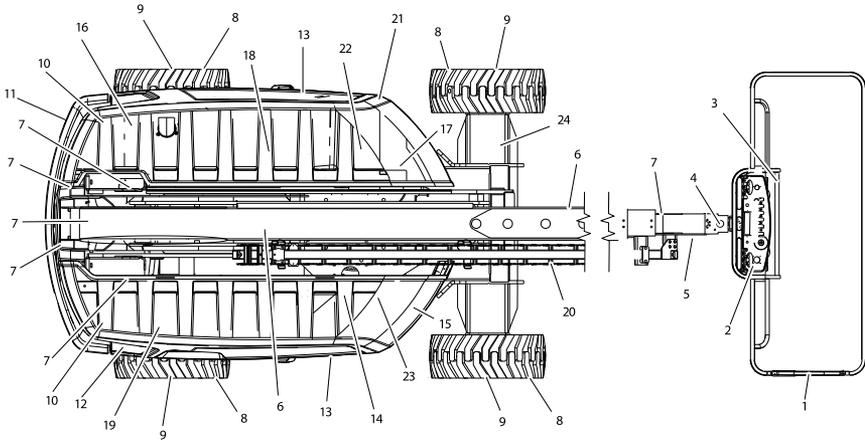


Figure 5. Daily Walk-Around Inspection Diagram

### 2.5.1 Walk-Around Inspection

Begin the "Walk-Around Inspection" at Item 1, as noted on the diagram. Continue checking each item in sequence for the conditions listed in the following checklist.

# ⚠ WARNING

To avoid possible injury, be sure machine power is OFF. Do not operate machine until all malfunctions have been corrected.

# NOTICE

Do not overlook visual inspection of chassis underside. Checking this area may result in discovery of conditions which could cause extensive machine damage.

**INSPECTION NOTE:** On all components, make sure there are no loose or missing parts, that they are securely fastened, and no visible damage, leaks or excessive wear exists in addition to any other criteria mentioned.

1. **Platform Assembly and Gate** - Footswitch works properly, not modified, disabled or blocked. Gate latches and hinges in working condition.
2. **SkyGuard** - See [Inspection Note](#).
3. **Platform Control Console** - Switches and levers return to neutral when activated and released, decals/placards secure and legible, control markings legible.
4. **Platform Rotator** - See [Inspection Note](#).
5. **Jib Assembly and Jib Rotator (If Equipped)** - See [Inspection Note](#).
6. **Boom Sections/Uprights/Turntable** - See [Inspection Note](#).
7. **All Hydraulic Cylinders** - No visible damage; pivot pins and hydraulic hoses undamaged, not leaking.
8. **Wheel/Tire Assemblies** - Properly secured, no missing lug nuts. Inspect for worn tread, cuts, tears or other discrepancies. Inspect wheels for damage and corrosion.
9. **Drive Motor, Brake, and Hub** - No evidence of leakage.
10. **Tie Rod Ends and Steering Spindles** - See [Inspection Note](#).
11. **Counterweight** - See [Inspection Note](#).
12. **Ground Control Console** - Switches and levers return to neutral when activated and released, decals/placards secure and legible, control markings legible.
13. **Hood Assemblies** - See [Inspection Note](#).
14. **Swing Motor** - No evidence of damage.
15. **Turntable Bearing** - Evidence of proper lubrication. No evidence of loose bolts or looseness between bearing and machine.
16. **Hydraulic Pump and Reservoir** - See [Inspection Note](#).
17. **Battery** - Batteries have proper electrolyte level; cables tight; See [Inspection Note](#).
18. **Air Shutoff Valve (ASOV) (If Equipped)** - See [Inspection Note](#).
19. **Fuel Tank** - See [Inspection Note](#).
20. **Power Track** - See [Inspection Note](#).
21. **Turntable Lock** - Operable.
22. **Auxiliary Power Pump** - See [Inspection Note](#).
23. **Main Control Valve** - See [Inspection Note](#).
24. **Frame** - See [Inspection Note](#).

## 2.6 FUNCTION CHECK

---

### **WARNING**

If delayed movement is detected in wire rope operation, lower platform to stowed position, shut down machine, and have wire ropes inspected/serviced by a factory trained service technician. Loose or misadjusted wire ropes could result in serious injury or death.

Perform the Function Check as follows:

1. From the ground control panel with no load in the platform:
  - a. Ensure that all machine functions are disabled when the Emergency Stop Button is pushed in.
  - b. Ensure all functions stop when the function switch is released.
  - c. Operate all functions and check all limiting and cut-out switches to ensure proper operation.  
All boom sections should extend/retract together at the same rate of speed. Any difference would indicate delayed movement and loose wire ropes.
  - d. Ensure proper operation of the manual descent controls.
2. From the platform control console:
  - a. Ensure that the control console is firmly secured in the proper location.
  - b. Check that all guards protecting the switches or locks are in place.
  - c. Ensure that all machine functions are disabled when the Emergency Stop Button is pushed in.
  - d. Ensure that all machine functions stop when the footswitch is released.
  - e. Operate all functions and ensure proper operation.  
All boom sections should extend/retract together at the same rate of speed. Any difference would indicate delayed movement and loose wire ropes.
3. With the platform in the stowed position:
  - a. Drive the machine on a grade, not to exceed the rated gradeability, and stop to ensure the brakes hold.
  - b. Check the tilt indicator is illuminated to ensure proper operation.
4. Swing the boom over either of the rear tires and ensure that the Drive Orientation indicator illuminates and the Drive Orientation Override switch must be used for the drive function to operate.
5. With the machine positioned on a smooth, firm surface within the limits of the maximum operating slope, elevate the boom above 5° of horizontal. Select high speed drive mode. Carefully attempt to drive and ensure the drive speed is reduced.

---

## 2.7 SKYGUARD® FUNCTION TEST

---

**Note:** Refer to [Section — SkyGuard Operation](#) for additional information on SkyGuard operation.

From the Platform Console in an area free from obstructions:

1. Operate the telescope out function.
2. Activate the SkyGuard sensor:
  - a. **SkyGuard** — Apply approximately 50 lb (222 Nm) of force to yellow bar.
  - b. **SkyGuard SkyLine®** — Press rod to break connection between the rod and the right bracket.
  - c. **SkyGuard SkyEye®** — Put arm or hand in path of sensor beam.
3. Once the sensor has been activated, verify the following conditions:
  - a. Telescope out function stops and telescope in function operates for a short duration.
  - b. The horn sounds.
  - c. If equipped with SkyGuard beacon, the beacon illuminates.

**Note:** If SkyGuard is enabled with the Soft Touch system, functions will cut out instead of reversing.

4. Disengage the SkyGuard sensor, release controls, then recycle the foot switch. Ensure normal operation is available.

**Note:** On machines equipped with SkyLine, reattach the rod to the right bracket.

If SkyGuard remains activated after function reversal or cutout, press and hold the SkyGuard Override Switch to allow normal use of machine functions until the sensor is disengaged.

**This Page is intentionally left blank**

**This Page is intentionally left blank**

---

## SECTION 3

# Machine Controls and Indicators

---

### 3.1 GENERAL

---

## NOTICE

The manufacturer has no direct control over machine application and operation. The user and operator are responsible for conforming with good safety practices.

This section provides the necessary information needed to understand control functions.

### 3.2 CONTROLS AND INDICATORS

---

**Note:** The indicator panels use different shaped symbols to alert the operator to different types of operational situations that could arise. The meaning of those symbols are explained below.



Indicates a potentially hazardous situation, which if not corrected, could result in serious injury or death. This indicator will be red.




Indicates an abnormal operating condition, which if not corrected, may result in machine interruption or damage. This indicator will be yellow.



Indicates important information regarding the operating condition, i.e. procedures essential for safe operation. This indicator will be green with the exception of the capacity indicator which will be yellow.


### 3.3 600S/660SJ GROUND CONTROL STATION

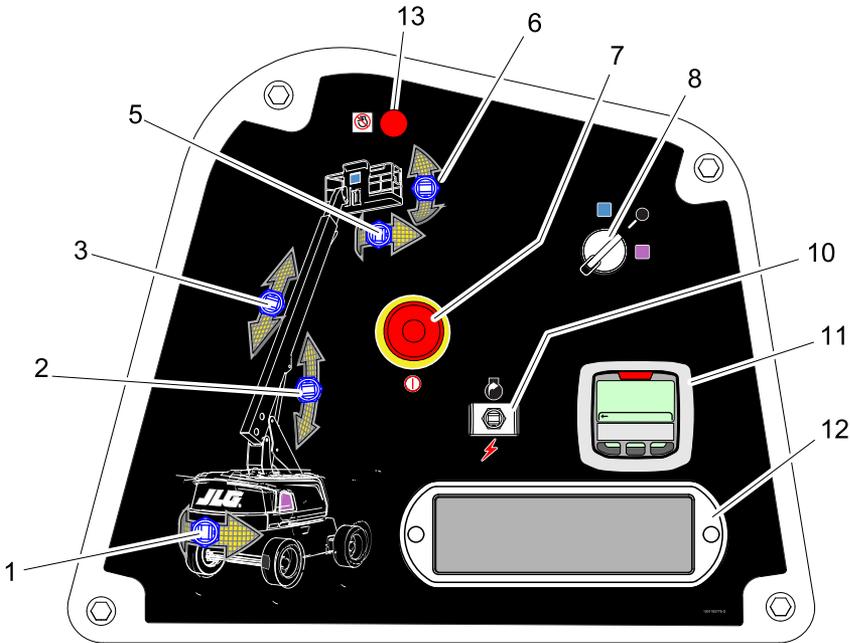

BM000163A

**600S Ground Control Station — Without MSSO**


- 1. Swing
- 2. Boom Lift
- 3. Boom Telescope
- 4. Not Used
- 5. Platform Rotate
- 6. Platform Leveling Override
- 7. Power/Emergency Stop
- 8. Platform/Ground Select Switch
- 9. Not Used
- 10. Engine Start/Auxiliary Power
- 11. Display Gauge
- 12. Indicator Panel
- 13. Air Shutoff Valve (ASOV) (If Equipped)

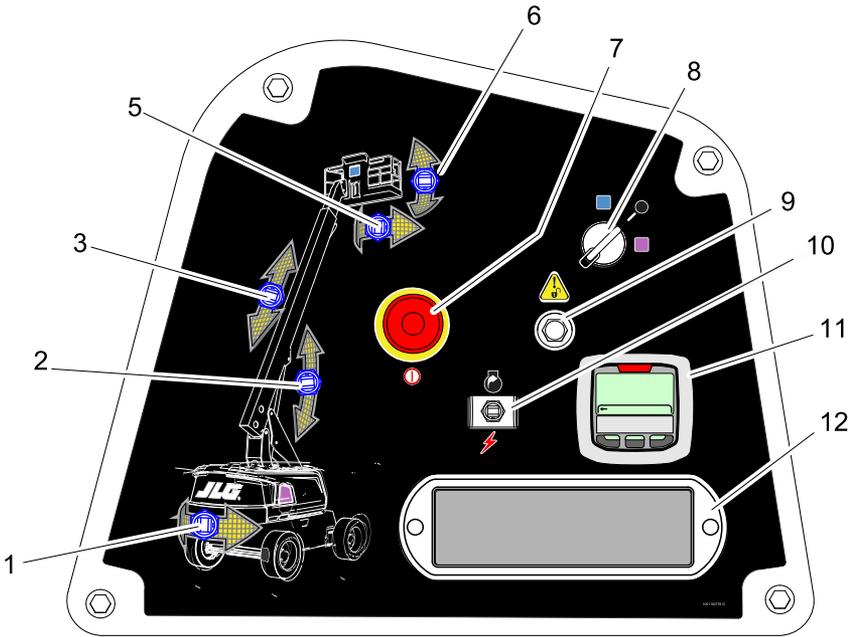

BM000158A

## 600S Ground Control Station — With MSSO


- |                               |  |
|-------------------------------|--|
| 1. Swing                      | 7. Power/Emergency Stop                  |
| 2. Boom Lift                  | 8. Platform/Ground Select Switch         |
| 3. Boom Telescope             | 9. Machine Safety System Override (MSSO) |
| 4. Not Used                   | 10. Engine Start/Auxiliary Power         |
| 5. Platform Rotate            | 11. Display Gauge                        |
| 6. Platform Leveling Override | 12. Indicator Panel                      |

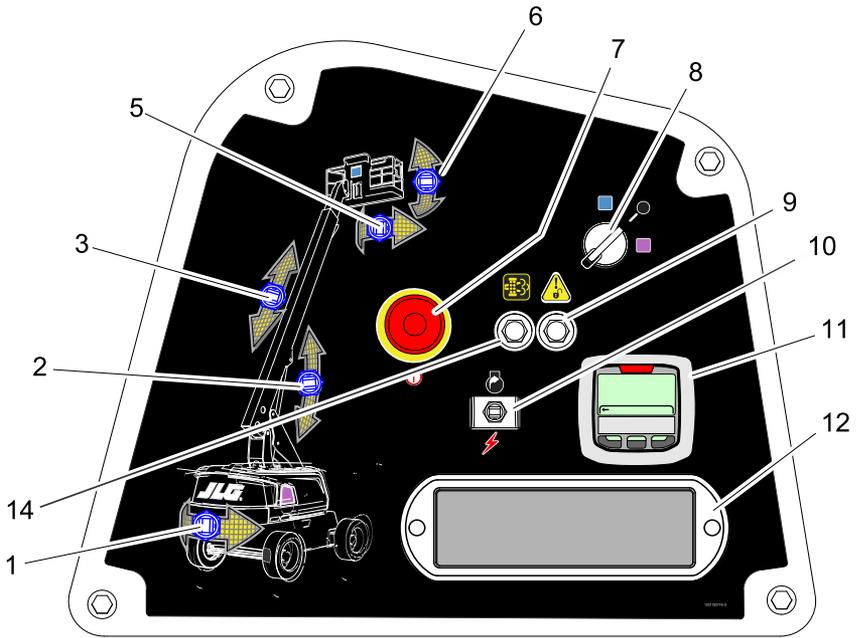

BM000159A

**600S Ground Control Station — With MSSO and DPF**


- |  |   |
|--|---|
| <ul style="list-style-type: none"> <li>1. Swing</li> <li>2. Boom Lift</li> <li>3. Boom Telescope</li> <li>4. Not Used</li> <li>5. Platform Rotate</li> <li>6. Platform Leveling Override</li> <li>7. Power/Emergency Stop</li> </ul> | <ul style="list-style-type: none"> <li>8. Platform/Ground Select Switch</li> <li>9. Machine Safety System Override (MSSO)</li> <li>10. Engine Start/Auxiliary Power</li> <li>11. Display Gauge</li> <li>12. Indicator Panel</li> <li>13. Not Used</li> <li>14. Diesel Particulate Filter (DPF)</li> </ul> |
|--|---|

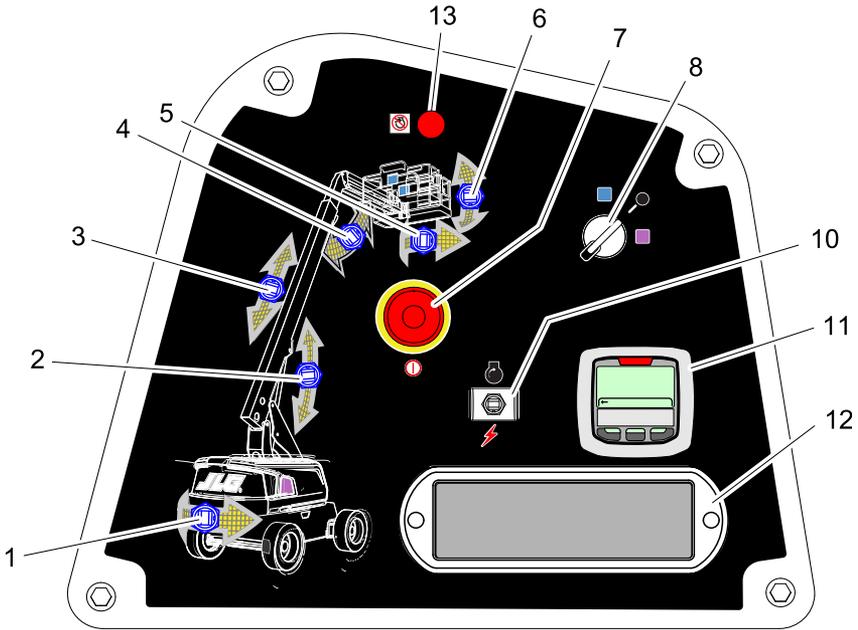

BM000160A

## 660SJ Ground Control Station — Without MSSO


- |                               |  |
|-------------------------------|--|
| 1. Swing                      | 8. Platform/Ground Select Switch           |
| 2. Boom Lift                  | 9. Not Used                                |
| 3. Boom Telescope             | 10. Engine Start/Auxiliary Power           |
| 4. Jib                        | 11. Display Gauge                          |
| 5. Platform Rotate            | 12. Indicator Panel                        |
| 6. Platform Leveling Override | 13. Air Shutoff Valve (ASOV) (If Equipped) |
| 7. Power/Emergency Stop       |  |

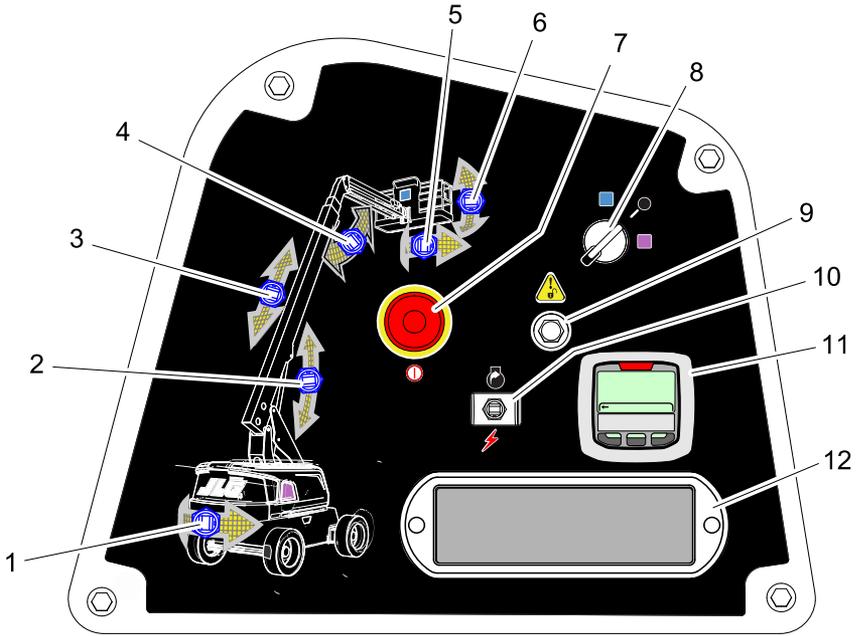

BM000161A

**660SJ Ground Control Station — With MSSO**

- |                               |  |
|-------------------------------|--|
| 1. Swing                      | 7. Power/Emergency Stop                  |
| 2. Boom Lift                  | 8. Platform/Ground Select Switch         |
| 3. Boom Telescope             | 9. Machine Safety System Override (MSSO) |
| 4. Jib                        | 10. Engine Start/Auxiliary Power         |
| 5. Platform Rotate            | 11. Display Gauge                        |
| 6. Platform Leveling Override | 12. Indicator Panel                      |

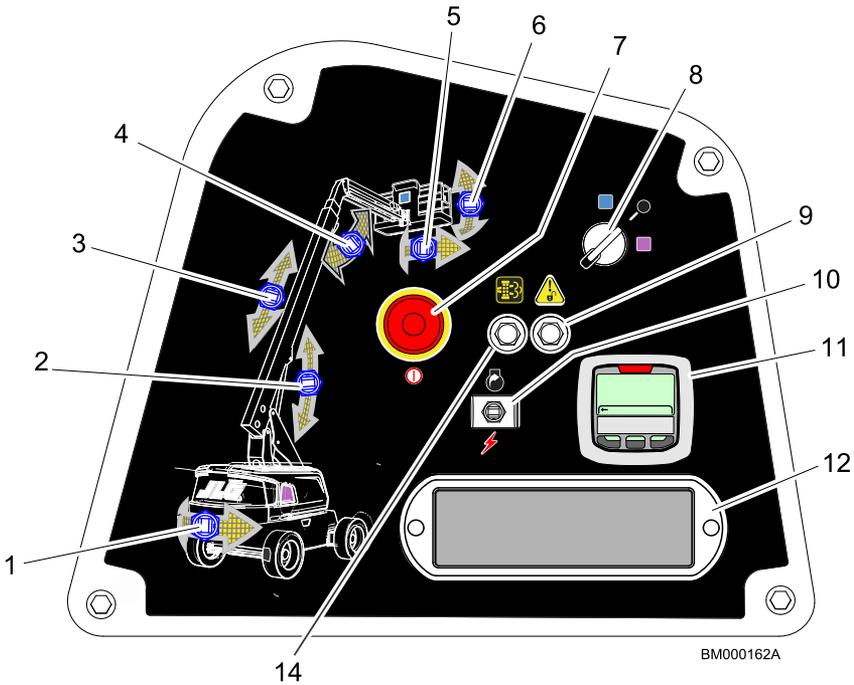

**660SJ Ground Control Station — With MSSO and DPF**

- |                               |  |
|-------------------------------|--|
| 1. Swing                      | 8. Platform/Ground Select Switch         |
| 2. Boom Lift                  | 9. Machine Safety System Override (MSSO) |
| 3. Boom Telescope             | 10. Engine Start/Auxiliary Power         |
| 4. Jib                        | 11. Display Gauge                        |
| 5. Platform Rotate            | 12. Indicator Panel                      |
| 6. Platform Leveling Override | 13. Not Used                             |
| 7. Power/Emergency Stop       | 14. Diesel Particulate Filter (DPF)      |

# **⚠ WARNING**

When operating the boom ensure there are no personnel around or under platform.

# ⚠ WARNING

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movement do not return to the off or neutral position when released.

(See [Figure — Ground Control Station - 600S without MSSO](#); [Figure — Ground Control Station - 600S with MSSO](#); [Figure — Ground Control Station - 660SJ without MSSO](#) and [Figure — Ground Control Station - 660SJ with MSSO](#).)

**Note:** When machine is shut down the Platform/Ground Select switch and Emergency Stop must be positioned to Off.

To operate machine from the platform, the Platform/Ground Select switch must be turned to the blue square.

To operate the machine from the ground, the Platform/Ground Select switch must be turned to the purple square.



## Air Shutoff Valve (ASOV) (If Equipped)

The red LED ASOV light indicates when the valve has been actuated.



## Diesel Particulate Filter (DPF) (If Equipped)

This button initiates the standstill exhaust system cleaning.



## Display Gauge Options

### Digital Display

Registers engine hours, fuel level (if applicable), and Diagnostic Trouble Codes (DTCs) from the JLG Control System and the engine control system.



### Hourmeter

Registers the amount of time the machine has been in use with the engine running. By connecting into the oil pressure circuit of the engine, only engine hours are recorded. The hourmeter registers up to 9,999.9 hours and cannot be reset.



### Engine Start/ Auxiliary Power Switch

To start the engine, the switch must be held up until the engine starts.

**Note:** When the glow plug indicator is illuminated on machines equipped with diesel engines, wait until the light goes out before cranking the engine.

To use auxiliary power, the switch must be held down for the duration of auxiliary pump use.



## **!** CAUTION

When operating on auxiliary power, do not operate more than one function at a time. Simultaneous operation can overload the auxiliary pump motor.

 
### Indicator Panel

The Indicator Panel contains indicator lights which signal problem conditions or functions operating during machine operation.



### Jib (If Equipped)

Provides raising and lowering of the jib.



### Machine Safety System Override (MSSO) (If Equipped)

Provides emergency override of function controls that are locked out in the event of Load Sense System activation.




### Main Boom Lift Control

Provides raising and lowering of the main boom.




## Main Boom Telescope Control

Provides extension and retraction of the main boom.

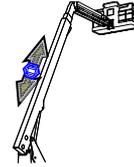

## Platform Leveling Override

A three position switch allows the operator to adjust the automatic self leveling system. This switch is used to adjust platform level in situations such as ascending/descending a grade.

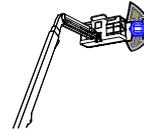

# ⚠ WARNING

Only use the platform leveling override function for slight leveling of the platform. Incorrect use could cause the load/occupant to shift or fall. Failure to do so could result in death or serious injury.

## Platform Rotate

Provides rotation of the platform.



## Platform/Ground Select Switch

The three position, key operated switch supplies power to the platform control console when positioned to Platform. With the switch key turned to the Ground position only ground controls are operable.



**Note:** When the Platform/Ground Select Switch is in the center position, power is shut off to the controls at both operating stations. Remove the key to prevent the controls from being actuated.



## Power/Emergency Stop Switch

A two-position, red, mushroom-shaped switch supplies power to Platform/ Ground Select switch when pulled out (On position). When pushed in (Off position), power is shut off to the Platform/Ground Select switch.



**Note:** When Power/Emergency Stop switch is in the On position and engine is not running, an alarm will sound, indicating the ignition power is On.

# NOTICE


Always position emergency stop switch to the Off position (pushed in) when machine is not in use.

## Swing Control

Provides 360 degrees continuous turntable rotation.



## 3.4 GROUND CONTROL INDICATOR PANEL

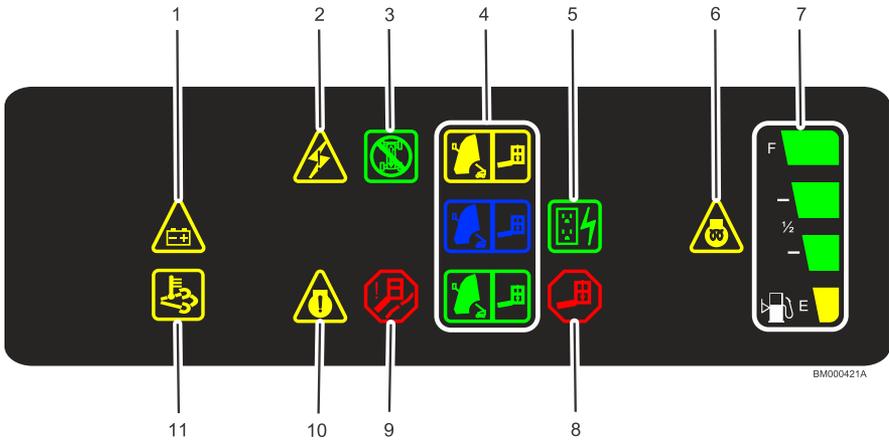

- |                            |                                |
|----------------------------|--------------------------------|
| 1. Battery Charge          | 7. Fuel Level                  |
| 2. System Distress         | 8. Platform Overload           |
| 3. Drive and Steer Disable | 9. Wire Rope Service Indicator |
| 4. Capacity Zone Indicator | 10. Engine Error               |
| 5. AC Generator            | 11. Emissions Temperature      |
| 6. Glow Plug               |                                |

### 3.4.1 Ground Control Indicator Panel Functions

#### AC Generator

Indicates the generator is in operation.



#### Battery Charge

Indicates a problem in the battery or charging circuit, and service is required.



### Capacity Zone Indicator

Indicates the platform capacity zone for the current position of the platform. Restricted capacities are permitted at restricted platform positions (shorter boom lengths and higher boom angles).



**Note:** Refer to the capacity decals on the machine for restricted and unrestricted platform capacities.

### Drive and Steer Disable

Indicates the Drive and Steer Disable function has been activated.



### Emissions Temperature

Indicator illuminates when exhaust temperature reaches 1022° F (550° C).



### Engine Error

Indicates a fault with the engine and service is required or is requesting a cleaning sequence.



### Fuel Level

Indicates the level of the fuel in the fuel tank.



### Glow Plug

Indicates the glow plugs are on. The glow plugs are automatically turned on with the ignition circuit and remain on for approximately seven seconds. Start the engine only after the light goes out.



### Platform Overload

Indicates the platform has been overloaded.



### System Distress

Indicates the JLG Control System has detected an abnormal condition and a Diagnostic Trouble Code has been set in the system memory. Refer to the Service Manual for instructions concerning the trouble codes and trouble code retrieval.

The system distress indicator light will illuminate for 2-3 seconds when the key is positioned to the On position to act as a self test.



### Wire Rope Service

Indicates the wire ropes are loose or broken and must be repaired or adjusted prior to use.



### 3.5 GROUND CONTROL CONSOLE DISPLAY GAUGE

The Display Gauge shows engine hours, fuel level (if applicable), and Diagnostic Trouble Codes (DTCs) from both the JLG Control System and the engine control system. During machine start up, with no active DTCs in the control system, the splash screen will show for 3 seconds and then switch to main screen. If there is an active DTC while powering up the machine, the splash screen will show for 3 seconds, and then launch the Diagnostics Screen. The indicator lamp will light when there is an active DTC in the Fault Log.



Figure 6. Splash Screen

The Diagnostic Screen will show active and inactive faults from the JLG Control System on the screen. An asterisk (\*) will be displayed to show active faults.

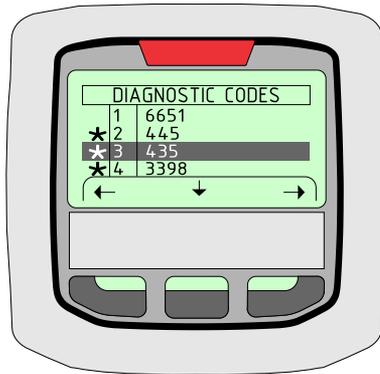


Figure 7. Diagnostic Screen

The Engine Diagnostics Screen will show SPN (Suspect Parameter Number), FMI (Failure Mode Identifier), and Occurrence count information. Engine SPN text is not scrollable. If there is more than one engine trouble code, the operator must exit from the Engine DTC Screen to see other SPN and FMI information.


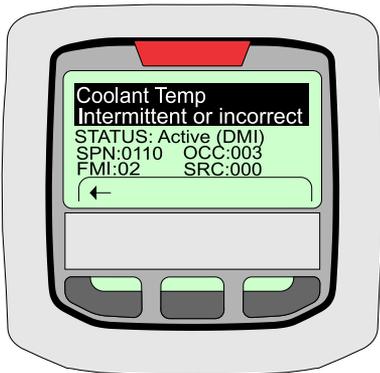


Figure 8. Engine Diagnostic Screen

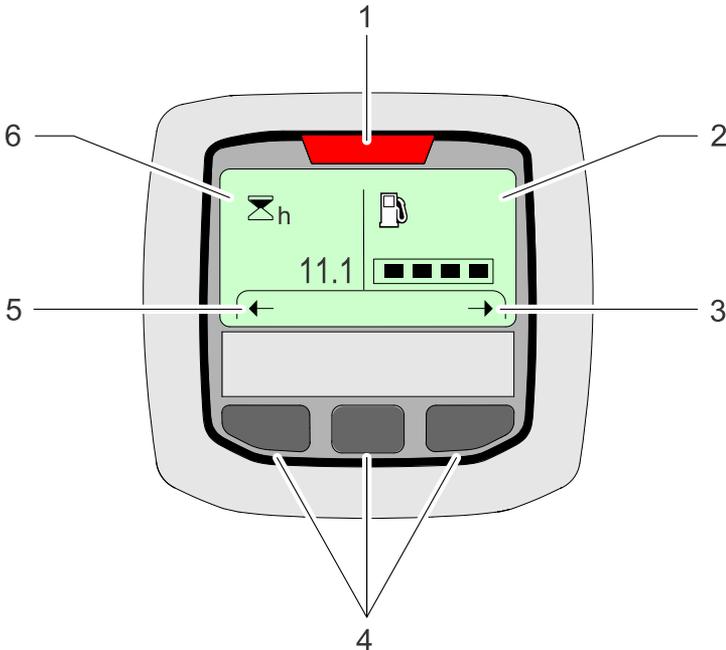


BM00029

Figure 9. Ground Control Console Display Gauge

- 1. Indicator Lamp
- 2. Fuel Level
- 3. Navigate Forward Arrow
- 4. Navigation Buttons
- 5. Navigate Back Arrow
- 6. Engine Hours

### 3.6 PLATFORM CONTROL STATION

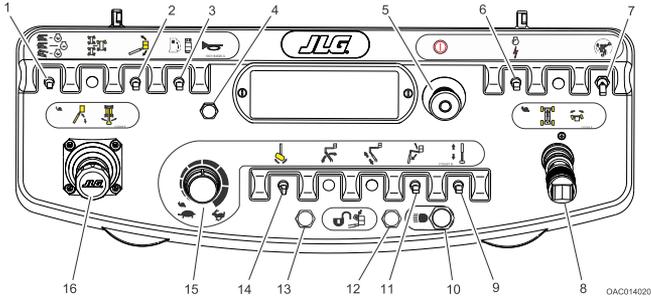

- |                                 |  |
|---------------------------------|--|
| 1. Drive Speed/Torque Select    | 9. Main Boom Telescope                         |
| 2. Platform Level Override      | 10. Lights (If Equipped)                       |
| 3. Fuel Select (If Equipped)    | 11. Jib Lift (If Equipped)                     |
| 4. Horn                         | 12. Soft Touch / SkyGuard / SkySense Override  |
| 5. Power / Emergency Stop       | 13. Soft Touch / SkyGuard / SkySense Indicator |
| 6. Engine Start/Auxiliary Power | 14. Platform Rotate                            |
| 7. Drive Orientation Override   | 15. Function Speed Control                     |
| 8. Drive / Steer                | 16. Main Lift / Swing                          |

### 3.6.1 Platform Control Station Functions

## ⚠ WARNING

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movement do not return to the off or neutral position when released.

#### Drive Orientation Override

 
When the boom is swung over the rear tires or further in either direction, the Drive Orientation indicator will illuminate when the drive function is selected. Push and release the switch, and within 3 seconds move the Drive/Steer control to activate drive or steer. Before driving, locate the black/white orientation arrows on both the chassis and the platform controls. Move the drive controls in a direction matching the directional arrows for the intended direction of travel.



**Note:** Lift, Swing, and Drive control levers are spring-loaded and will automatically return to neutral (off) position when released.


#### Drive Speed / Torque Select

The machine has a two position switch - The forward position gives maximum drive speed. The back position gives maximum torque for rough terrain and climbing grades.




**Note:** To operate the Drive joystick, pull up on the locking ring below the handle.

 **Note:** The Drive joystick is spring loaded and will automatically return to neutral (off) position when released.



#### Drive / Steer

Push forward to drive forward, pull back to drive in reverse. Steering is accomplished via a thumb-activated rocker switch on the end of the steer handle.

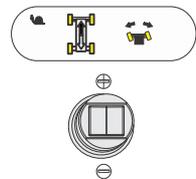

#### Engine Start / Auxiliary Power

When pushed forward, the switch energizes the starter motor to start the engine.



The Auxiliary Power control switch energizes the electrically operated hydraulic pump. (Switch must be held on for duration of auxiliary pump use.)

The auxiliary pump functions to provide sufficient oil flow to operate the basic machine functions should the main pump or engine fail. The auxiliary pump will operate main boom lift, main telescope, jib (if equipped) and swing.



### Fuel Select (Dual Fuel Engine Only) (If Equipped)

Moving the switch to the appropriate position selects gasoline or liquid propane fuel.



### Function Speed Control

This control knob affects the speed of Telescope, Jib Lift (if equipped), and Platform Rotate.

**Note:** During platform rotation, a speed difference may not be noticeable to the operator.

Turning the knob all the way counterclockwise until it clicks puts the machine into Creep Mode. Creep Mode puts the functions listed above, as well as Drive/Steer and Main Lift/ Swing functions into the slowest speed setting.



### Horn

A push-type Horn switch supplies electrical power to an audible warning device when pressed.



### Jib Lift (If Equipped)

Provides raising and lowering of the jib.



### Lights (If Equipped)

 
This switch operates the chassis or head and tail lights package if equipped on the machine.

**Note:** The Platform/Ground Select Switch does not shut off power to operate the lights. To avoid draining the battery, the lights must be shut off using the light switch.




### Main Boom Telescope

Provides extension and retraction of the main boom.



**Note:** To operate the Main Boom Lift/Swing joystick, pull up on the locking ring below the handle.

**Note:** The Main Boom Lift/Swing joystick is spring loaded and will automatically return to neutral (Off) position when released.

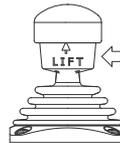

## Main Lift / Swing

Provides main lift and swing. Push forward to lift up, pull backward to boom down. Move right to swing right, move left to swing left.



## Platform Level Override

A three position switch allows the operator to adjust the automatic self leveling system. This switch is used to adjust platform level in situations such as ascending/descending a grade.



# ⚠ WARNING

Only use the platform leveling override function for slight leveling of the platform. Incorrect use could cause the load/occupants to shift or fall. Failure to do so could result in death or serious injury.

## Platform Rotate

Provides rotation of the platform.



## Power / Emergency Stop

A two-position red mushroom shaped switch furnishes power to Platform Controls when pulled out (On). When pushed in (Off), power is shut off to the platform functions.



## Soft Touch / SkyGuard / SkySense Indicator

Indicates the Soft Touch bumper is against an object or the SkyGuard sensor has been activated. All controls are cut out until the override button is pushed. For Soft Touch, controls are then active in the Creep Mode or for SkyGuard, controls will work normally.

When Soft Touch is active, the indicator will be on continuously and the alarm will sound. When SkyGuard is active, the indicator will flash, and the horn will sound continuously.

If machine is equipped with SkySense, the switch will mute the SkySense speakers.

## Soft Touch / SkyGuard / SkySense Override

For machines equipped with SkyGuard:

The SkyGuard override switch enables functions cut out by the SkyGuard system to be operated again, allowing the operator to resume use of machine functions.



For machines equipped with both SkyGuard and Soft Touch:

The switch operates like the SkyGuard override switch as described above. The switch also enables the functions cut out by the Soft Touch system to operate again at creep speed, allowing the operator to move the platform away from the obstacle that caused the shutdown situation.




For machines equipped with both SkyGuard and SkySense:

The switch operates like the SkyGuard override switch as described above. The switch also enables the functions cut out by the SkySense system to operate again at creep speed, allowing the operator to move the platform closer to the obstacle that caused the shutdown situation if desired.



## 3.7 PLATFORM CONTROL INDICATOR PANEL

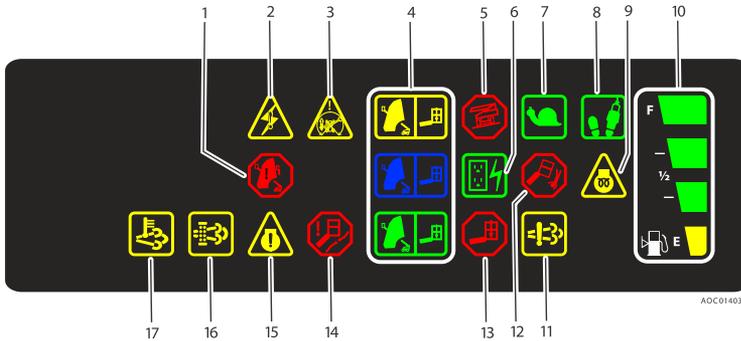

1. Boom Control System Warning
2. System Distress
3. Drive Orientation
4. Capacity Zone Indicator
5. Tilt Alarm / Warning
6. AC Generator
7. Creep Speed
8. Footswitch Enable
9. Glow Plug
10. Fuel Level
11. Engine Emissions System Failure
12. Level System
13. Platform Overload
14. Wire Rope Service
15. Engine Error
16. Diesel Particulate Filter
17. Emissions Temperature

### 3.7.1 Platform Control Indicator Panel Functions

#### AC Generator

Indicates the generator is in operation.



#### Boom Control System Warning

Indicates the platform is outside the operating area and operation of certain boom functions may be disabled (i.e. lift, telescope). Attempts to use the disabled functions cause the indicator to flash and an alarm to sound. Immediately return the platform to the ground. If the indicator remains lit, a boom control system fault or failure has been detected. If a failure is discovered, the system must be repaired by a JLG factory trained technician before the machine can be used.



#### Capacity Zone

Indicates the platform capacity zone for the current position of the platform. Restricted capacities are permitted at restricted platform positions (shorter boom lengths and higher boom angles).



**Note:** Refer to the capacity decals on the machine for restricted and unrestricted platform capacities.

#### Creep Speed

When the Function Speed Control is turned to the creep position, the indicator acts as a reminder that all functions are set to the slowest speed.



#### Diesel Particulate Filter

Icon will illuminate when standstill exhaust system cleaning is required.



#### Drive Orientation

When the boom is swung beyond the rear drive tires or further in either direction, the Drive Orientation indicator will illuminate when the drive function is selected. This is a signal for the operator to verify that the drive control is being operated in the proper direction (i.e. controls reversed situations).



#### Emissions Temperature

Icon illuminates when the engine emissions control sensor reaches a high temperature.



#### Engine Emissions System Failure

Icon illuminates when there is a fault with the Emissions After Treatment system.



#### Engine Error

Indicates a fault with the engine and service is required.



#### Footswitch Enable

To operate any function, the footswitch must be pressed down and the function selected within seven seconds. The enable indicator shows that the controls are enabled. If a function is not selected within seven seconds, or if a seven second lapse between ending one function and beginning the next function, the enable light will go out and the footswitch must be released and pressed again to enable the controls.



 
Releasing the footswitch removes power from all controls and applies the drive brakes.

# ⚠ WARNING

To avoid serious injury, do not remove, modify or disable the footswitch by blocking or any other means.

### Fuel Level

Indicates the level of the fuel in the fuel tank.



### Glow Plug

Indicates the glow plugs are operating. After turning on ignition, wait until light goes out before cranking engine.



### Level System

Indicates a fault in the electronic leveling system. The fault indicator will flash and an alarm will sound. All functions will default to creep if the boom is extended past transport mode or elevated more than 8 degrees above horizontal.



### Platform Overload

Indicates the platform has been overloaded.



### System Distress

The light indicates that the JLG Control System has detected an abnormal condition and a Diagnostic Trouble Code has been set in the system memory. Refer to the Service Manual for instructions concerning the trouble codes and trouble code retrieval.



### Tilt Warning Light and Alarm

This red illuminator indicates that the chassis is on a slope. If the boom is above horizontal and the machine is on a slope, the tilt alarm warning light will illuminate, an alarm will sound, available functions are placed in Creep speed, and drive is cut out in direction of travel. Drive in the opposite direction may be allowed under certain conditions.



# ⚠ WARNING

If tilt warning light is illuminated when boom is raised or extended, retract and lower to below horizontal then reposition machine so that it is within the limits of the maximum operating slope before extending boom or raising boom above horizontal.

Tilt Angle	Market
5°	All Markets

### Wire Rope Service

When illuminated, the light indicates the wire ropes are loose or broken and must be repaired or adjusted prior to use.



# SECTION 4

## Machine Operation

---

### 4.1 GENERAL

---

This machine is a Mobile Elevating Work Platform (MEWP) used to position personnel, along with their necessary tools and materials at work locations.

The primary operator control station is in the platform. From this control station, the operator can drive and steer the machine in both forward and reverse directions. The operator can raise or lower the main boom or swing the boom to the left or right.

Standard boom swing is 360° continuous left and right of the stowed position. The machine has a Ground Control Station which will override the Platform Control Station. Ground Controls operate all functions except drive and steer. Except for performing inspections and the Function Check, the ground controls are to be used in an emergency to lower the platform to the ground should the operator in the platform be unable to do so.

### 4.2 OPERATING CHARACTERISTICS AND LIMITATIONS

---

#### 4.2.1 Operating Conditions

The boom can be raised above horizontal with or without any load in platform, if:

1. Machine is positioned on a smooth, firm surface within the limits of the maximum operating slope.
2. Load is within manufacturer's rated capacity.
3. All machine systems are functioning properly.
4. Machine is as originally equipped from JLG.

#### 4.2.2 Platform Load Sensing System (LSS)

The Platform Load Sensing System (LSS) measures platform load from a sensor in the platform support.

If the LSS senses an overload condition, the overload alarm will sound, the overload indicator will light up at both the platform control and the ground control stations, and all boom functions will be disabled. To regain boom control, reduce the load in the platform to not exceed the rated workload indicated on the capacity decal. If unable to resolve the overload condition, auxiliary power may be used to return the platform to a safe working condition. See Emergency Operation section.

### 4.2.3 Capacity Zones (Triple Capacity)

This machine is equipped with a Triple Capacity System with one unrestricted and two restricted capacity zones. The control system will light the applicable capacity zone indicator in both the platform control and the ground control stations based on the location of and load on the platform.

When platform load is equal to or less than 660 lb (300 kg), the platform position is unrestricted within the full machine envelope boundary. When platform load is between 660 lb (300 kg) and 750 lb (340 kg) the platform position is restricted within a smaller working envelope boundary. When platform load is between 750 lb (340 kg) and 1,000 lb (450 kg) the platform position is further restricted to the smallest working envelope.

If the operator attempts to cross a boundary into a zone of lesser or no restriction with a greater load than allowed, the machine will stop at the boundary.

## 4.3 STABILITY

---



Machine stability is based on two positions which are called FORWARD and BACKWARD stability. The machines position of least FORWARD stability is shown in [Figure — Position of Least Forward Stability](#), and its position of least BACKWARD stability is shown in [Figure — Position of Least Backward Stability](#).

# ⚠ WARNING

To avoid forward or backward tipping, do not overload machine or operate the machine beyond the limit of the maximum operating slope.

**Figure 10. Position of Least Backward Stability**

1. Machine will tip over in this direction if tower boom upright is placed beyond this position or operated beyond the limits of the maximum operating slope.
2. Main boom fully retracted and elevated
3. Level surface
4. Platform rotated 90 degrees

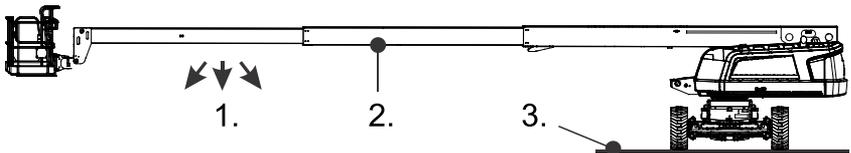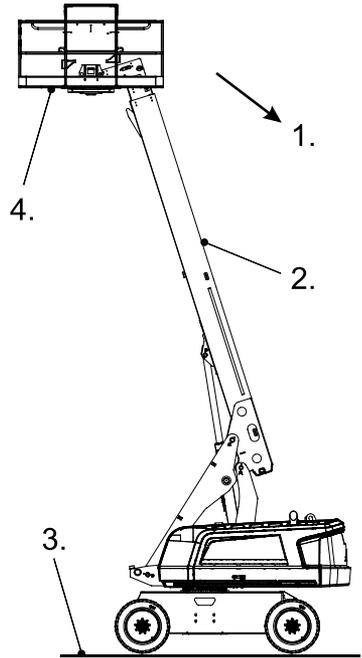

**Figure 11. Position of Least Forward Stability**

1. Machine will tip over in this direction if overloaded or operated beyond the limits of the maximum operating slope.
2. Boom fully extended at horizontal (0 degrees)
3. Level surface

## 4.4 ENGINE OPERATION

**Note:** When operating a machine at high altitudes, a decrease in machine performance may occur due to a decrease in air density.

**Note:** When operating a machine at high ambient temperatures, a decrease in machine performance and an increase in engine coolant temperature may occur.

**Note:** Avoid repeated, low intensity, or periodic machine operation and extended engine idle times in cold weather environments.

### CAUTION

For every 8 hours of low intensity machine operation or extended engine idle time, drive the machine continuously for 15 minutes.

**Note:** Contact JLG Customer Service for operation under abnormal conditions.

#### 4.4.1 Starting Procedure

**Note:** Initial starting should always be performed from the Ground Control station. Make sure to perform a ground control function check prior to platform operation.

### CAUTION

If engine fails to start promptly, do not crank for an extended time. Should engine fail to start again, allow starter to cool off for 2-3 minutes. If engine fails after several attempts, refer to engine maintenance manual.

**Note:** Diesel engines only: After turning on ignition power, operator must wait until glow plug indicator light goes out before cranking engine.



1. Turn key of Platform/Ground Select switch to Ground.



2. Pull the Power/Emergency Stop switch to On.



3. Push the Engine Start switch until engine starts.



# ⚠ CAUTION

Allow engine to warm-up for a few minutes at low speed before applying any load.

- After engine has had sufficient time to warm up, push in the Power/Emergency Stop switch and shut engine off.



- Turn Platform/Ground Select switch to Platform.



- From Ground Control Console, pull Power/ Emergency Stop switch out.



- From Platform, pull Power/Emergency Stop switch out.



- Push the Engine Start switch until engine starts.



**Note:** Footswitch must be released in the up position before starter will operate. If starter operates with footswitch in the down position, do not operate the machine.

## 4.4.2 Shutdown Procedure

# ⚠ CAUTION

If an engine malfunction causes an unscheduled shutdown, determine the cause and correct it before restarting the engine.

- Remove all load and allow engine to operate at low speed for 3-5 minutes; this allows further reduction of internal engine temperature.
- Push Power/Emergency Stop switch in.



- Turn Platform/Ground Select switch to Off.



**Note:** Refer to Engine Manufacturer's manual for detailed information.

### 4.5 AIR SHUTOFF VALVE (ASOV) (IF EQUIPPED)

Air Shutoff Valve (ASOV) is an overspeed protection device mounted to the engine's air intake system. When the valve is actuated, it obstructs airflow intake and stops the engine. Weekly tests are recommended to ensure the valve remains in good working condition.

1. Start the engine, running at idle.
2. Open the red switch guard on ASOV test switch, then activate toggle to test mode.

**Note:** Test switch is located under hood to the left of the ground control panel (look for test decal).




3. At the ground control panel, select any function and activate until valve actuates at test RPM of 1500. Once valve actuates, engine will stop.
4. Turn ignition power OFF.
5. Visually inspect valve to ensure it appears in good condition.
6. Reset valve by rotating valve handle to the Open position.

**Note:** The handle cannot be turned unless the machine is off. Ensure the ignition power is OFF.

## ⚠ WARNING

Do not use ASOV as an alternative to shutting down machine properly.

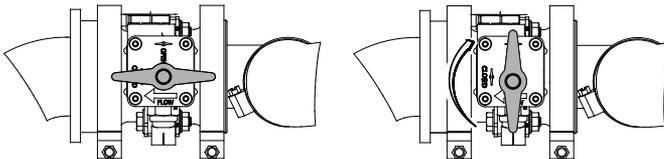


**Figure 12. ASOV Reset (Closed to Open Position)**

## 4.6 FUEL SHUTOFF SYSTEM (RESERVE)

**Note:** Reference the Service and Maintenance Manual along with a qualified JLG Mechanic to verify your machine setup.

The Fuel Shutoff System monitors the fuel in the tank and senses when the fuel level is getting low. The JLG Control System automatically shuts the engine down before the fuel tank is emptied unless the machine is set up for Engine Restart.

 If fuel level reaches the Low Fuel range the  $\frac{1}{4}$  tank indicator will flash once a second and there will be approximately 5 minutes of engine run time left. If the system is in this condition and automatically shuts down the engine, or the engine is manually shut down before the 5 minute run time is complete, the  $\frac{1}{4}$  tank indicator will flash 10 times a second and the engine will react according to machine setup. Setup options are as follows:



- **Engine One Restart** - When the engine shuts down, the operator will be permitted to cycle power and restart the engine once with approximately 2 minutes of run time. After the 2 minute run time is complete or if the engine is shut down by the operator prior to the completion of the 2 minute run time, it cannot be restarted until fuel is added to the tank.
- **Engine Restart** - When the engine shuts down, the operator will be permitted to cycle power and restart the engine for approximately 2 minutes of run time. After the 2 minutes of run time is complete, the operator may cycle power and restart the engine for an additional 2 minutes of run time. The operator can repeat this process until there is no more fuel available.

### NOTICE

Contact a qualified JLG mechanic if the machine needs restarted after no more fuel is available.

- **Engine Stop** - The engine will shut down. No restarts will be permitted until fuel is added to the tank.

## 4.7 DIESEL PARTICULATE FILTER (IF EQUIPPED)

Diesel Particulate Filter (DPF) is an emissions control system used in diesel engines and requires operator interaction to ensure proper operation of the system.

For peak operation, the DPF system must be cleaned using one of two methods, Standstill Cleaning and Maintenance Standstill Cleaning. Standstill Cleaning is any cleaning requested by the engine outside of the regular maintenance window (for example, if the system detects excessive soot in the DPF canister). Maintenance Standstill Cleaning is cleaning requested by the engine on the regular maintenance interval.

**Note:** The system will reset the maintenance interval back to zero hours after Standstill or Maintenance Standstill Cleaning events are performed.


### 4.7.1 Standstill Cleaning

The following conditions must be met to perform Standstill Cleaning.


- Machine must be stationary
  - Boom in the stowed position
  - No personnel in platform
  - Engine must be idling
  - Coolant temperature must be above 104° F (40° C)
  - Machine in Ground Station mode
1. The Diesel Particulate Filter (DPF) Indicator on the Platform Control Panel will flash when standstill cleaning is required.



2. Move the machine to a suitable area free of flammables and personnel that could be exposed to hot exhaust.
3. Launch the cleaning process by pressing the DPF button on the Ground Console for 3 seconds. The Indicator Gauge will display the following screen.

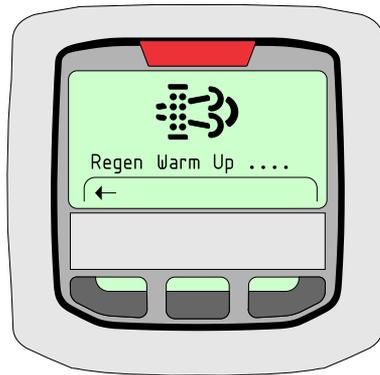

4. The Main Cleaning process will begin and last for approximately 30 to 60 minutes. The following screen will show that the process has begun and includes a status bar that indicates the progress of the cleaning process.

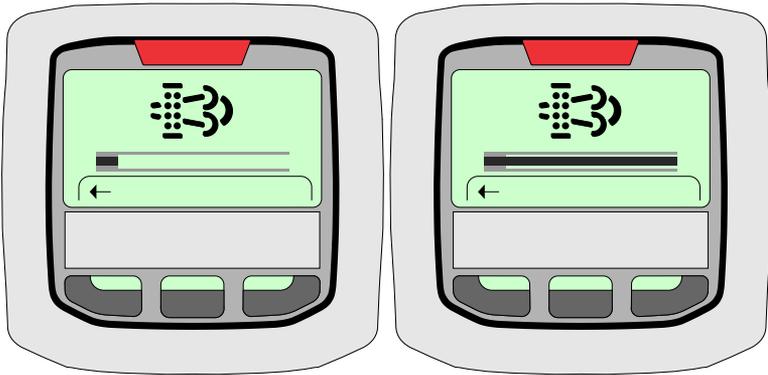

5. After the cleaning process is complete, the engine will run for approximately 5 minutes to allow the engine and Exhaust After Treatment (EAT) to cool down. The Indicator Gauge will display the "Regen Complete" screen as shown and the Emissions Temperature indicator will no longer be illuminated.



#### 4.7.2 Maintenance Standstill Cleaning Initiation Methods

Maintenance Standstill Cleaning can be started by one of two methods, by using the Analyzer or the DPF button on the Ground Console. All the same conditions as outlined under Standstill Cleaning must be met.


#### 4.7.3 Canceling Maintenance Standstill/Standstill Cleaning

Maintenance Standstill Cleaning will be stopped immediately if:

- The Platform/Ground Select switch is switched from Ground to Platform mode
- Any function switch is enabled to perform a boom function

- The Engine is powered down

If Maintenance Standstill Cleaning is interrupted, it must be re-initiated and the Indicator Gauge will display the "Regen Failed" screen as shown.

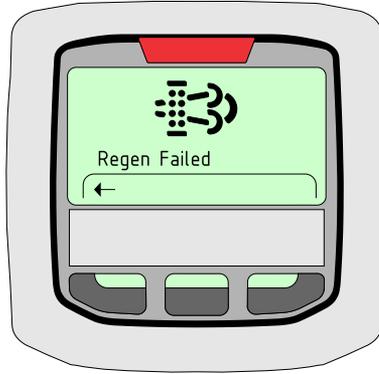


### 4.7.4 Unsuccessful Cleaning Event

If there is an unsuccessful cleaning event, the DPF icon will show on the display gauge. Possible causes of an Unsuccessful Cleaning Event are:

- Engine is not warmed up
- Machine functions operated during cleaning event in progress
- Other engine faults are active
- DEF tank (if equipped) is frozen

The Gauge will display "Regen Failed" screen as shown. If the cleaning event has failed, the process must be repeated.

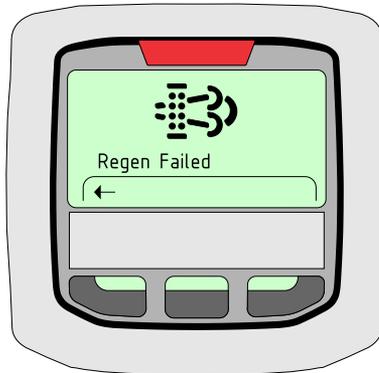

#### 4.7.5 DPF Filter Replacement due to Ash Load

The DPF collects non-burnable particulates which cannot be removed by the Standstill Cleaning process. Build up of the ash load requires filter maintenance and/or exchange.

DPF filter maintenance or exchange requirement is indicated by the DPF Exchange icon shown on the display gauge.

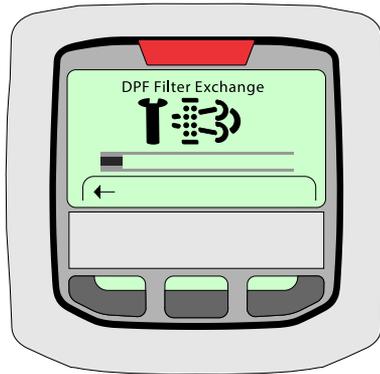


Table 4. Ash Load DPF Filter Replacement

	Ash Load	DPF Filter Exchange Indicator	Engine Error Indicator	Derate
Normal Operation	<100%	--	--	None
Filter Exchange Required	≥100%		--	None
Warning Level	≥105%	Blinking 	--	None
Warning Level	≥110%	Blinking 	Continuous 	Machine placed in Creep and DTC active. Contact Deutz Dealer

Table 5. DPF Cleaning Strategy and Warning Indicators (Maintenance Standstill Cleaning)

Maintenance Standstill Cleaning Levels	Machine Hours Since Last Cleaning		Engine Error Indicator	DPF Indicator	Emissions Temperature Indicator*	Derate	Comments
0	Normal Operation	0-500	--	--		None	Between 500 and 650 hours, cleaning cycle can be initiated 500-650 with JLG analyzer.
		500-650	--			None	Engine coolant temperature must be >40° C and machine must be in ground station 2 mode.
1	Standstill Required	650-750	Continuous 			Machine placed in Creep and DTC active	
2	Warning Level	750-775	Blinking 			Idle Lock, Boom Functions Locked Out and trapped in Transport.	
3	Shut Off Level	>775	Blinking 			Idle Lock, Boom Functions Locked Out and trapped in Transport.	Contact Deutz Dealer
4	Filter Exchange	DPF Regeneration NOT POSSIBLE DPF Filter exchange required	Blinking 			Idle Lock, Boom Functions Locked Out and trapped in Transport.	

\*Emissions Temperature Indicator continuously On during Standstill Cleaning. Emissions Temperature Indicator is possible during normal operation but will not appear if the exhaust temperature is below 550°C.

Table 6. Soot Load DPF Cleaning Strategy and Warning Indicators (Standstill Cleaning)

Soot Levels	Soot Load	Time in Heat Mode (Hr)	DPF Cleaning Initiation Methods	Engine Error Indicator	DPF Indicator	Emissions Temperature Indicator*	Derate	Comments
Normal Operation	<70%							
Heat Mode 1	71% to 85%	50		--	--		None	If Soot Load reaches 56% in 50 hours of Heat Mode 1, system will return to Normal Operation setting.
Heat Mode 2	86% to 100%	250		--				If Soot Load reaches 56% in 250 hours of Heat Mode 2, system will return to Normal Operation setting.
Standstill Required	101% to 115%	100	Switch in JLG Machine or JLG Analyzer	--			None	Will remain in Standstill mode for 100 hours or until the soot load reaches 115%
Warning Level	116% to 130%	25	Switch in JLG Machine or JLG Analyzer	Continuous 			Machine placed in Creep and DTC active	Will remain in Warning level (Derate) for 25 hours or until the soot load reaches 130%

Table 6. Soot Load DPF Cleaning Strategy and Warning Indicators (Standstill Cleaning) (continued)

Soot Levels	Soot Load	Time in Heat Mode (Hr)	DPF Cleaning Initiation Methods	Engine Error Indicator	DPF Indicator	Emissions Temperature Indicator*	Derate	Comments
Shut Off Level	131% to 145%		Switch in JLG Machine or JLG Analyzer + Level 3 Diagnostic Access	Blinking 			Idle Lock, Boom Functions Locked Out and Trapped in Transport	Contact Deutz Dealer
Filter Exchange	> 145%		DPF Cleaning Not Possible	Blinking 			Idle Lock, Boom Functions Locked Out and Trapped in Transport	

\*Emissions Temperature indicator continuously ON during Standstill Cleaning. Emissions Temperature Indicator is possible during normal operation but will not appear if the exhaust temperature is below 550°C.

## 4.8 TRAVELING (DRIVING)

**Note:** When the main boom is raised approximately 5 degrees above horizontal, the high drive function will automatically be in low drive.

### ! WARNING

Do not drive with boom above horizontal except on a smooth, firm surface within the limits of the maximum operating slope.

Be sure the turntable lock (if equipped) is engaged before any extended traveling.

### ! WARNING


Do not drive on side slopes which exceed 5 degrees.

To avoid loss of travel control or tip over, do not drive machine on grades exceeding those specified in the operating specifications section of this manual.

### ! WARNING


Use extreme caution when driving in reverse and at all times when the platform is elevated.

Before driving, locate the black/white orientation arrows on both the chassis and the platform controls. Move the drive controls in a direction matching the directional arrows for the intended direction of travel.

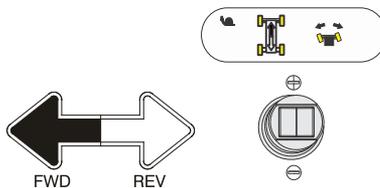


## 4.8.1 Traveling Forward and Reverse

1. At Platform Controls, pull out Emergency Stop switch, start engine, and activate footswitch.
2. Position Drive controller to Forward or Reverse as desired.

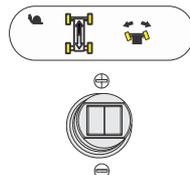

This machine is equipped with a Drive Orientation Indicator. The yellow light on the platform control console indicates that the boom is swung beyond the rear drive tires and the machine may Drive/Steer in the opposite direction from the movement of the controls. If the indicator is illuminated, operate the Drive function in the following manner:

 1. Match the black and white direction arrows on both platform control panel and the chassis to determine the direction the machine will travel.
2. Push and release the Drive Orientation Override switch. Within 3 seconds, slowly move the Drive control toward the arrow matching the intended direction of machine travel. The indicator light will flash during the 3 second interval until the drive function is selected.



## 4.9 TRAVELING (GRADE/SIDE SLOPE)

See [Figure — Grade and Side Slope](#)

**Note:** Refer to the Operating Specifications table for gradeability and side slope ratings.

All ratings for gradeability and side slope are based upon the machine's boom being in the stowed position, fully lowered, and retracted.

Traveling is limited by two factors:

1. Gradeability, which is the percent of grade of the incline the machine can climb.
2. Side slope, which is the angle of the slope the machine can be driven across.

### 4.9.1 Traveling on a Grade

When traveling a grade, maximum braking and traction are obtained with the boom stowed, in position over the rear (drive) axle, and in line with the direction of travel. Drive the machine forward when climbing a grade, and in reverse when descending a grade. Do not exceed the machine's maximum rated gradeability.


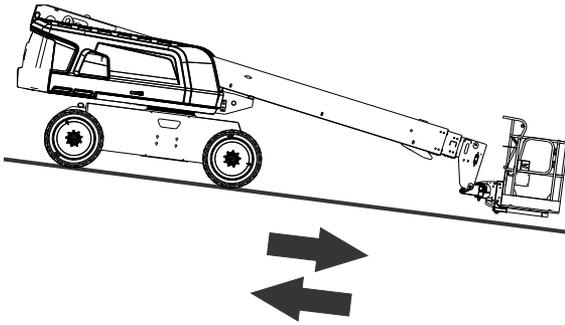


Figure 13. Traveling on a Grade

# NOTICE

If the boom is over the front (steer) axle, direction of steer and drive movement will be opposite from the movement of the controls.

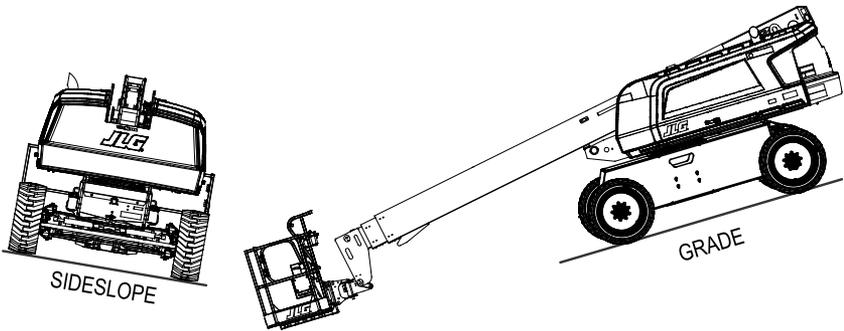

LEVEL  
Figure 14. Grade and Side Slope

## 4.10 STEERING

Press footswitch. Position thumb switch on Drive/Steer controller to Right for steering right, or to Left for steering left.



## 4.11 PLATFORM

### 4.11.1 Platform Level Adjustment

#### **! WARNING**

Only use the platform leveling override function for slight leveling of the platform. Incorrect use could cause the load/occupants to shift or fall. Failure to do so could result in death or serious injury.

To Level Up or Down - Position the Platform/Level control switch Up or Down and hold until the platform is level.



### 4.11.2 Platform Rotation

To rotate the platform to the left or right, use the Platform Rotate control switch to select the direction.



## 4.12 BOOM

#### **! WARNING**

A red tilt warning light is located on the control console which lights when the chassis is on an excessive slope. Do not swing or raise boom above horizontal when indicator is lit.

Do not depend on the tilt warning light as a level indicator for the chassis. The tilt warning light indicates chassis is on an excessive slope. Chassis must be level before swinging or raising boom above horizontal or driving with the boom elevated.

To avoid tip over if red tilt warning light lights when the boom is raised above horizontal, lower platform to ground level. Then reposition machine so that chassis is level before raising boom.

If the platform does not stop when a control switch or lever is released, remove foot from footswitch or use emergency stop switch to stop the machine.

## ⚠ WARNING

To avoid serious injury, do not operate machine if any control lever or toggle switch controlling platform movement does not return to the 'off' or neutral position when released.

## ⚠ CAUTION

To avoid a collision and injury if platform does not stop when a control switch or lever is released, remove foot from footswitch or use emergency stop switch to stop the machine.

### 4.12.1 Swinging the Boom

To swing boom, use Swing control switch to select Right or Left direction.



## NOTICE

When swinging the boom make sure there is ample room for the boom to clear surrounding walls, partitions and equipment.

**Note:** On CE/UKCA market machines, when boom functions are being operated there is an interlock which prevents the use of Drive and Steer functions.

 
### 4.12.2 Raising and Lowering the Main Boom

To raise or lower the Main Boom, position the Main Boom Lift switch to Up or Down until the desired height is reached.



### 4.12.3 Telescoping the Main Boom

To extend or retract the main boom, use the Main Telescope Control Switch to select In or Out movement.



## 4.13 SHUT DOWN AND PARK

The preferred procedures to shut down and park the machine are as follows:

1. Drive machine to a reasonably well protected area.
2. Ensure boom is fully retracted and lowered over rear axle.
3. Shut down Emergency Stop at Platform Controls.
4. Shut down Emergency Stop at Ground Controls. Position Platform/Ground Select switch to center OFF (center position).
5. If necessary, cover Platform Controls to protect instruction placards, warning decals, and operating controls from hostile environment.

# NOTICE

If parking a MEWP with the boom elevated in an effort to conserve space, booms may be elevated, but shall not be extended. It is the operator's responsibility to ensure all safety precautions in Section 1 of this manual are followed for each unique situation.

## 4.14 BATTERY QUICK-DISCONNECT (IF EQUIPPED)

Machines equipped with the battery quick disconnect allow all machine power to be easily disconnected at the battery without removing battery cables from the battery posts. To disconnect power, locate the RED quick-disconnect switch near the battery, and turn it to the **OFF** position.

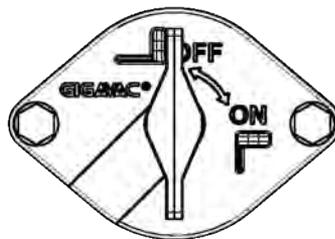


Figure 15. Battery Disconnect Switch

### 4.15 FUNCTION SPEED CONTROL

---

This control affects the speed of Telescope, Jib Lift (if equipped), and Platform Rotate functions.

**Note:** During platform rotation, a speed difference may not be noticeable to the operator.




Turning the knob all the way counterclockwise until it clicks puts the machine into Creep Mode. Creep Mode puts the functions listed above, as well as the Drive/Steer and Main Lift/Swing functions into the slowest speed setting.

### 4.16 USB CHARGING PORT

---

The machine is equipped with a USB charging port for the operator.

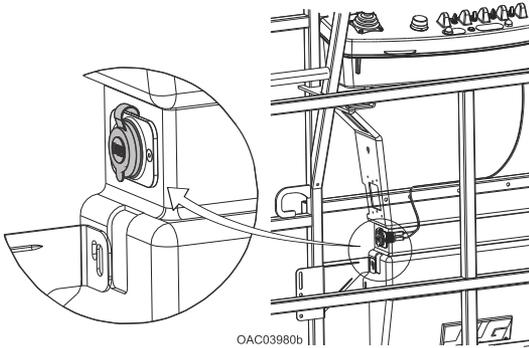

### 4.17 MACHINE SAFETY SYSTEM OVERRIDE (MSSO) (IF EQUIPPED)

---

The Machine Safety System Override (MSSO) is used to override function controls for Emergency Platform Retrieval only. Refer to Emergency Procedures Section for Machine Safety System Override operating procedures (if equipped).



## 4.18 SKYGUARD OPERATION


SkyGuard provides enhanced control panel protection. When the SkyGuard sensor is activated, functions in use at the time of actuation will reverse or cutout. The SkyGuard Function Table provides more details on these functions.

During activation, the horn will sound and the SkyGuard beacon (if equipped) will illuminate until sensor and footswitch are disengaged.

If the SkyGuard sensor remains activated after function reversal or cutout, press and hold the SkyGuard Override Switch to allow normal functions until the sensor is disengaged.


Consult the following illustrations to determine which type of SkyGuard the machine has and how it is activated. Regardless of type, SkyGuard function according to the SkyGuard Function Table does not change.

### 4.18.1 SkyGuard

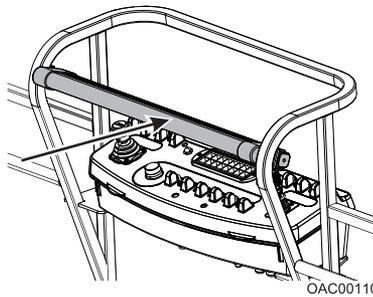


Approximately 50 lb (222 Nm) of force is applied to yellow bar.

### 4.18.2 SkyGuard - SkyLine

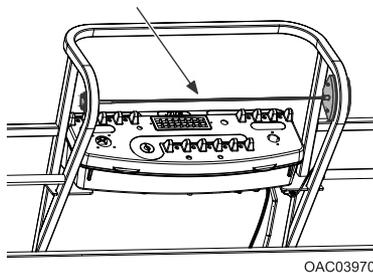

Rod is pressed, breaking the connection between the rod and right bracket.

### 4.18.3 SkyGuard - SkyEye

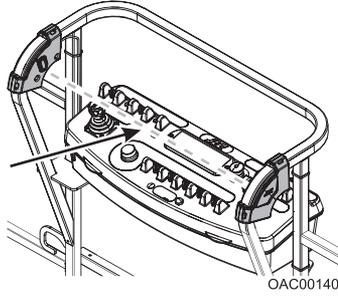

Operator passes through path of sensor beam.

#### 4.18.4 SkyGuard Function Table

Drive Forward	Drive Reverse	Steer	Swing	Boom Lift Up	Boom Lift Down	Boom Tele Out	Boom Tele In	Jib Lift	Basket Level	Basket Rotate
R * / C **	R	C	R	R	R	R	C	C	C	C
<b>R</b> = Indicates Reversal is Activated										
<b>C</b> = Indicates Cutout is Activated										
* DOS (Drive Orientation System) Enabled										
** DOS Not Enabled, machine is driving straight without steering, and any other hydraulic function is active										
<b>Note:</b> If SkyGuard is enabled with the Soft Touch system, functions will cut out instead of reversing.										

## 4.19 OSCILLATING AXLE LOCKOUT TEST (IF EQUIPPED)

---

### **NOTICE**

Lockout system test must be performed quarterly, any time a system component is replaced, or when improper system operation is suspected.

Refer to General Specifications & Operator Maintenance Section — Oscillating Axle Lockout Test for procedure (if equipped).

## 4.20 TOWING (IF EQUIPPED)

---


### **⚠ WARNING**

Runaway vehicle/machine hazard: Machine has no towing brakes. Towing vehicle must be able to control machine at all times. On-highway towing not permitted. Failure to follow instructions could cause serious injury or death.

# ⚠ WARNING

Maximum towing speed 5 mph (8 km/h).

Maximum towing grade 25%.

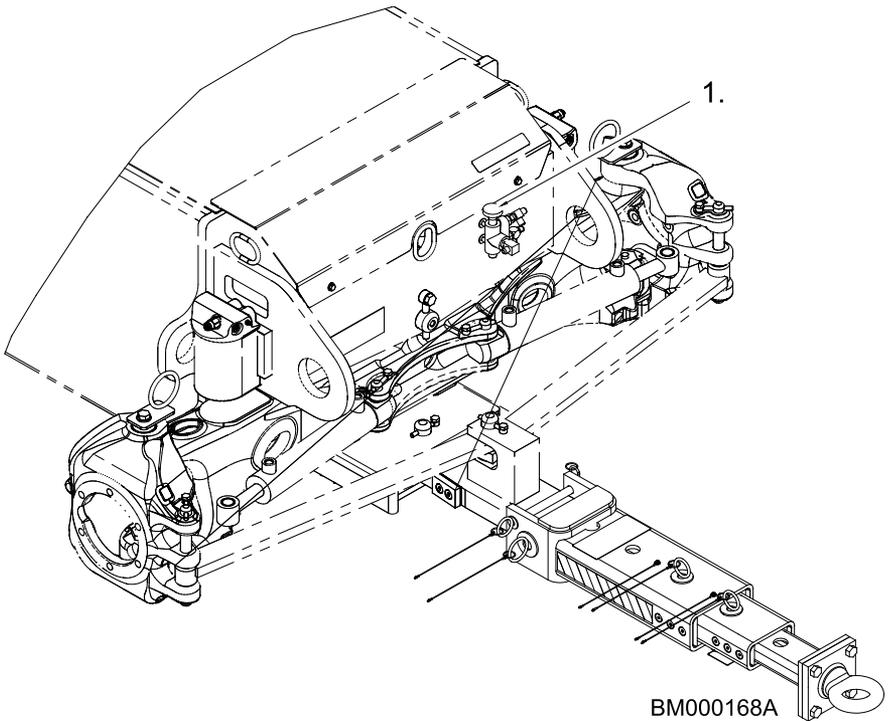

**Figure 16. Towbar**

1. Steer Select Valve

\*Chassis layout may vary depending on machine.

# ⚠ WARNING


Do not attempt to tow machine unless equipped with complete tow package from manufacturer.

# ⚠ CAUTION

Do not tow machine with engine operating or drive hubs engaged.

Prior to towing the machine, complete the following:

1. Retract, lower and position boom over rear drive wheels in line with direction of travel; lock turntable.
2. Connect tow bar to front of frame with attach pins, and tow bar to towing vehicle.
3. Disconnect drive hubs by inverting disconnect cap. Refer to *Figure — Drive Disconnect Hub, page 86*.
4. Actuate steer/tow selector valve for towing; pull valve knob Out to float position. (This opens the steer circuit to reservoir, allowing the steer cylinder rod free travel.) The machine is now in the towing mode.

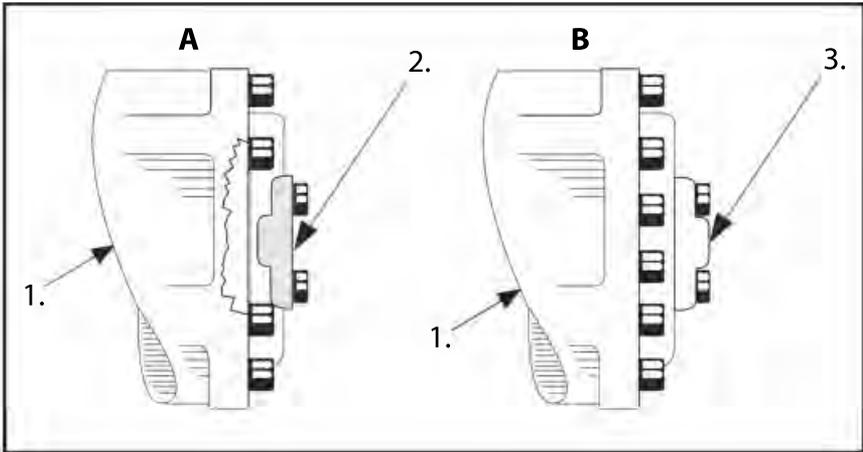

**Figure 17. Drive Disconnect Hub**

A — Drive Hub Disconnected

1. Drive Hub

3. Disconnect Cap


B — Drive Hub Engaged

2. Disconnect Cap (REVERSED)

After towing the machine, complete the following:

1. Actuate steer/tow selector valve for steering; push valve knob In to the actuated position.
2. Reconnect drive hubs by inverting disconnect cap.

3. Disconnect tow bar from steering hitch and from towing vehicle. The machine is now in the driving mode.

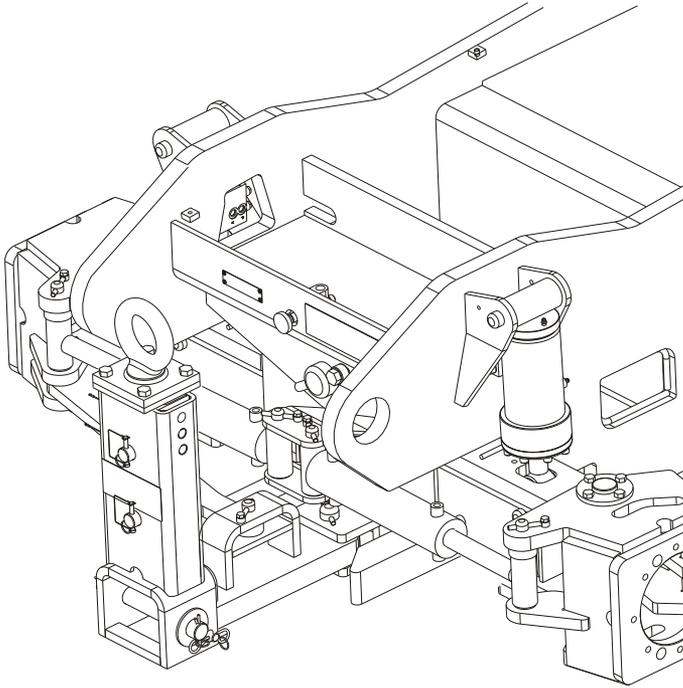

**Figure 18. Towbar (Raised Position)**

BM000398/

\*Chassis layout may vary depending on machine.

## 4.21 AUXILIARY POWER

### **⚠ CAUTION**

When operating on auxiliary power, do not operate more than one function at a time. (Simultaneous operation can overload the 12-volt auxiliary pump motor.)

A toggle type auxiliary power control switch is located on the platform control station and another is located on the ground control station. Operation of either switch turns on the electrically driven auxiliary hydraulic pump. This should be used in case of failure of the main power plant. The auxiliary pump will operate boom lift, telescope, jib (if equipped), and swing.

### 4.21.1 Activating Auxiliary Power from the Platform Control Station

1. Position Platform/Ground Select Key Switch to Platform.
2. Position Power/Emergency Stop switch to On.
3. Press and hold footswitch.
4. Position Auxiliary Power switch to On and hold.
5. Operate appropriate control switch, lever or controller for desired function and hold.
6. Release Auxiliary Power switch, selected control switch, lever or controller, and footswitch.
7. Position Power/Emergency Stop switch to Off.



### 4.21.2 Activating Auxiliary Power from the Ground Control Station

1. Position Platform/Ground Select Key Switch to Ground.
2. Position Power/Emergency Stop switch to On.
3. Position Auxiliary Power switch to On and hold.
4. Operate appropriate control switch, lever or controller for desired function and hold.



5. Release Auxiliary Power switch, and appropriate control switch or controller.
6. Position Power/Emergency Stop switch to Off.



## 4.22 DUAL FUEL SYSTEM (GAS ENGINE ONLY)

The dual fuel system enables the standard gasoline engine to run on either gasoline or LP gas.

### CAUTION

It is possible to switch from one fuel source to the other without allowing the engine to stop. Extreme care must be taken and the following instructions must be followed.

#### 4.22.1 Changing From Gasoline to LP Gas

1. Start engine from Ground Control Station.
2. Open hand valve on LP gas supply tank by turning counterclockwise.
3. While engine is operating on Gasoline under a no-load condition, place Fuel Select switch at Platform Control to LP position.



#### 4.22.2 Changing From LP Gas to Gasoline

1. With engine operating on LP under a no-load condition, position Fuel Select switch at Platform Control Station to Gasoline position.
2. Close hand valve on LP gas supply tank by turning clockwise.



## 4.23 LIFTING AND TIE DOWN

### 4.23.1 Lifting

1. Refer to the Machine Serial Number Plate, call JLG Industries, or weigh the individual unit to find out the Gross Vehicle Weight.
2. Place the boom in the stowed position.
3. Remove all loose items from the machine.

4. Properly adjust the rigging to prevent damage to the machine and so the machine remains level.


### 4.23.2 Tie Down

## NOTICE

When transporting the machine, the boom must be fully lowered into the boom rest.

1. Place the boom in the stowed position.
2. Remove all loose items from the machine.
3. Secure the chassis using straps or chains of adequate strength.
4. Ensure the platform is lowered so the wear pad on the bottom rests on the surface of the transportation vehicle.


**Note:** Secure through the tie downs on the boom using straps or chains of adequate strength.

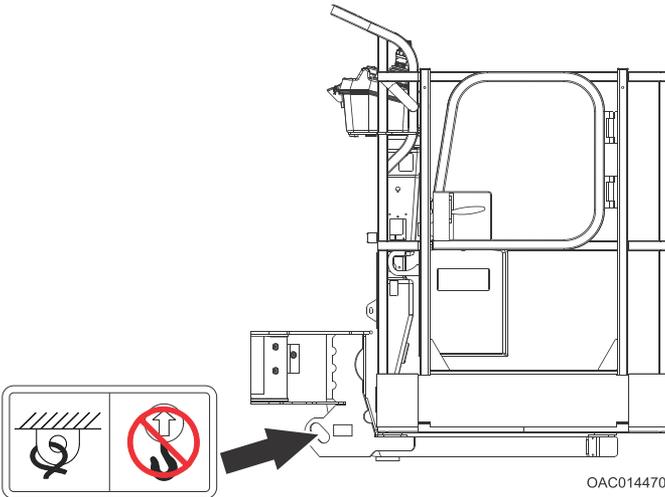

## NOTICE

Secure turntable with turntable lock (if equipped) before traveling long distances or hauling machine on truck/trailer.

## 4.24 600S/660SJ LIFTING CHART

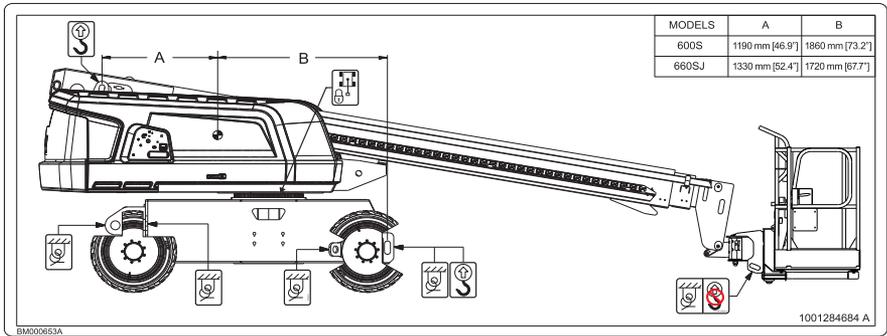

## 4.25 SAFETY DECALS AND LOCATIONS

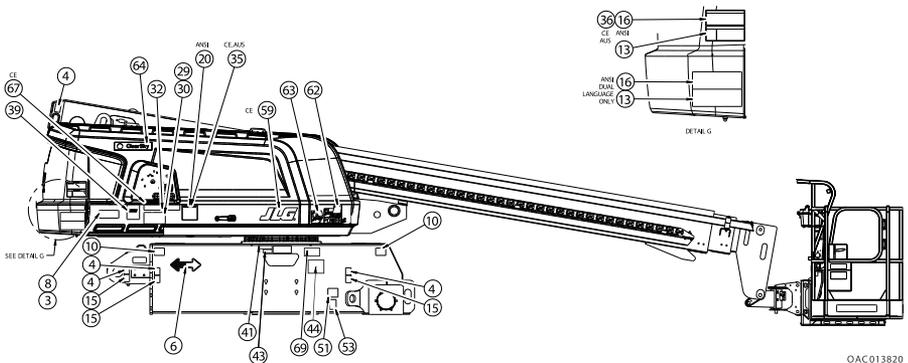


Figure 19. 600S/660SJ Decal Installation - 1 of 6

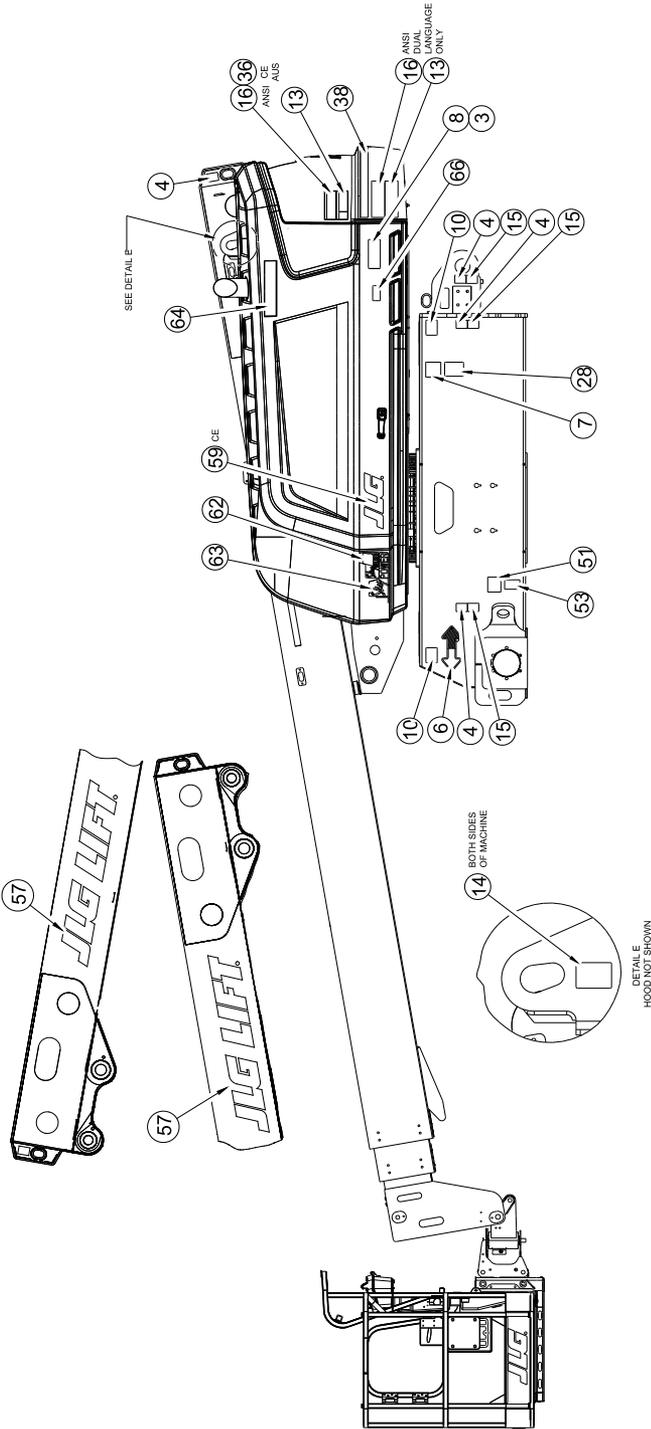


Figure 20. 600S/660SJ Decal Installation - 2 of 6

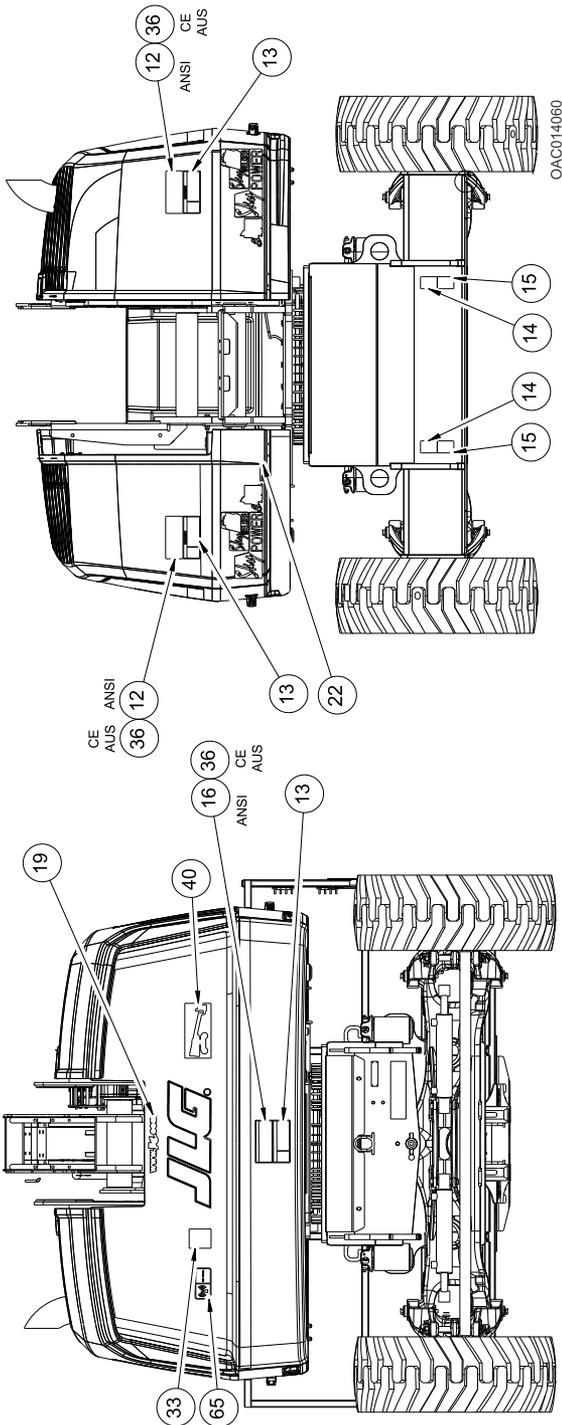


Figure 21. 600S/660SJ Decal Installation - 3 of 6

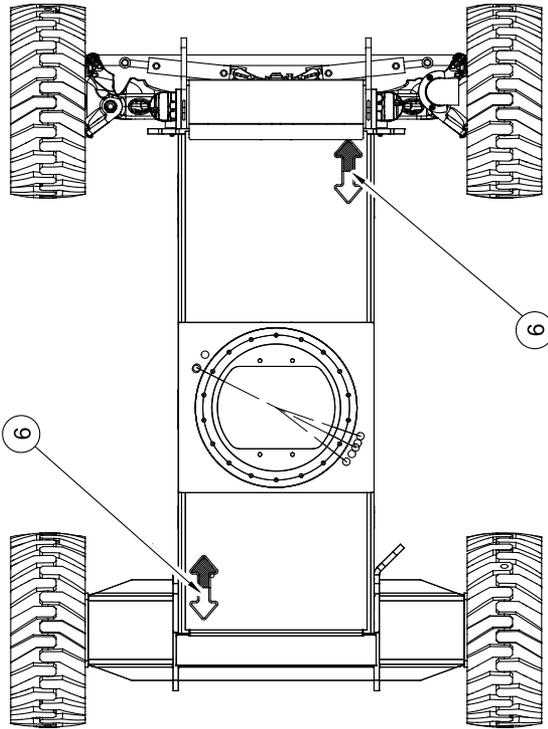


Figure 22. 600S/660SJ Decal Installation - 4 of 6

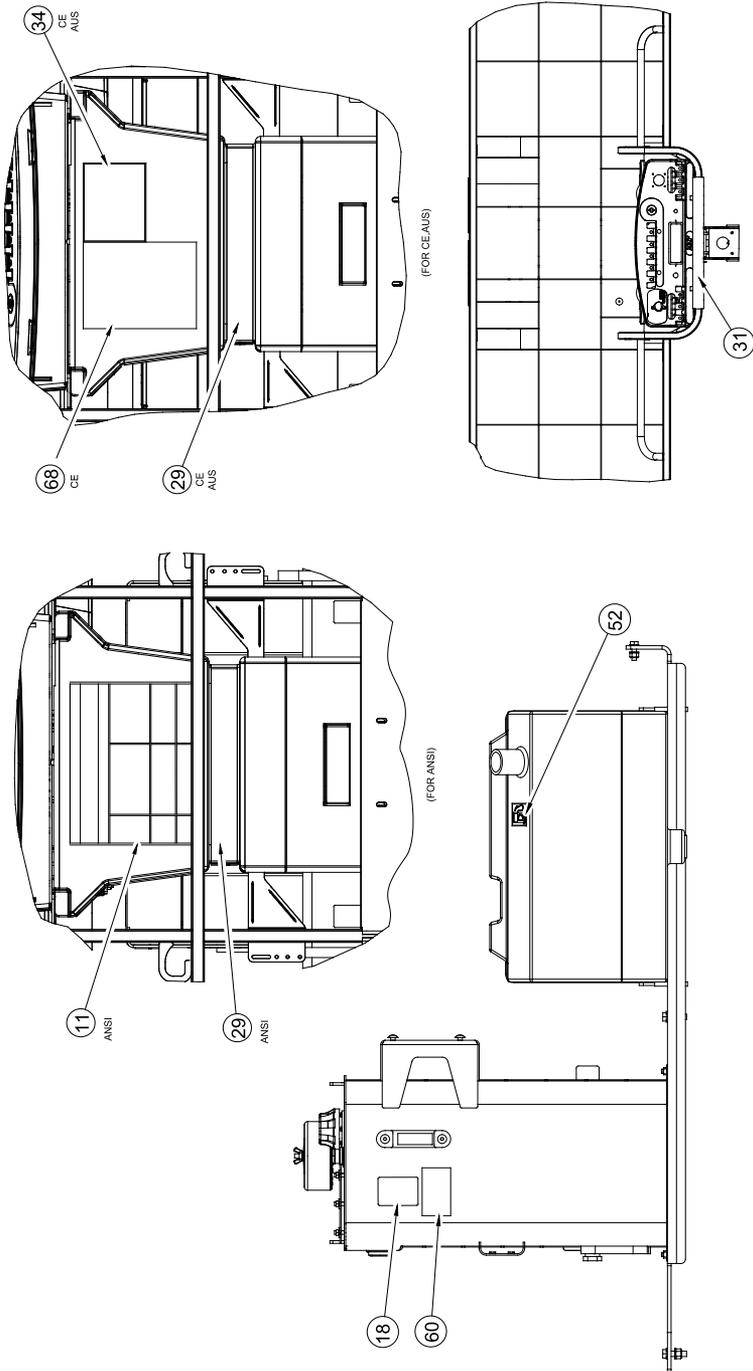


Figure 23. 600S/660SJ Decal Installation - 5 of 6

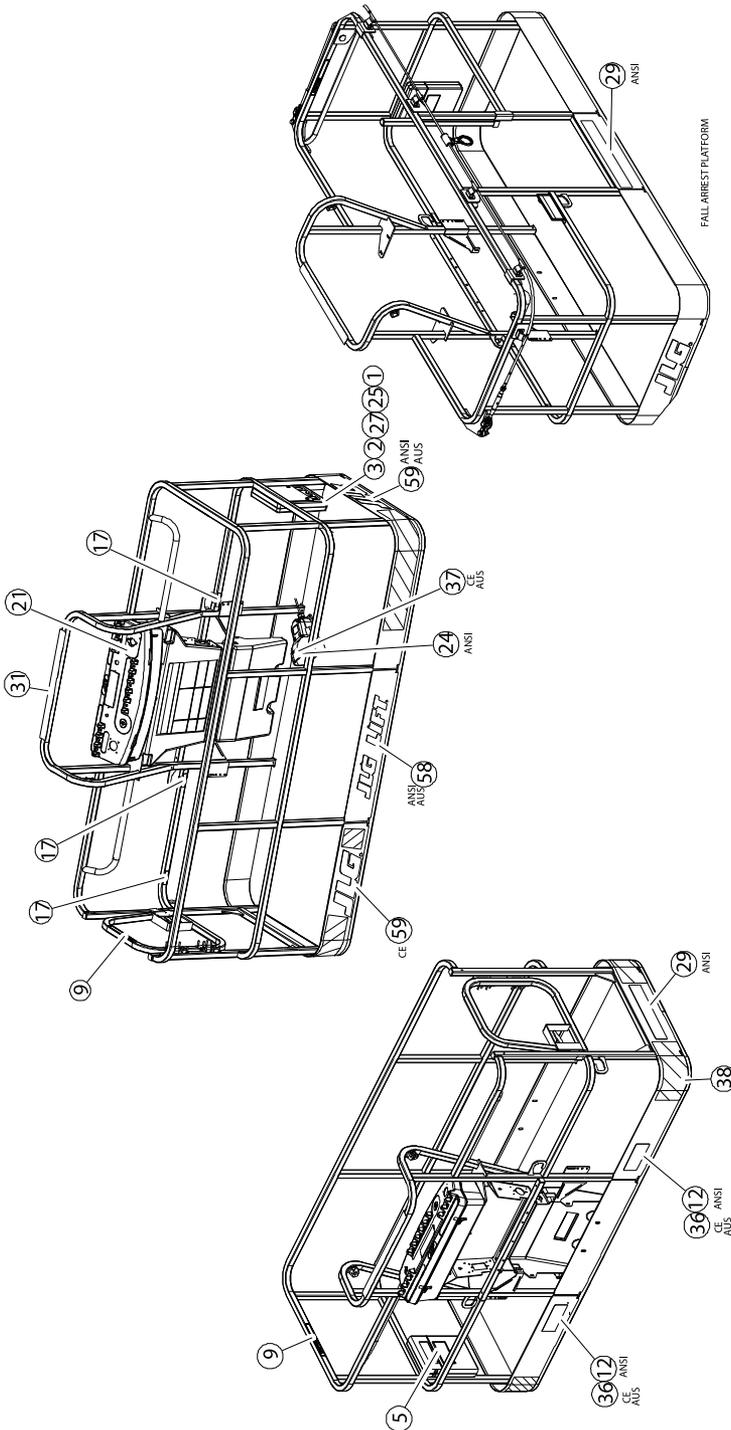


Figure 24. 600S/660SJ Decal Installation - 6 of 6

Table 7. 600S HC3/660SJ HC3 Decal Legend

Item #	ANSI 1001235387-B	Korean 1001235388-B	Trad. Chinese 1001235444-B	Simpl. Chinese 1001235445-B	Portuguese 1001235446-B	Spanish 1001235447-B	French 1001235448-B	CE/UKCA 1001235449-A	Japanese 1001235450-B	Australian 1001250609-C
3	1702817	1702817	1702817	1702817	1702817	1702817	1702817	1702817	1702817	1702817
4	1701499	1701499	1701499	1701499	1701499	1701499	1701499	1701499	1701499	1701499
5	1701509	1701509	1701509	1701509	1701509	1701509	1701509	1701509	1701509	1701509
6	1701529	1701529	1701529	1701529	1701529	1701529	1701529	1701529	1701529	1701529
7	1702631	1702631	1702631	1702631	1702631	1702631	1702631	1702631	1702631	1702631
8	--	--	--	--	--	--	--	--	--	--
9	1702868	1705969	1001116846	1705968	1704002	1704001	1704000	--	--	--
10	1703470	1703470	1703470	1703470	1703470	1703470	1703470	1703470	1703470	1703470
11	1703797	1703927	1703925	1001116847	1703928	1703923	1703924	--	1703926	--
12	1703804	1703951	1703949	1001116850	1703952	1703947	1703948	--	1703950	--
13	1703805	1703939	1001116851	1703937	1703940	1703935	1703936	1705961	1703938	1705961
14	1703811	1703811	1703811	1703811	1703811	1703811	1703811	1703811	1703811	1703811
15	1703814	1703814	1703814	1703814	1703814	1703814	1703814	1703814	1703814	1703814
16	1703953	1703945	1703943	1001116845	1703946	1703941	1703942	--	1703944	--
17	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277
18	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412
19	--	--	--	--	--	--	--	--	--	--
20	1705336	1705345	1001116849	1001116848	1705349	1705917	1705347	--	1705344	--

Table 7. 600S HC3/660SJ HC3 Decal Legend (continued)

Item #	ANSI 1001235387-B	Korean 1001235388-B	Trad. Chinese 1001235444-B	Simpl. Chinese 1001235445-B	Portuguese 1001235446-B	Spanish 1001235447-B	French 1001235448-B	CE/UKCA 1001235449-A	Japanese 1001235450-B	Australian 1001250609-C
21	1705351	1705427	100116863	1705430	100113680	1705910	1705429	--	1705426	--
22	3251243	--	3251243	3251243	3251243	3251243	3251243	--	3251243	--
24	3252347	1703981	1703982	100116852	1703985	1703983	1703984	--	1703980	--
28	1001131269	--	--	--	--	--	100131269	--	--	--
29	1001234425	1001234430	1001234435	1001235401	1001234437	1001234431	1001234433	1001234439	1001234428	1001234439
30	1001234426	1001235585	1001234436	1001235402	1001234438	1001234432	1001234434	1001234439	1001234429	1001234439
31	1001241531	--	--	--	--	--	--	--	--	--
32	1001241532	--	--	--	--	--	--	--	--	--
33	--	--	--	--	--	--	--	1001130492	--	1001130492
34	--	--	--	--	--	--	--	1705921	--	1705921
35	--	--	--	--	--	--	--	1705822	--	1705822
36	--	--	--	--	--	--	--	1701518	--	1701518
37	--	--	--	--	--	--	--	1705828	--	1705828
38	4420051	4420051	4420051	4420051	4420051	4420051	4420051	4420051	4420051	4420051
39	--	--	--	--	--	--	--	--	--	100112551
40	1001284684	1001284684	1001284684	1001284684	1001284684	1001284684	1001284684	1001284684	1001284684	1001284684
43	1001223453	--	--	--	--	--	1001223453	--	--	--
44	1001223055	1001224048	1001224050	1001224051	1001224052	1001224049	1001223971	--	1001224053	--

Table 7. 600S HC3/660SJ HC3 Decal Legend (continued)

Item #	ANSI 1001235387-B	Korean 1001235388-B	Trad. Chinese 1001235444-B	Simpl. Chinese 1001235445-B	Portuguese 1001235446-B	Spanish 1001235447-B	French 1001235448-B	CE/UKCA 1001235449-A	Japanese 1001235450-B	Australian 1001250609-C
51	1700818	1700818	1700818	1700818	1700818	1700818	1700818	--	1700818	1700818
52	1701505	1701505	1701505	1701505	1701505	1701505	1701505	1701505	1701505	1701505
53	1701542	1701542	1701542	1701542	1701542	1701542	1701542	--	1701542	1701542
57-63	--	--	--	--	--	--	--	--	--	--
64	100116208	100116208	100116208	100116208	100116208	100116208	100116208	100116208	100116208	100116208
65	1001120989	1001120989	1001120989	1001120989	1001120989	1001120989	1001120989	1001120989	1001120989	1001120989
66	1001143852	1001143852	1001143852	1001143852	1001143852	1001143852	1001143852	1001143852	1001143852	1001143852
67	--	--	--	--	--	--	--	1001197408	--	--
68	--	--	--	--	--	--	--	1001181145	--	--
69	--	--	--	--	--	--	--	--	--	1001231422
70	1001231801	--	--	--	--	--	--	--	--	--
71	1001233961	1001184618	1001184618	1001184618	1001184618	1001184618	1001184618	1001235088	1001184618	1001184618
72-74	--	--	--	--	--	--	--	--	--	--

**This Page is intentionally left blank**

**This Page is intentionally left blank**

## SECTION 5

# Emergency Procedures

---

### 5.1 GENERAL

---

This section explains the steps to be taken in case of an emergency situation during operation.

### 5.2 INCIDENT NOTIFICATION

---

JLG Industries, Inc. must be notified immediately of any incident involving a JLG product. Even if no injury or property damage is evident, the factory should be contacted by telephone and provided with all necessary details.

- USA: 877-JLG-SAFE (554-7233)
- EUROPE: (32) 0 89 84 82 20
- AUSTRALIA: (61) 2 65 811111
- E-mail: ProductSafety@JLG.com

Failure to notify the manufacturer of an incident involving a JLG Industries product within 48 hours of such an occurrence may void any warranty consideration on that particular machine.

## **NOTICE**

Following any incident, thoroughly inspect the machine and test all functions first from the ground controls, then from the platform controls. Do not lift above 3 m (10 ft.) until you are sure that all damage has been repaired, if required, and that all controls are operating correctly.

---

## 5.3 EMERGENCY OPERATION

---

### 5.3.1 Operator Unable to Control Machine

If the platform operator is pinned, trapped or unable to operate or control machine, do the following:

1. Other personnel should operate the machine from ground controls only as required.
2. Other qualified personnel on the platform may use the platform controls.

## WARNING

Do not continue operation if controls do not function properly.

3. Cranes, forklift trucks or other equipment can be used to remove platform occupants and stabilize motion of the machine.

### 5.3.2 Platform or Boom Caught Overhead

If the platform or boom becomes jammed or snagged in overhead structures or equipment, do the following:

1. Shut off the machine.
2. Rescue all people in the platform before freeing the machine. Personnel must be out of the platform before operating any controls on the machine.
3. Use cranes, forklifts, or other equipment to stabilize motion of the machine to prevent a tip over as required.
4. From the ground controls, use the Auxiliary Power System (if equipped) to carefully free the platform or boom from the object.
5. Once clear, restart the machine and return the platform to a safe position.
6. Inspect the machine for damage. If the machine is damaged or does not operate properly, turn off the machine immediately. Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

## 5.4 EMERGENCY TOWING PROCEDURES

---

Towing this machine is prohibited, unless properly equipped. However, provisions for moving the machine have been incorporated. For specific procedures, refer to the Machine Operation section.

### 5.5 MACHINE SAFETY SYSTEM OVERRIDE (MSSO) (IF EQUIPPED)

---

The Machine Safety System Override (MSSO) is only to be used to retrieve an operator that is pinned, trapped, or unable to operate the machine. The MSSO will override function controls that are locked out from the platform and ground consoles. An example of this would be in the case of Load Sense System activation.



**Note:** If the MSSO functionality is used, a fault indicator is set with a fault code in the JLG Control System which must be reset by a qualified JLG Service Technician.

**Note:** No functional checks of the MSSO system are necessary. The JLG Control System will set a Diagnostic Trouble Code if the control switch is faulty.

**Note:** If the engine is not running, MSSO will function through the Auxiliary Power system.

To operate the MSSO, perform the following:

1. From the Ground Control Console, place the Platform/Ground Select switch into the Ground position.
2. Pull out the Power/Emergency Stop control switch.
3. Start the engine.
4. Press and hold the MSSO switch and the control switch for the desired function.

# SECTION 6

## Accessories

### 6.1 AVAILABLE ACCESSORIES AND RELATIONSHIP TABLE

**Table 8. Available Accessories Table**

Accessory	Market							
	ANSI (USA Only)	ANSI	CSA	CE/ UKCA	AUS	MOL 70 (Japan)	GB (China)	EAC
Bolt-On External Fall Arrest	✓	✓	✓		✓	✓	✓	
Fabric Mesh to Mid Rail	✓	✓			✓		✓	
Fabric Mesh to Top Rail	✓	✓	✓				✓	
Fall Arrest Platform (36" x 72") (36" x 96")	✓	✓	✓				✓	
Nite Bright®	✓	✓	✓	✓	✓	✓	✓	✓
Pipe Racks	✓	✓	✓	✓	✓	✓	✓	✓
Platform Mesh to Mid Rail	✓	✓			✓		✓	
Platform Mesh to Top Rail	✓	✓	✓				✓	
Platform Top Rail Extension	✓	✓	✓	✓	✓	✓	✓	✓
Platform Work Lights	✓	✓	✓	✓	✓	✓	✓	✓
SkyGlazier®	✓	✓	✓		✓			
SkyPower® - 7.5 kW	✓	✓	✓		✓	✓	✓	✓
Generator - 4 kW	✓	✓	✓	✓	✓	✓	✓	✓
SkySense®	✓	✓	✓	✓	✓	✓	✓	✓

**Table 8. Available Accessories Table (continued)**

Accessory	Market							
	ANSI (USA Only)	ANSI	CSA	CE/ UKCA	AUS	MOL 70 (Japan)	GB (China)	EAC
SkySense® Platform Bumper Padding	✓	✓	✓	✓	✓		✓	✓
SkyWelder®	✓	✓	✓		✓	✓	✓	✓
Soft Touch	✓	✓	✓	✓	✓		✓	✓
Storage Tray	✓	✓	✓	✓	✓	✓	✓	✓

Table 9. Accessories/Options Relationship Table


Accessory	Required Item	Compatible With (Note 1)	Incompatible With	Interchangeable With (Note 2)
Nite Bright			Platform Bumper Padding, Platform/Fabric MMR*, Platform/Fabric MTR**, Platform Work Lights, Top Rail Extension	
Pipe Racks		SkyPower	Platform MMR*, Platform MTR**, SkySense, Soft Touch	SkyGlazier, SkyWelder
SkyGlazier		SkyPower	Pipe Racks, 4 ft Platform, Platform/Fabric MMR*, Platform/Fabric MTR**, Platform Bumper Padding, SkySense, Soft Touch, Top Rail Extension	SkyWelder
SkyPower		Nite Bright, SkyGlazier, SkyWelder	SkySense	
SkySense			Pipe Racks, Platform MMR*, Platform MTR**, SkyGlazier, SkyPower, SkyWelder, Soft Touch, Top Rail Extension	
SkySense Platform Bumper Padding		SkySense	Nite Bright, SkyWelder, Platform/Fabric MTR, Platform/Fabric MMR, Storage Tray, Top Rail Extension, Sky Glazier	
SkyWelder	SkyPower	Nite Bright	Pipe Racks, 4 ft Platform, Platform/Fabric MMR*, Platform/Fabric MTR**, Platform Bumper Padding, Soft Touch	SkyGlazier
Soft Touch		SkyPower	Pipe Racks, Platform Bumper Padding, SkyGlazier, SkySense, SkyWelder	

**Note:** 1. Any non - "Sky" accessory not listed under "Incompatible With" is assumed to be compatible.

**Note:** 2. Can be used on the same unit but not simultaneously.

\* MMR = Mesh to Mid Rail; \*\* MTR = Mesh to Top Rail

## 6.2 BOLT-ON EXTERNAL FALL ARREST

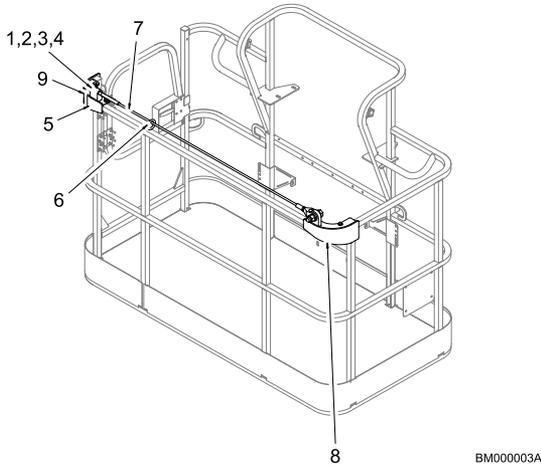

**Figure 25. Bolt-On External Fall Arrest System**

- |                      |                    |               |
|----------------------|--------------------|---------------|
| 1. Belleville Washer | 4. Jam Nut         | 7. Cable      |
| 2. Washer            | 5. LH Bracket      | 8. RH Bracket |
| 3. Hex Nut           | 6. Attachment Ring | 9. Decal      |

The bolt-on external fall arrest system is designed to provide a lanyard attach point while allowing the operator to access areas outside the platform. Exit/Enter the platform through the gate area only. The system is designed for use by one person.

Personnel must use fall protection at all times. A full body harness is required with lanyard not to exceed 6 ft (1.8 m) in length, that limits the maximum arrest force to 900 lb (408 kg).

External Fall Arrest System capacity is 310 lb (140 kg) - one (1) person maximum.

Do not move platform during use of the external fall arrest system.

### **⚠ WARNING**

Do not operate any machine functions while outside of platform. Be careful when entering/exiting the platform at elevation.

### **⚠ WARNING**

If the external fall arrest system is used to arrest a fall or is otherwise damaged, the entire system must be replaced and the platform fully inspected before returning to service. Refer to the service manual for removal and installation procedures.

# NOTICE


The external fall arrest system requires an annual inspection and certification. The annual inspection and certification must be performed by a qualified person other than the user.

## 6.2.1 Inspection Before Use


The external fall arrest system must be inspected before each use of the machine. Replace components if there are any signs of wear or damage.

Before each use, perform a visual inspection of the following components:

- Cable: Inspect cable for proper tension, broken strands, kinks, or any signs of corrosion.

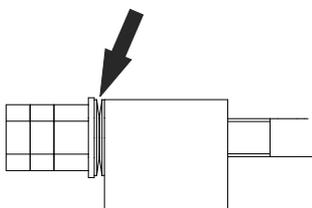

**Figure 26. Incorrect Gap**

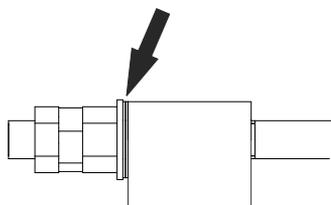

**Figure 27. Correct Gap**

**Note:** There should be no visible gap between the two Belleville washers when setting proper cable tension. If any gap is shown between the two Belleville washers, the cable tension is incorrect.

- Fittings & Brackets: Ensure all fittings are tight and there are no signs of fractures. Inspect brackets for any damage.
- Attachment Ring: No cracks or signs of wear are acceptable. Any signs of corrosion requires replacement.
- Attaching Hardware: Inspect all attaching hardware to ensure there are no missing components and hardware is properly tightened.
- Platform Rails: No visible damage is acceptable.

## 6.3 FABRIC MESH TO MID OR TOP RAIL

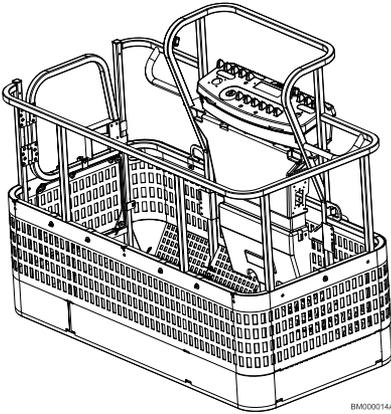


Figure 28. Fabric Mesh to Mid Rail

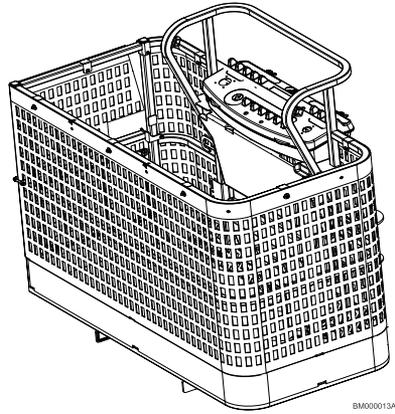


Figure 29. Fabric Mesh to Top Rail

The Fabric Mesh accessory consists of a flame retardant, lightweight mesh which is attached to the mid platform rail **or** the top platform rail.

## 6.4 FALL ARREST PLATFORM

**Note:** See the JLG External Fall Arrest System manual (PN 3128935) for more detailed information.

The external fall arrest system is designed to provide a lanyard attach point while allowing the operator to access areas outside the platform. Exit/enter the platform through the gate area only. The system is designed for use by one person.


Personnel must use fall protection at all times. A full body harness is required with lanyard not to exceed 6 ft (1.8 m) in length, that limits the maximum arrest force to 900 lb (408 kg) for the transfaster type and 1350 lb (612 kg) for the shuttle type fall arrest system.

### 6.4.1 Safety Precautions

# ⚠ WARNING

Do not operate any machine functions while outside the platform. Use caution when entering/exiting the platform at elevation.

## 6.5 NITE BRIGHT®

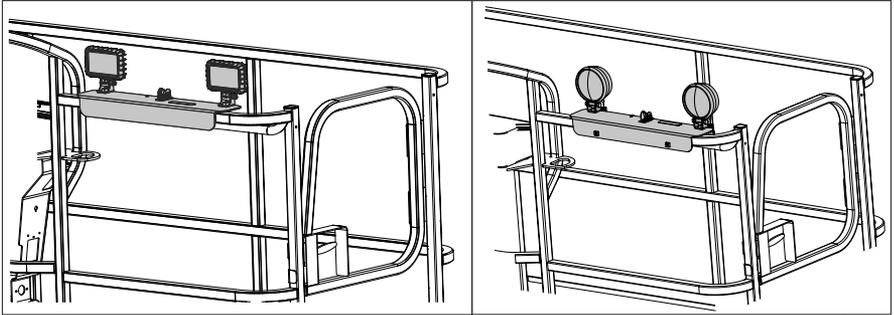


**Figure 30. Nite Bright**

The Nite Bright light package\* consists of two 40W lights mounted to the platform railing.

\* Appearance of Nite Bright lights may vary.

## 6.6 PIPE RACKS

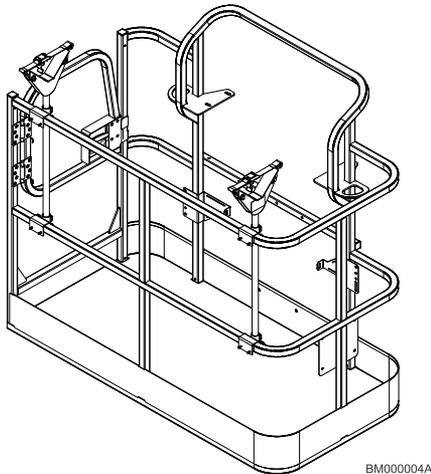

**Figure 31. Pipe Racks**

Pipe Racks provide a way to store pipe or conduit inside the platform in order to prevent rail damage and optimize platform utility. This accessory consists of two racks with adjustable straps to secure the load in place.

### 6.6.1 Capacity Specifications (Australia Only)

Max. Capacity in Racks	Max. Platform Capacity (With Max. Weight in Racks)
80 kg	184 kg
Max. Length of Material in Racks: 6.0 m Min. Length of Material in Racks: 2.4 m	

### 6.6.2 Safety Precautions

## WARNING

Reduce platform capacity by 100 lb (45.5 kg) when installed.

## WARNING

Weight in racks plus weight in platform must not exceed rated capacity.

## NOTICE

The maximum load in the racks is 180 lb (80 kg) evenly distributed between the two racks.

## NOTICE

The maximum length of material in racks is 20 ft (6.1 m).

- Ensure no personnel are beneath the platform.
- Do not exit platform over rails or stand on rails.
- Do not drive machine without material secured.
- Return racks to the stowed position when not in use.
- Use this option only on approved models.

### 6.6.3 Preparation and Inspection


- Ensure racks are secured to the platform rails.
- Replace torn or frayed tie-down straps.

### 6.6.4 Operation


1. To prepare racks for loading, remove locking pins, rotate each rack 90 degrees from stowed to working position, then secure with locking pins.
2. Loosen and remove tie-down straps. Place material on racks with weight evenly distributed between both racks.
3. Route the tie-down straps at each end across loaded material and tighten.
4. To remove material, loosen and remove tie-down straps, then carefully remove material from racks.

**Note:** Reinstall tie-down straps across any remaining material before continuing machine operations.

## 6.7 PLATFORM MESH TO MID OR TOP RAIL

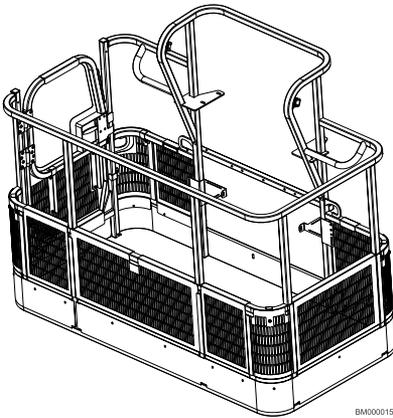

**Figure 32. Platform Mesh to Mid Rail**

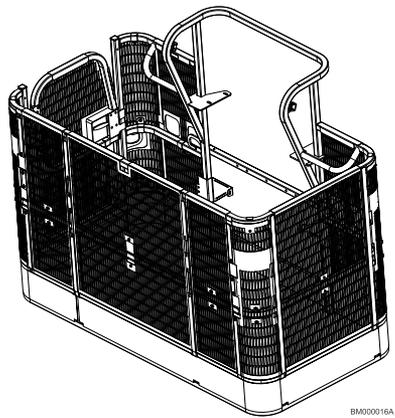


**Figure 33. Platform Mesh to Top Rail**

The Platform Mesh to Mid Rail accessory consists of stainless steel mesh attached to the platform mid rail.

The Platform Mesh to Top Rail accessory consists of lightweight, aluminum mesh attached to the platform top rail.

## 6.8 PLATFORM TOP RAIL EXTENSION

---

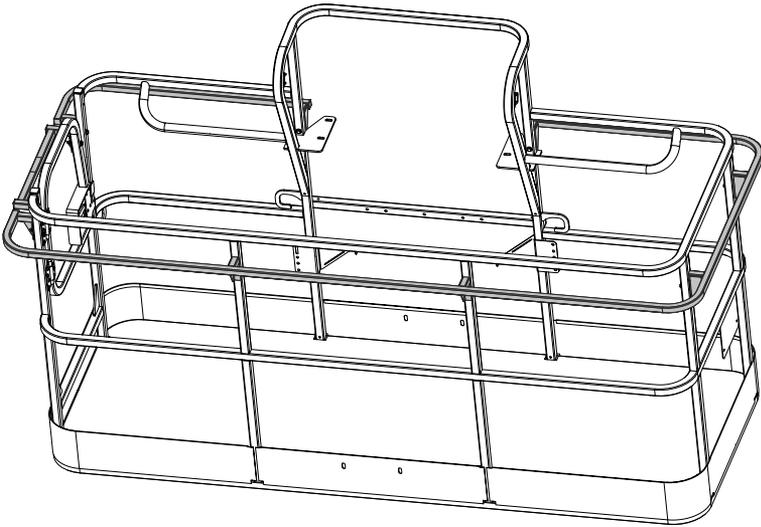


BM000017A

**Figure 34. Platform Top Rail Extension**

The Platform Top Rail Extension accessory consists of an additional bar extending from all sides of the platform.


## 6.9 PLATFORM WORK LIGHTS

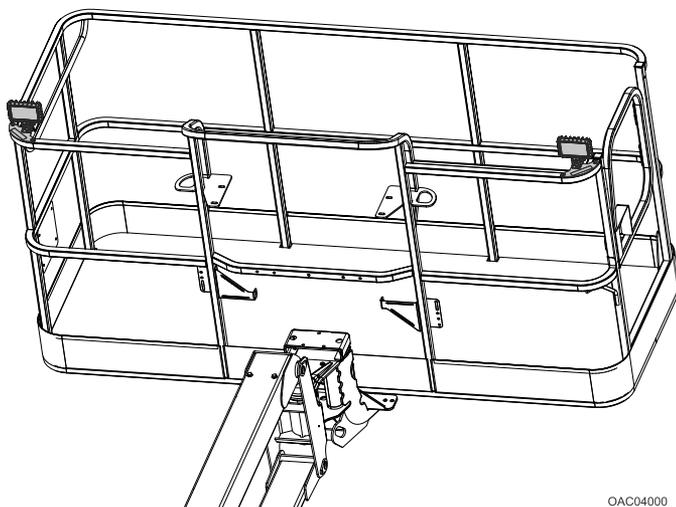

**Figure 35. Platform Work Lights**

The Platform Work Lights accessory consists of two 12V lights mounted to the platform railing.

## 6.10 SKYGLAZIER®

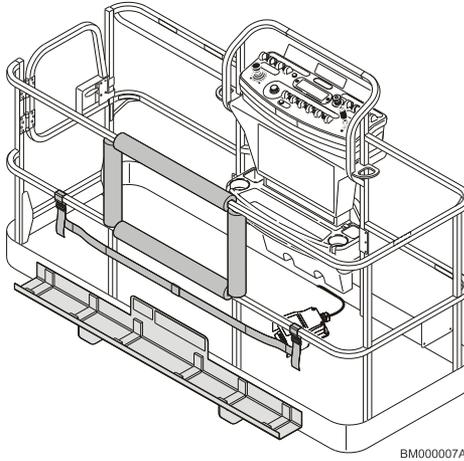

**Figure 36. SkyGlazier System**

SkyGlazier allows glaziers to position panels efficiently. The glazier package consists of a tray that attaches to the bottom of the platform. The panel rests on the tray and against top-rail of the platform, which is padded to prevent damage. SkyGlazier includes a strap to secure the panel to the platform rail.

### 6.10.1 Capacity Specifications

Capacity Zone *	Max. Tray Capacity	Max. Platform Capacity With Max. Weight in Tray
500 lb (227 kg)	150 lb (68 kg)	250 lb (113 kg)
550 lb (250 kg)	150 lb (68 kg)	250 lb (113 kg)
600 lb (272 kg)	150 lb (68 kg)	250 lb (113 kg)
660 lb (300 kg)	150 lb (68 kg)	350 lb (160 kg)
750 lb (340 kg)	150 lb (68 kg)	440 lb (200 kg)
1000 lb (454 kg)	250 lb (113 kg)	500 lb (227 kg)

\* Refer to the capacity decals installed on the machine for capacity zone information.

**Required Platform Type:** Side-Entry

**Maximum Dimensions of Panel:** 32 sq ft (3 sq m)

**Maximum Wind Speed:** 20 mph (32 kph)

## 6.10.2 Safety Precautions

### **WARNING**

Ensure panel is secured with strap.

### **WARNING**

Do not overload tray or platform. Total machine capacity is reduced when tray is installed.

### **WARNING**

With SkyGlazier installed, the original platform capacity ratings are reduced as specified in the specifications table above. Do not exceed the new platform capacity rating. Refer to capacity decal located on tray.

### **WARNING**

An increase of the area exposed to the wind will decrease stability. Limit panel area to 32 sq ft (3 sq m). Maximum allowable wind speed is 20 mph (32 kph).

- Ensure no personnel are beneath platform.
- Do not exit platform over rails or stand on rails.
- Remove tray when not in use.
- Use this option only on approved models.


## 6.10.3 Preparation and Inspection

- Check for cracked welds and damage to tray.
- Ensure tray is properly secured to platform.
- Ensure strap is not torn or frayed.

## 6.10.4 Operation

1. Load SkyGlazier tray with panel.
2. Position panel to its desired location on the tray.
3. Route the adjustable strap around the panel and tighten until secure.

## 6.11 SKYPOWER® 7.5 KW AND GENERATOR 4 KW

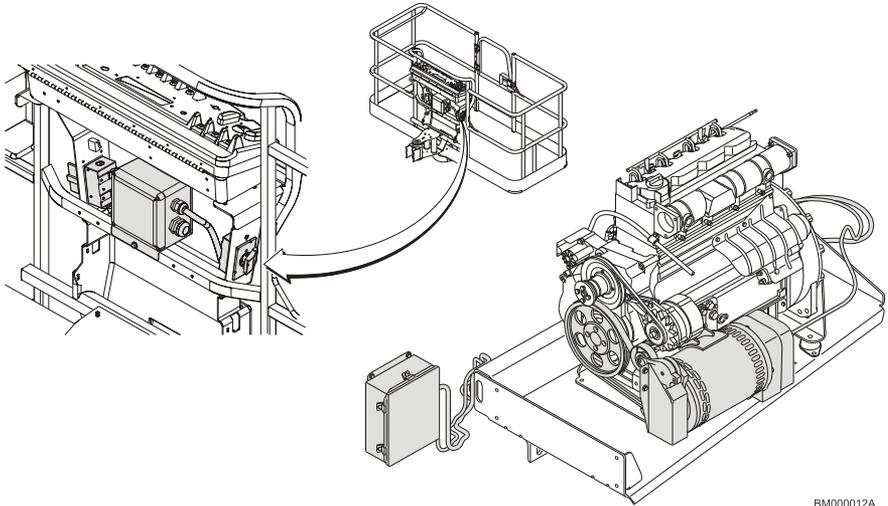

BM000012A

**Figure 37. SkyPower and Generator Systems**

The SkyPower and generator systems supply AC power to the platform through an AC receptacle to run tools, lights, cutting, and welding equipment.

All power regulation components are located in a watertight box connected by cable to the generator. The generator supplies power when running at the specified speed with the power switch on (switch is located on platform). A two-pole, 20 A (4 kW) or a three-pole, 30 A (7.5 kW) circuit breaker protects the generator from overload.

### 6.11.1 Output

#### **SkyPower 7.5 kW Specifications:**

- 3-phase: 240 V, 60 Hz, 7.5 kW (Peak: 8.5 kW)
- 1-phase: 240 V / 120 V, 60 Hz, 6 kW (Peak: 6 kW)

#### **Generator 4 kW Specifications:**

- 1-phase: 240 V / 120 V, 60 Hz, 4 kW
- 1-phase: 230 V / 115 V, 50 Hz, 4 kW

## 6.11.2 Safety Precautions

### **WARNING**

Do not overload platform.

- Ensure no personnel are beneath platform.
- This factory-installed option is available only on specified models.
- Keep lanyard attached at all times.
- Do not use electrical tools in water.
- Use correct voltage for tool being used.
- Do not overload circuit.

## 6.11.3 Preparation and Inspection

- Ensure generator is secure.
- Check condition of belt and wiring.

## 6.11.4 Operation

Start the engine, then turn on the generator.

Refer to the Miller Generator Technical Manual (PN 3121677) for more information.

## 6.12 SKYSENSE®

### **WARNING**

SkySense is not intended to replace or reduce the need for the operator to be aware of the environment around the machine. Hazards that will cause serious injury or death may not be prevented or reduced by SkySense. The operator must always look in the direction of travel, avoid power lines, avoid obstacles that could strike the machine or persons in the platform, and follow all instructions, decals, and other warnings provided with this machine.

The operator must not rely on SkySense as a substitute for following the instructions and warnings contained in the manuals and placards provided with this machine.

SkySense is intended to assist the operator. SkySense may not detect certain objects depending on shape, type of material, or orientation of the object to the sensors. It is the operator's responsibility to be aware of their surroundings at all times.

## **WARNING**

De-rate the platform by 10 lb (4.5 kg) per bar when installed on the platform (20 lb (9 kg) or 30 lb (14 kg) total).

**Note:** SkySense is not active when operating the machine from the ground controls.

### **6.12.1 Preparation and Inspection**

Pre-Operation Inspection:

1. Inspect each of the SkySense tubes for dents, cracks, or other damage.
2. Inspect each SkySense sensor for any damage to the housing or sensor.

To test the SkySense system:

1. In an area free of obstructions, ensure the machine is on a smooth, firm surface within the limits of the maximum operating slope.
2. From the platform control console, elevate the boom until the bottom of the platform is at least 6 feet off the ground.
3. Continue to elevate the platform.
4. While elevating, hold your hand 6 inches to 12 inches above one of the upward facing sensors. The machine should stop, and the LED corresponding to that sensor (left LED for left sensor bar; right LED for right sensor bar; both LEDs for center sensor bar or overhead sensor) should be red.
5. Recycle the footswitch and press the override button on the platform control console.
6. Ensure the area below the platform is clear of obstructions and lower the platform. The machine should slow down, (SkySense Status LED will blink yellow with increasing frequency) and stop, (SkySense Status LED will be illuminated solid red) when the bottom of the platform is approximately 12 inches from the ground. The alarm should sound if it is not muted (refer to SkySense Alarm).
7. Recycle the footswitch and press the override button on the platform control console.
8. Continue to lower the platform. The machine should move in the elevated drive speed mode (SkySense Status LED will remain red).

**Note:** The SkySense system will not stop machine operation while in Creep.

## 6.12.2 Operation

SkySense slows a machine's function to creep speed when it is a certain distance away from an object, known as the "warning zone." If the machine continues to approach the object and moves into the "stop zone," SkySense stops all machine functions.

For proportional functions activated by the joystick, the size of the warning zone varies based on the amount of joystick activation. The stop zone always activates at the same distance from the object regardless of the joystick's position.

If the function has reached the warning zone, normal drive speed will resume when a function is activated in the opposite direction. If the machine has reached the SkySense stop zone, release the function and recycle the footswitch to activate a function in the opposite direction.

SkySense is active during the following functions:


- Lift Up/Down (including jib functions)
- Platform Rotate (including jib rotate)
- Telescope Out
- Swing
- Reverse Drive

**Note:** During active DOS (Drive Orientation System), SkySense is active when driving in both forward and reverse directions.

There are two LED indicators on the platform control box that signal SkySense activity.

- **No LED:** Normal operation.
- **LED Flashing Yellow:** Machine is in SkySense warning zone and will reduce function speed to creep. Flash frequency correlates to proximity of object.
- **LED Red:** Machine is in SkySense stop zone and all machine functions will cease.
- **LED Flashing Red:** SkySense sensor is obstructed or damaged. Obstructions must be removed and proper function verified. Damaged sensors must be replaced.

### 6.12.3 SkySense Platform Panel Indicators

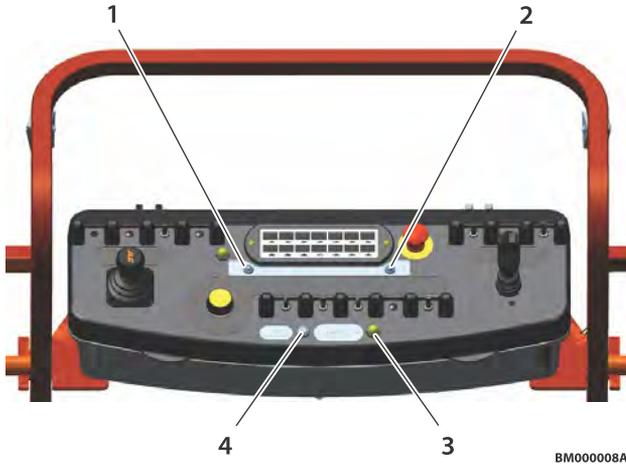

- 1. LED Indicator Light
- 2. LED Indicator Light

- 3. Override Button
- 4. Mute Speaker Button

### 6.12.4 SkySense Alarm

Activation of SkySense is signaled by an audible alarm and the LEDs on the platform console that indicate SkySense activity when reaching the warning or stop zones.

In the warning zone, the audible alarm will pulse and increase in frequency as the machine moves closer to the object. In the stop zone, the alarm will sound a continuous tone.

Additionally, when the machine is in the stop zone, the platform control panel audible alarm will sound. The system may be reset by recycling the footswitch.

The audible SkySense alarms can be muted by a button on the platform control console, although LEDs will continue to light. The platform control panel alarm will sound when the machine enters the SkySense stop zone even when muted.

### 6.12.5 SkySense Override Button

The yellow override button allows operators to bypass normal SkySense operation in order to move closer to an object in the stop zone.

When the operator overrides the SkySense via the override button to get closer to a work surface, the machine will maintain creep speed and flash the appropriate indicator color based on location in either the warning or stop zones.

**Note:** Override is only required to be engaged if the operator desires to move the platform closer to an object that is in or entering the stop zone.

# NOTICE


SkyGuard operation is affected when SkySense is installed on a machine. If SkySense activation occurs prior to SkyGuard activation, SkyGuard will only cut out functions if activated. If SkyGuard activation occurs prior to SkySense activation, SkyGuard will function normally.

## 6.12.6 SkySense Coverage Areas



BM000009A

**Figure 38. SkySense Coverage Level 1 Areas (2-Bar)**

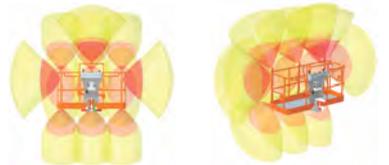


BM000010A

**Figure 39. SkySense Coverage Level 2 Areas (3-Bar)**

**Note:** Sensor Cones shown are approximations for reference only.

## 6.13 SKYSENSE® PLATFORM BUMPER PADDING

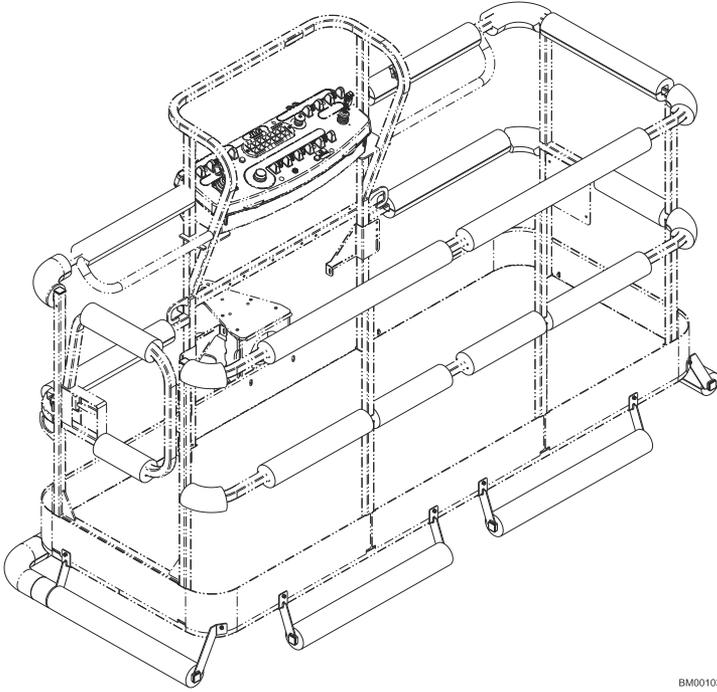


BM001038A

**Figure 40. Platform Bumper Padding**

This accessory outfits machines equipped with the SkySense accessory additional padding for the platform.

## 6.14 SKYWELDER®

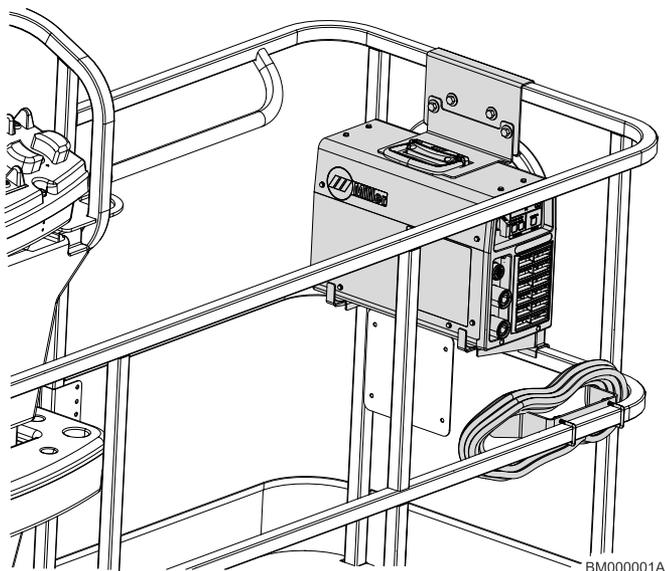

**Figure 41. SkyWelder System**

SkyWelder is capable of TIG and Stick welding, producing 200 A at 100% duty cycle or 250 A at 50% duty cycle. This accessory receives power from the SkyPower system.

### 6.14.1 Operation

Start the engine, turn on the generator, then turn on the welder.

See the Miller Welder Owner's Manual (PN 31215476) for more information.

### 6.14.2 Generator Output

Engine Speed of 1800 rpm +/- 10%.

#### **ANSI Specifications:**

- 3-phase: 240 V, 60 Hz, 7.5 kW
- 1-phase: 240 V/120 V, 60 Hz, 6 kW

Table 10. Accessory Ratings Table

Welding Mode	Input Power	Rated Output	Welding Amperage Range	Maximum Open Circuit Voltage	Ampere Input at Rated Load Output (50/60 Hz)					KVA	KW
					208 V	230 V	400 V	460 V	575 V		
Stick (SMAW)	3 — phase	280 A at 31.2 VDC, 35% Duty Cycle	30 — 280 A	103 VDC	29.63	26.65	15.71	13.92	12.08	12	10.2
		200 A at 28 VDC, 100% Duty Cycle			18.86	17.09	10.6	9.37	8.02	8	6.4
	200 A at 28 VDC, 50% Duty Cycle	30 — 200 A	33.7		30.65	17.61	16.18	14.51	8.3	6.6	
	150 A at 26 VDC, 100% Duty Cycle		23.07		20.59	12.97	11.8	11.15	6.4	4.5	
TIG (GTAW)	3 — phase	280 A at 21.2 VDC, 35% Duty Cycle	5 — 280 A	9.5 VDC	20.77	18.85	11.54	10.22	8.95	8.9	7.1
		200 A at 18 VDC, 100% Duty Cycle			12.89	11.74	7.42	6.55	5.49	5.4	4.3
	200 A at 18 VDC, 50% Duty Cycle		22.12		19.71	12.89	11.06	10.61	6.1	4.4	
	150 A at 16 VDC, 100% Duty Cycle	5 — 200 A	14.84		13.38	8.73	8.63	7.72	5.1	2.9	

### 6.14.3 Welding Accessories

- 12 ft welding leads with clamp and stinger (stored in the platform)
- Fire extinguisher

### 6.14.4 Safety Precautions

## WARNING

Do not overload platform.

## WARNING

De-rate the platform by 64 lb (29 kg) when welder is in the platform.


- Check for cracked welds and damage to welder supports.
- Check for proper and secure installation of welder and bracket.
- Ensure no personnel are beneath platform.
- Do not exit platform over rails or stand on rails.
- Use this option only on approved models.
- Keep lanyard attached at all times.
- Ensure correct polarity of leads.
- Wear proper welding apparel.
- Use correct rod size and current settings.
- Do not use electrical cords without ground.
- Do not use electrical tools in water.
- Do not weld to the platform.
- Do not ground through the platform.
- Do not use a high frequency arc starter with TIG welder.

### 6.14.5 Preparation and Inspection

- Connect ground clamp to metal being welded.
- Ensure there is a good ground connection and observe proper polarity.

## 6.15 SOFT TOUCH

A padding kit is mounted to the platform rails and to a frame suspended below the platform. Limit switches deactivate platform functions when the padded framework contacts an adjacent structure. A button on the platform console allows override of the system.

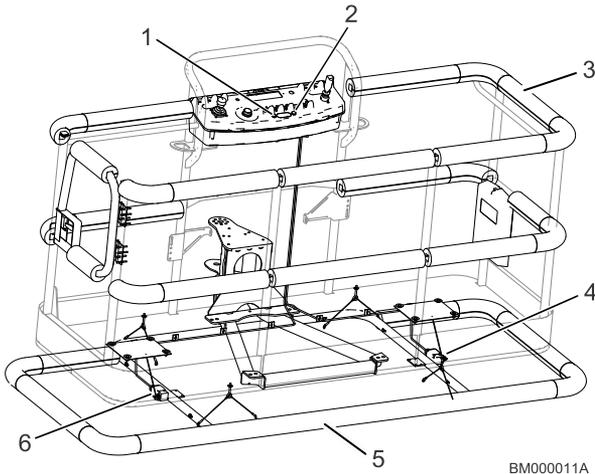

**Figure 42. Soft Touch System**

1. Override Indicator Light
2. Override Button
3. Rail Bumper
4. Limit Switch
5. Suspended Frame and Rail Bumper
6. Limit Switch

# SECTION 7

## General Specifications and Operator Maintenance


### 7.1 GENERAL

This section of the manual provides additional necessary information to the operator for proper operation and maintenance of this machine.

The maintenance portion of this section is intended as information to assist the machine operator to perform daily maintenance tasks only and does not replace the more thorough Preventive Maintenance and Inspection Schedule included in the Service & Maintenance Manual.

### 7.2 SERIAL NUMBER LOCATION

A serial number plate is affixed to the left side of the frame. If the serial number plate is damaged or missing, the machine serial number is stamped on the left side of the frame.

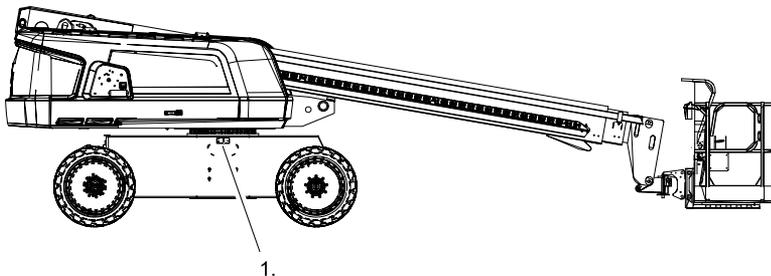

1. Serial Number Plate

### 7.3 OPERATING SPECIFICATIONS

**Table 11. Operating Specifications**

Maximum Work Load (Capacity) - ANSI, CSA, GB, MOL70, EAC	
Unrestricted	660 lb (299 kg)
Restricted	750 lb (340 kg)
Restricted	1000 lb (454 kg)
Maximum Work Load (Capacity) - CE/UKCA & AUS	

**Table 11. Operating Specifications (continued)**

Unrestricted	660 lb (300 kg)
Restricted	750 lb (340 kg)
Restricted	1000 lb (454 kg)
Maximum Operating Slope	5°
Maximum Travel Grade, Stowed Position	
Gradeability — 4WD	45%
Side Slope	5°
Maximum Manual Force	90 lbs (400 N)
Maximum Wind Speed	28 mph (12.5 m/s)
Maximum Tire Load:	
600S HC3	12,760 lbs (5788kg)
660SJ HC3	15,522 lbs (7041kg)
Ground Bearing Pressure - 600S HC3	
Foam-Filled	83.1 psi (5.84 kg/cm2)
Ground Bearing Pressure	
Foam-Filled	91.1 psi (6.41 kg/cm2)
Maximum Drive Speed	3.8 MPH (6.3 Km/hr.)
Electrical System	12VDC
Gross Machine Weight (Approximate)	
600S HC3	22,900 lb (10387 kg)
660SJ HC3	29,281 lb (13282 kg)
* Maximum Work Load (Capacity) can be affected by the addition of the Soft Touch option. If equipped with Soft Touch, refer to Section 6 and the decal on your machine for these values.	

**7.3.1 Dimensional Data**

**Table 12. Dimensional Data**

Machine Height (Stowed)	
600S HC3	8 ft 2.4 in (2.5 m)
660SJ HC3	8 ft 5.4 in (2.58 m)
Machine Length (Stowed)	
600S HC3	28 ft 7 in (8.71 m)
660SJ HC3	35 ft. 4.7 in (10.79 m)
Machine Width	8 ft 2 in (2.49 m)

**Table 12. Dimensional Data (continued)**

Turning Radius	
Outside — 2WS	18 ft 3.9 in (5.59 m)
Inside — 2WS	9 ft 6.3 in (2.9 m)
Wheelbase	8 ft 2.4 in (2.5 m)
Total Axle Oscillation	7.3 in (0.19 m)
Ground Clearance	12 in (0.3 m)
Platform Height	
600S HC3	59 ft 5.7 in (18.13 m)
660SJ HC3	66 ft (20.1 m)
Horizontal Reach	
600S HC3	50 ft 1.6 in (15.28 m)
660SJ HC3	57 ft 1.4 in (17.41 m)
Tail Swing	4 ft 0 in (1.22 m)

### 7.3.2 Capacities

**Table 13. Capacities**

Fuel Tank	
Diesel	31 Gallons (117 L)
Diesel (Steel Tank)	52 (200 L)
Gasoline	31 Gallons (117 L)
Hydraulic Oil Tank	34 Gallons (129 L)
Hydraulic System (Including Tank)	40 Gallons (151.4 L)
Torque Hub, Drive	24 ounces (0.7 L)
Engine Crankcase	
Deutz D2011 L04	10 Quarts (9.4 L)
Deutz 2.9 L	9.6 Quarts (9.1 L)
Ford MSG425-DF	7 Quarts (6.6 L)
Coolant System	
Deutz 2.9 L	13.2 Quarts (12.5 L)
Ford MSG425-DF	2 Gal. (7.5 L)

**7.3.3 Engine Data**

**Table 14. Deutz D2011L04 Specifications**

Fuel	Diesel
Oil Capacity	
Crankcase	5 Quarts (4.5 L)
Cooler	11 Quarts (10.5 L) with Filter
Total capacity	16 Quarts (15 L)
Idle RPM	1000
Low RPM	1800
High RPM	2500
Alternator	60 Amp, belt drive
Battery	950 Cold Cranking Amps, 205 Minutes Reserve Capacity, 12 VDC
Fuel Consumption	0.79 gph (2.99 Lph)
Horsepower	49

**Table 15. Deutz D2.9L4**

Type	Liquid Cooled
Number of Cylinders	4
Bore	3.6 in (92 mm)
Stroke	4.3 in (110 mm)
Total Displacement	178 cu. in (2925 cm <sup>3</sup> )
Firing Order	1-3-4-2
Output	49 hp (36.5 kW)
Oil Capacity	2.4 gal (9.0 L)
Coolant Capacity (System)	3.2 gal (12.1 L)
Average Fuel Consumption	0.85 gph (3.22 Lph)
Min. Low Engine RPM	1200

**Table 15. Deutz D2.9L4 (continued)**

Mid Engine RPM	1800
Max. High Engine RPM	2600

**Table 16. Deutz 2.2L Stage V**

Type	Liquid Cooled
Number of Cylinders	3
Bore	3.6 in (92 mm)
Stroke	4.3 in (110 mm)
Total Displacement	133.8 cu. in (2194 cm <sup>3</sup> )
Firing Order	1-2-3
Output	49 hp (36.5 kW)
Oil Capacity	2.11 gal (8.0 L)
Coolant Capacity (System)	2.31 gal (8.75 L)
Average Fuel Consumption	0.69 gph (2.63Lph)
Min. Low Engine RPM	1200
Mid Engine RPM	1800
Max. High Engine RPM	2600

**Table 17. Deutz TD2.9L4 (Option)**

Fuel	Ultra Low Sulfur Diesel (15 ppm)
Output	67 hp (50kW)
Torque	173 ft. lbs. (234Nm) @ 1800 rpm
Oil Capacity (Crankcase)	2.4 gal (9.0 L)
Cooling System	3.3 Gallon (12.5L)
Low RPM	1200 ± 50rpm
High RPM	2600 ± 50rpm

**Table 17. Deutz TD2.9L4 (Option) (continued)**

Alternator	95 Amp
Average Fuel Consumption	0.85 gph (3.22 Lph)

**Table 18. Ford MSG425-DF**

Type	Liquid Cooled
Number of Cylinders	4
Displacement	2.5L
Max Rated Output (Gas)	84 hp (62 kW)
Max Rated Output (LP)	80 hp (59 kW)
Oil Capacity (engine only)	7 qt. (6.6 L)
Coolant Capacity (engine only)	0.63 gal (2.4 L)
Coolant Capacity (system)	2 gal (7.5 L)
Min. Low Engine RPM	1000
Max. High Engine RPM	3200
Fuel Consumption	
Gas	1.05 gph (3.98 Lph)
LP	1.37 gph (5.19 Lph)
<b>Acceptable Fuel Grades</b>	
Unleaded 87 or 89 Octane Gasoline	
Ethanol/Gasoline Mix: 10%	
HD-5 LPG	

### **7.3.4 Tires**

**Table 19. Tire Specifications**

<b>Size</b>	<b>355/55D625</b>	<b>41/18LLx22.5</b>
Load Range	G	G
Ply Rating	14	14
Tire Pressure	Foam-Filled	Foam-Filled

### 7.3.5 Critical Stability Weights

# ⚠ WARNING

Do not replace items critical to stability with items of different weight or specification (for example: batteries, filled tires, counterweight, engine & platform) do not modify unit in any way to affect stability.

**Table 20. Critical Stability Weights**

Components		LB.	KG.
Tire and Wheel	355/55D625(FF)	440	200
	41/18LLx22.5 (FF)	700	318
Engine (complete tray)	Deutz TD 2.9L	1433	650
	D2011 L04	983	445
Counterweight	Chassis	453	205.5
	Turntable (600S)	4922	2233
	Turntable (660SJ)	5844	2653
Platform Only (No Control Box or Footswitch)	4 ft. Swing Gate	132	60
	5 ft. Swing Gate	145.5	66
	6 ft. Swing Gate)	159	72
	8 ft. (2.44 M) Swing Gate	230	84
	6 ft. Shipyard Option	247	112

## 7.4 HYDRAULIC OIL SPECIFICATIONS

**Table 21. Hydraulic Oil SAE Viscosity Grade Operating Temperature Ranges**

Hydraulic System Operating Temperature Range	SAE Viscosity Grade
+0° to + 180° F (-18° to +83° C)	10W
+0° to + 210° F (-18° to + 99° C)	10W-20, 10W-30
+50° to + 210° F (+10° to + 99° C)	20W-20

**Note:** Hydraulic oils require anti-wear qualities at least to API Service Classification GL-3 and sufficient chemical stability for mobile hydraulic system service. JLG Industries recommends standard UTTO.

**Note:** Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. If use of hydraulic oil other than standard UTTO is desired, contact JLG Industries for proper recommendations.

## General Specifications and Operator Maintenance

---

- Note:** Machine operation using non-JLG approved hydraulic fluids or operation outside of the temperature boundaries outlined in the hydraulic fluid operation charts may result in premature wear or damage to components of the hydraulic system.
- Note:** Machines may be equipped with standard UTTO biodegradable and non-toxic hydraulic oil. This is a fully synthetic hydraulic oil that possesses the same anti-wear and rust protection characteristics as mineral oils, but will not adversely affect the ground water or the environment when spilled or leaked in small amounts.
- Note:** When temperatures remain consistently below 20° F (-7° C), JLG Industries recommends the use of a premium “cold weather” hydraulic fluid (Viscosity Gr. 32).

**Table 22. Hydraulic Oil Properties and Classifications**

Fluid	Properties		Base				Classifications		
	Viscosity at 40° C *	Viscosity Index	Mineral Oils	Vegetable Oils	Synthetic	Synthetic Polyol Esters	Readily Biodegradable**	Virtually Non-toxic †	Fire Resistant ‡
<b>Shell Spirax S4 TXM — Recommended</b>	<b>67</b>	<b>146</b>	<b>X</b>						
Mobilfluid 424 — <i>Optional</i>	60	134	X						
<b>Shell Tellus S2 VX32 — Recommended</b>	<b>32</b>	<b>142</b>	<b>X</b>						
Mobil DTE 10 Excel 32 — <i>Optional</i>	32	164	X						
<b>Shell Tellus S4 VX32 — Recommended</b>	<b>32</b>	<b>296</b>	<b>X</b>						
Univis HVI 26 — <i>Optional</i>	26	376	X						
<b>Shell Naturelle HF-E32 — Recommended</b>	<b>31</b>	<b>192</b>		<b>X</b>			<b>X</b>	<b>X</b>	
Mobil EAL EnviroSyn H32 — <i>Optional</i>	34	146		X			X	X	
<b>Shell Naturelle HF-E46 — Recommended</b>	<b>46</b>	<b>193</b>			<b>X</b>		<b>X</b>	<b>X</b>	
Mobil EAL EnviroSyn H46 — <i>Optional</i>	49	145			X		X	X	
Quintolubric 888-46	48	190				X	X	X	X
Hydrolube HP-5046D	46	192				X	X	X	X

\* cSt, Typical

\*\* Readily biodegradable classification indicates one of the following:

CO2 Conversion > 60% per EPA 560/6-82-003

CO2 Conversion > 80% per CEC-L-33-A-93

† Virtually Non-toxic classification indicates a LC50 > 5000 ppm per OECD 203

‡ Fire Resistant classification indicates Factory Mutual Research Corp. (FMRC) Approval

## 7.5 ENGINE OIL OPERATING TEMPERATURE SPECIFICATIONS

**Note:** Machine operation using non-JLG approved engine oil or operation outside of the temperature boundaries outlined in the engine oil operation charts may result in premature wear or damage to components of the engine.

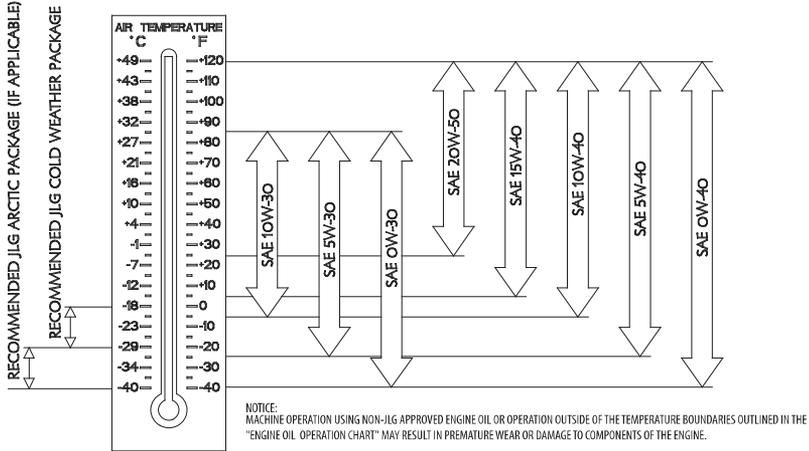


Figure 43. Engine Oil Operating Temperature Specifications - Deutz 2.9L

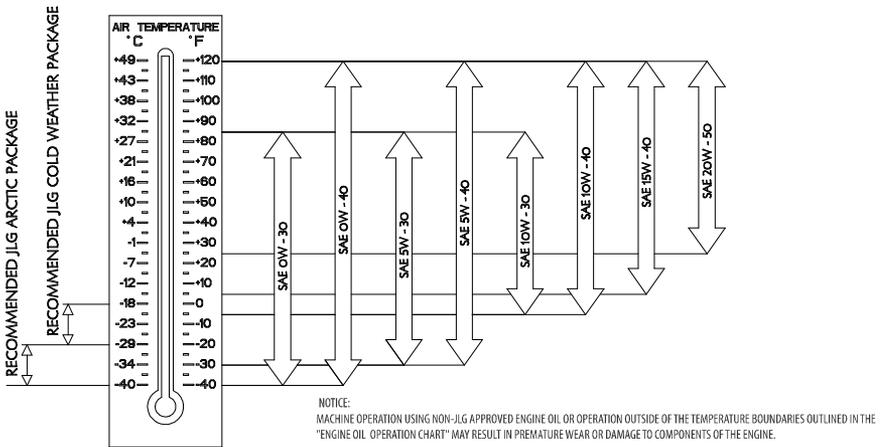


Figure 44. Engine Oil Operating Temperature Specifications - Deutz 2011


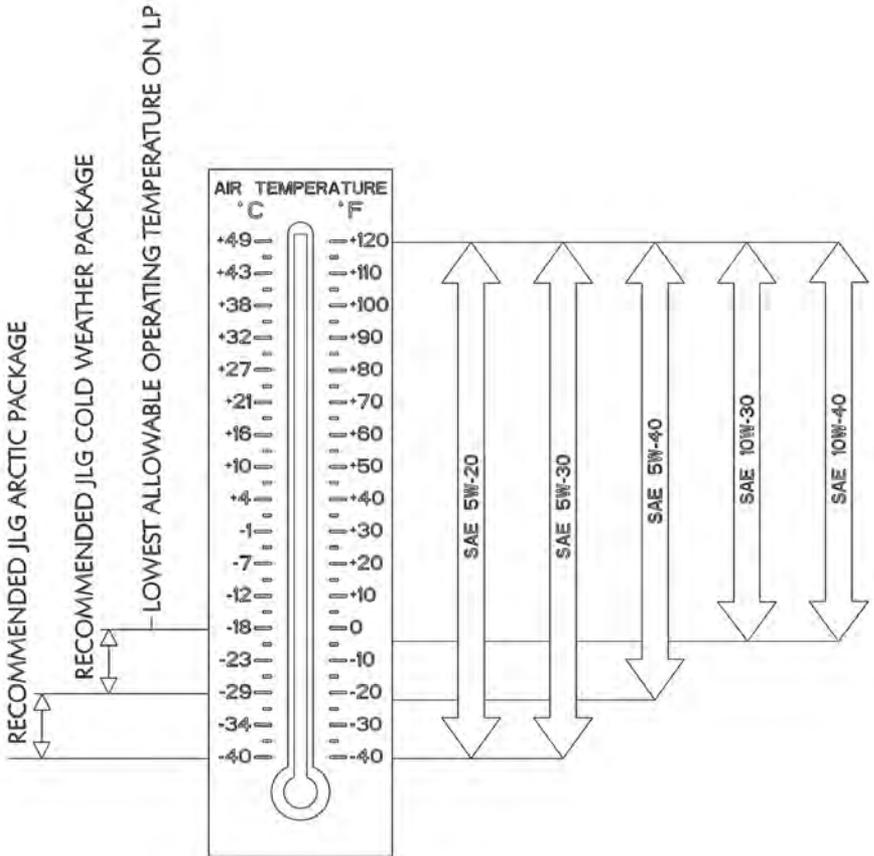



Figure 45. Engine Oil Operating Temperature Specifications - Ford MSG425

## 7.6 OPERATOR MAINTENANCE AND LUBRICATION DIAGRAMS


### 7.6.1 Deutz 2011 Engine

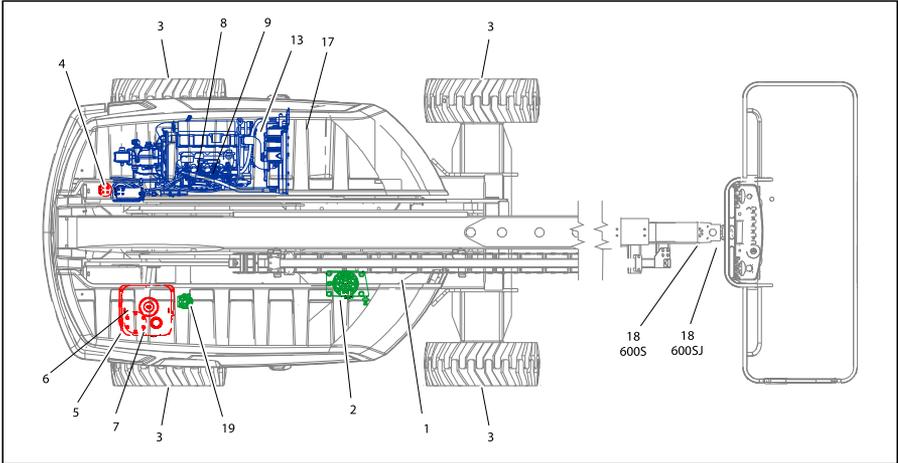

### 7.6.2 Deutz TD 2.9L, 2.2L Stage V

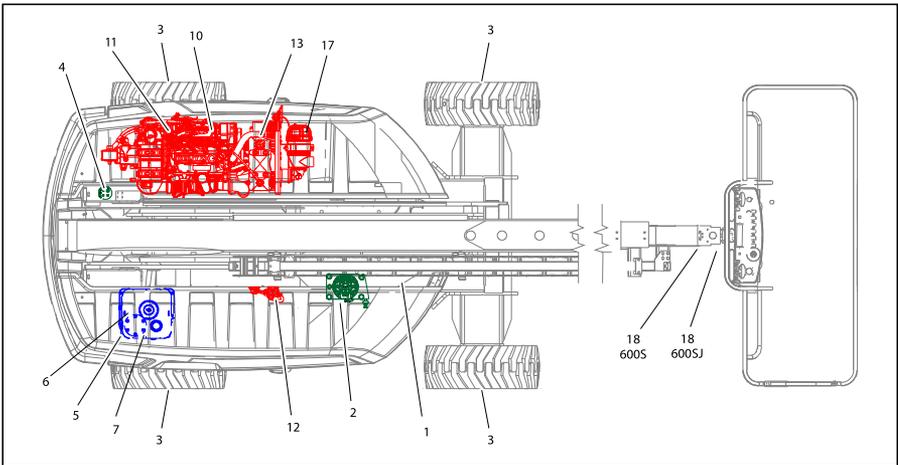

### 7.6.3 Ford DF 2.5L, MSG 425

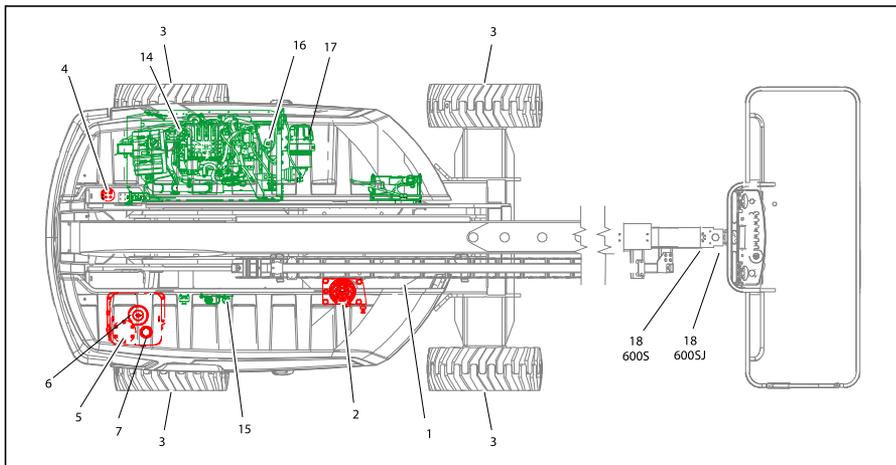

## 7.7 OPERATOR MAINTENANCE

**Note:** The following numbers correspond to those in *Figure — Operator Maintenance & Lubrication Diagrams - Deutz 2011 Engine*.

**Table 23. Lubrication Specifications.**

KEY	SPECIFICATIONS
<b>BG*</b>	Bearing Grease (JLG Part No. 3020029) Mobilith SHC 460.
<b>HO</b>	Hydraulic Oil. API service classification GL-4, e.g. standard UTTO.
<b>EPGL</b>	Extreme Pressure Gear Lube (oil) meeting API Service Classification GL-5 or Mil-Spec Mil-L-2105.
<b>MPG</b>	Multipurpose Grease having a minimum dripping point of 350° F (177° C). Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK 40 pounds minimum.)
<b>EO</b>	Engine (crankcase). Gas (5W30)- API SN, -Arctic ACEA AI/BI, A5/B5 - API SM, SL, SJ, EC, CF, CD - ILSAC GF-4. Diesel (15W40, 5W30 Arctic) - API CJ-4.

\*MPG may be substituted for these lubricants, if necessary, but service intervals will be reduced.

# NOTICE

Lubrication intervals are based on machine operation under normal conditions. For machines used in multi-shift operations and/or exposed to hostile environments or conditions, lubrication frequencies must be increased accordingly.

## General Specifications and Operator Maintenance

---

### 1. Swing Bearing


Lube Point(s) - 1 Grease Fittings

Capacity - A/R

Lube - MPG

Interval - Every 3 months or 150 hrs of operation

Comments - Remote Access. Apply grease and rotate in 90 degree intervals until bearing is completely lubricated.

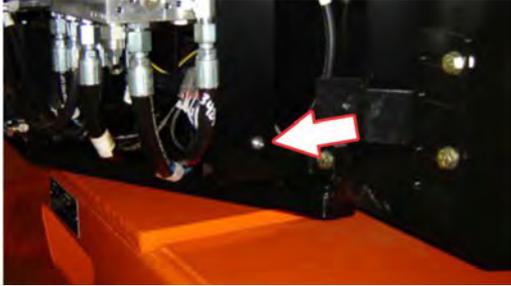


### 2. Swing Drive Hub

Lube Point(s) - Level/Fill Plug

Capacity - 32 oz. (0.95 L)

Lube - 80w90 Gear Oil

Interval - Check level every 3 months or 150 hrs of operation; change every 2 years or 1200 hours of operation

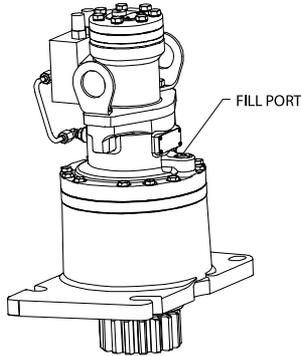

### 3. Wheel Drive Hub

Lube Point(s) - Level/Fill Plug

Capacity - 24 oz. (0.7 L)

Lube - 80w90 Gear Oil

Interval - Check level every 3 months or 150 hrs of operation; change every 2 years or 1200 hours of operation



BM000125A


### 4. Hydraulic Charge Filter

Interval - Change after first 50 hrs. and every 6 months or 300 hrs. thereafter or as indicated by Condition Indicator.



### 5. Hydraulic Return Filter

Interval - Change after first 50 hours and every 6 months or 300 hours thereafter or whenever Charge Filter is replaced

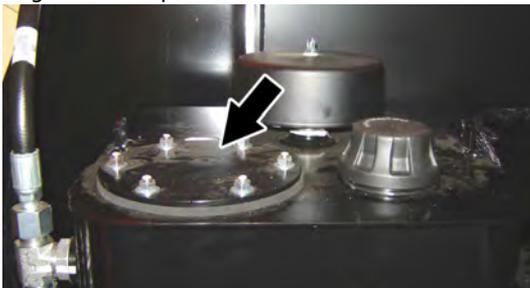


## General Specifications and Operator Maintenance

---

### 6. Hydraulic Tank Breather

Interval - Change after first 50 hrs. and every 6 months or 300 hrs. thereafter.

Comments - Remove wing nut and cover to replace. Under certain conditions, it may be necessary to replace on a more frequent basis.

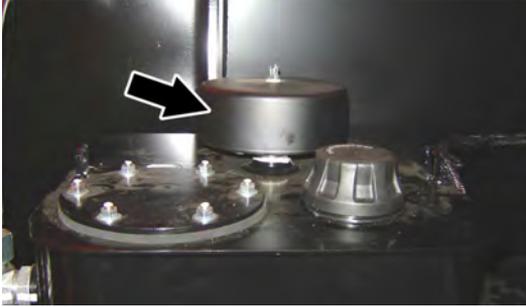

### 7. Hydraulic Tank


Lube Point(s) - Fill Cap

Capacity - 34 gal tank (129 L) 40.0 gal system (151 L)

Lube - HO

Interval - Check Level daily; Change every 2 years or 1200 hours of operation

Comments - On new machines, those recently overhauled, or after changing hydraulic oil, operate all systems a minimum of two complete cycles and recheck oil level in reservoir.

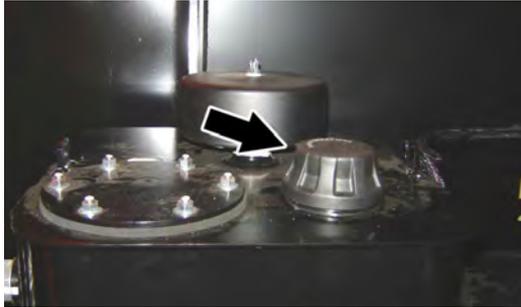

8. Oil Change with Filter - Deutz 2011  
Lube Point(s) - Fill Cap/Spin-on Element  
Capacity - 10 Quarts (9.4 L) Crankcase; 5 Quarts (4.8L) Cooler  
Lube - EO  
Interval - Every Year or 1200 hours of operation  
Comments - Check level daily/Change in accordance with engine manual.



BM000139A

9. Fuel Filter - Deutz 2011  
Lube Point(s) - Replaceable Element  
Interval - Every Year or 600 hours of operation




BM000143A

10. Oil Change with Filter - Deutz 2.9, 2.2L Stage V  
Lube Point(s) - Fill Cap/Spin-on Element  
Capacity - 9.5 Quarts (9.0 L) Crankcase  
Lube - EO  
Interval - Every Year or 1200 hours of operation (whichever comes first).  
Comments - Check level daily/Change in accordance with engine manual.  
Oil Change with Filter - Deutz TD2.9, 2.2L Stage V  
Lube Point(s) - Fill Cap/Spin-on Element  
Capacity - 9.5 Quarts (9.0 L) Crankcase  
Lube - EO  
Interval - Every Year or 600 hours of operation (whichever comes first).  
Comments - Check level daily/Change in accordance with engine manual.



11. Fuel Filter - Deutz 2.9, 2.2L Stage V  
Lube Point(s) - Replaceable Element  
Interval - 600 hours of operation

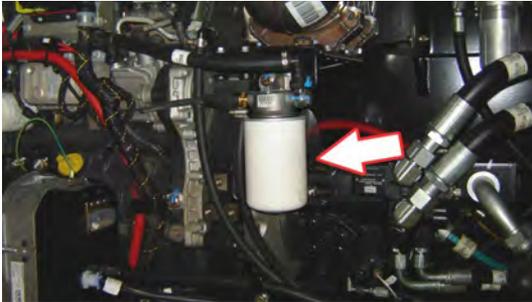

12. Fuel Pre-Filter - Deutz D2.9/TD2.9, 2.2L Stage V  
Lube Point(s) - Replaceable Element  
Interval - Drain water daily; Every year or 600 hours of operation



13. Engine Coolant - Deutz D2.9  
Lube Point(s) - Fill Cap  
Capacity (Deutz 2.9L)- 13.2 quart (12.5 L)  
Lube - Anti-Freeze  
Interval - Check level daily; change every 1000 hours or two years, whichever comes first.
14. Oil Change with Filter - Ford MSG425-DF  
Lube Point(s) - Fill Cap/Spin-on Element  
Capacity - 7 Quarts (6.6 L)  
Lube - EO  
Interval - Change in accordance with engine manual  
Comments - Check level daily
15. Fuel Filter - Ford MSG425-DF  
Lube Point(s) - Replaceable Element  
Interval - Every Year or 600 hours of operation
16. Engine Coolant - Ford MSG425-DF  
Lube Point(s) - Fill Cap  
Capacity (Deutz 2.9L)- 2 gal. quart (7.5 L)  
Lube - Anti-Freeze  
Interval - Check level daily; change every 1000 hours or two years, whichever comes first.

### 17. Air Filter Locations

Lube Point(s) - Replaceable Element

Interval - Every 6 months or 300 hours of operation or as indicated by the condition indicator.



**Figure 46. Deutz D2.9L/TD2.9L, 2.2L Stage V**



**Figure 47. Deutz 2011**

### 18. Platform Filter

Lube Point - Replaceable Element

Interval - Change after first 50 hours and then every year or 600 hours of operation, whichever comes first




**Figure 48. Platform Filter — S Models**



**Figure 49. Platform Filter — SJ Models**

19. Optional Fuel Filter - Deutz 2011 - China Market  
Lube Point(s) - Replaceable Element  
Interval - Drain water daily; Every year or 600 hours of operation

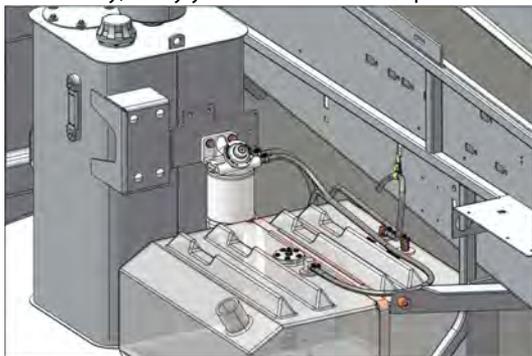

## 7.8 TIRES AND WHEELS

---

### 7.8.1 Tire Damage

For polyurethane foam filled tires, JLG Industries, Inc. recommends that when any of the following are discovered, measures must be taken to remove the JLG product from service immediately and arrangements must be made for replacement of the tire or tire assembly.

- a smooth, even cut through the cord plies which exceeds 3 inches (7.5 cm) in total length
- any tears or rips (ragged edges) in the cord plies which exceed 1 inch (2.5 cm) in any direction
- any punctures which exceed 1 inch in diameter
- any damage to the bead area cords of the tire

If a tire is damaged but is within the above noted criteria, the tire must be inspected on a daily basis to insure the damage has not propagated beyond the allowable criteria.

### 7.8.2 Tire Replacement

JLG recommends a replacement tire be the same size, ply and brand as originally installed on the machine. Please refer to the JLG Parts Manual for the part number of the approved tires for a particular machine model. If not using a JLG approved replacement tire, we recommend that replacement tires have the following characteristics:

- Equal or greater ply/load rating and size of original
- Tire tread contact width equal or greater than original
- Wheel diameter, width, and offset dimensions equal to the original

- Approved for the application by the tire manufacturer (including inflation pressure and maximum tire load)

Unless specifically approved by JLG Industries Inc. do not replace a foam filled or ballast filled tire assembly with a pneumatic tire. When selecting and installing a replacement tire, ensure that all tires are inflated to the pressure recommended by JLG. Due to size variations between tire brands, both tires on the same axle should be the same.

### 7.8.3 Wheel Replacement

The rims installed on each product model have been designed for stability requirements which consist of track width and load capacity. Size changes such as rim width, center piece location, larger or smaller diameter, etc., without written factory recommendations, may result in an unsafe condition regarding stability.

### 7.8.4 Wheel Installation


It is extremely important to apply and maintain proper wheel mounting torque.

## **⚠ WARNING**

Wheel nuts must be installed and maintained at the proper torque to prevent loose wheels, broken studs, and possible dangerous separation of wheel from the axle. Be sure to use only the nuts matched to the cone angle of the wheel.

Tighten the lug nuts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. If you do not have a torque wrench, tighten the fasteners with a lug wrench, then immediately have a service garage or dealer tighten the lug nuts to the proper torque. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels. The proper procedure for attaching wheels is as follows:

1. Start all nuts by hand to prevent cross threading. **DO NOT** use a lubricant on threads or nuts.
2. Tighten nuts in the following sequence:

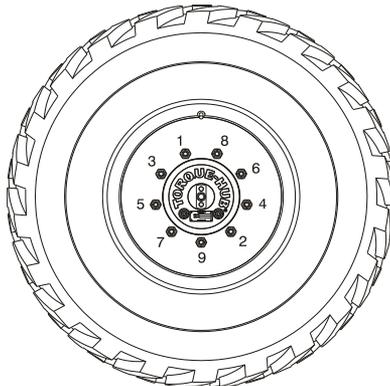

3. The tightening of the nuts should be done in stages. Following the recommended sequence, tighten nuts per wheel torque chart.
4. Wheel nuts should be torqued after first 50 hours of operation and after each wheel removal. Check torque every 3 months or 150 hours of operation.

**Table 24. Wheel Torque Chart**

TORQUE SEQUENCE		
1st Stage	2nd Stage	3rd Stage
40 ft. lbs. (55 Nm)	95 ft. lbs. (130 Nm)	170 ft. lbs. (230 Nm)

## 7.9 OSCILLATING AXLE LOCKOUT TEST (IF EQUIPPED)

# NOTICE

Lockout system test must be performed quarterly, any time a system component is replaced, or when improper system operation is suspected.

**Note:** Ensure boom is fully retracted, lowered, and centered between drive wheels prior to beginning lockout cylinder test.

1. Place a 6 in (15.2 cm) high block with ascension ramp in front of left front wheel.
2. From platform control station, start engine
3. Place the Drive control lever to the forward position and carefully drive machine up ascension ramp until left front wheel is on top of block.
4. Carefully activate Swing control lever and position boom over right side of machine.
5. With boom over right side of machine, place Drive control lever to Reverse and drive machine off of block and ramp.
6. Have an assistant check to see that left front wheel remains locked in position off of ground.
7. Carefully activate Swing control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary to activate Drive to release cylinders.
8. Place the 6 in (15.2 cm) high block with ascension ramp in front of right front wheel.
9. Place Drive control lever to Forward and carefully drive machine up ascension ramp until right front wheel is on top of block.

10. With boom over left side of machine, place Drive control lever to Reverse and drive machine off of block and ramp.
11. Have an assistant check to see that right front wheel remains locked in position off of ground.
12. Carefully activate Swing control lever and return boom to stowed position (centered between drive wheels). When boom reaches center, stowed position, lockout cylinders should release and allow wheel to rest on ground, it may be necessary to activate Drive to release cylinders.
13. If lockout cylinders do not function properly, have qualified personnel correct the malfunction prior to any further operation.

### 7.10 PROPANE FUEL SYSTEM PRESSURE RELIEF

---

#### CAUTION

The propane fuel system operates at pressures up to 312 psi (21.5 bar). To minimize the risk of fire and personal injury, relieve the propane fuel system pressure (where applicable) before servicing the propane fuel system components.

To relieve propane fuel system pressure:

1. Close the manual shut-off valve on the propane fuel tank.
2. Start and run the vehicle until the engine stalls.
3. Turn the ignition power Off.

#### CAUTION

Residual vapor pressure will be present in the fuel system. Ensure the work area is well ventilated before disconnecting any fuel line.

## **7.11 SUPPLEMENTAL INFORMATION ONLY APPLICABLE TO CE/UKCA MACHINES**

---

The following information is provided in accordance with the requirements of the European Machinery Directive 2006/42/EC or Supply of Machinery (Safety) Regulations 2008 No. 1597.

The A-Weighted emission sound pressure level at the work platform is less than 70 dB (A).

The guaranteed Sound Power Level (LWA) per European Directive 2000/14/EC (Noise Emission in the Environment by Equipment for Use Outdoors) or Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001 No. 1701 based on test methods in accordance with Annex III, Part B, Method 1 and 0 of the directive, is 105 dB (A).

The vibration total value to which the hand-arm system is subjected does not exceed 2,5 m/s<sup>2</sup>. The highest root mean square value of weighted acceleration to which the whole body is subjected does not exceed 0,5 m/s<sup>2</sup>.

## 7.12 EC DECLARATION OF CONFORMITY

---

**Manufacturer**

JLG Industries, Inc.

**Address**

1 JLG Drive  
McConnellsburg, PA 17233 USA

**Technical File**

JLG EMEA B.V.  
Polaris avenue 63,  
2132 JH Hoofddorp  
The Netherlands

**Contact/Position**

Senior Manager — Product Safety & Reliability

**Date/Place**

Hoofddorp, Netherlands

**Machine Type**

Mobile Elevating Work Platform

**Model Type**

600S, 660SJ, 600S HC3, 660SJ HC3, 660SJC

**EC-Number**

2842

**Certificate Number**

KCEC4449

**Notified Body**

Kuiper Certificering b.v.

**Address**

Van Slingelandtstraat 75, 7331 NM  
Apeldoorn, The Netherlands

**Reference Standards**

- EN 55011:2009/A1:2010
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280:2013+ A1:2015
- EN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2006/42/EC — Machinery Directive
- 2014/30/EU — EMC Directive
- 2014/53/EU — RED Directive (If fitted with optional equipment)
- 2000/14/EC — Outdoor Noise Directive

**Note:** This declaration conforms with the requirements of annex II-A of the council directive 2006/42/EC. Any modification of the above described machine violates the validity of this declaration.

## 7.13 UKCA DECLARATION OF CONFORMITY

**Manufacturer**

JLG Industries, Inc.

**Address**

1 JLG Drive  
McConnellsburg, PA 17233 USA

**Technical File**

JLG Industries UK Ltd  
Braunstone Frith Industrial Estate  
Unit 3 Sunningdale Road  
Leicester, LE3 1UX  
United Kingdom

**Contact/Position**

Director of Engineering — Europe

**Date/Place**

Leicester, United Kingdom

**Machine Type**

Mobile Elevating Work Platform

**Model Type**

600S, 660SJ, 600S HC3, 660SJ HC3, 660SJC

**AB-Number**

0463

**Certificate Number**

AVUK4449

**Approved Body**

Amtri Veritas

**Address**

Pierce Street, Macclesfield, SK11 6ER, England

**Reference Standards**

- EN 55011:2009/A1:2010
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280:2013+ A1:2015
- EN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2008 No. 1597 - Supply of Machinery (Safety) Regulations 2008
- 2016 No. 1091 - Electromagnetic Compatibility Regulations 20165
- 2017 No. 1206 - Radio Equipment Regulations 2017 (if fitted with optional equipment)
- 2001 No. 1701 - Noise Emission in the Environment by Equipment for use Outdoors Regulations 2001

**Note:** This declaration conforms with the requirements of annex II-A of the Regulations 2008 No. 1597. Any modification of the above described machine violates the validity of this declaration.

**This Page is intentionally left blank**









**Corporate Office**  
**JLG Industries, Inc.**  
**1 JLG Drive**  
**McConnellsburg, PA 17233-9533 USA**  
**☎ (717) 485-5161 (Corporate)**  
**☎ (877) 554-5438 (Customer Support)**  
**☎ (717) 485-6417**

**Visit our website for JLG Worldwide Locations.**  
**[www.jlg.com](http://www.jlg.com)**



**OSHKOSH™**