



If machine won't drive after stowing machine away, or cuts out while driving, check that the basket jib is hard up against this sensor. This function will still work while the legs are up.



This lever switches between base & basket controls. LEFT=base, RIGHT=basket controls





These controls need to be brought forward before you can operate the machine from the basket.



When this button flashes, you have gone out of your safety envelope. Press and hold button, while drawing machine back into its safety parameters. Set machine up closer to the intended job.





The left switch changes the machine between electric and motor power ( left for motor- right for electric) the right switch starts the electric motor. **MACHINE WONT WORK ON 240v UNLESS LEAD IS PLUGGED IN AT BASE , AND ELECTRIC MOTOR HAS BEEN STARTED.**