



If loss of drive occurs and machine is fully stowed. Check from both sides of machine that this section of the boom is fully located in its rest. It has a tendency to pop out or look fully rested when it's not. Try shaking the basket from side to side as it may pop down. If not, bring legs back down and adjust this function until it's fully stowed in the rest.



For machine to work in electric mode, this isolator needs to be turned on, and the electric switch turned over in the basket.







When levelling machine, you can either do it manually or via pressing the green start button and display toggle switch to automatically lower/level machine. If you want to raise the legs you can press green start button with glow plug toggle. If you want to stop function at any time press red estop.





The legs have three different orientations they can be placed in. The one pictured lets the machine reach its full height and reach potential, but gives it's a larger leg spread. The next hole down allows the machine to reach a limited height and reach envelope while giving it a slightly smaller leg spread for tighter areas. The last hole is for stowing the machine. \*Note\* all four legs need to be in the same configuration.

